


VOLTMETER / AMMETER

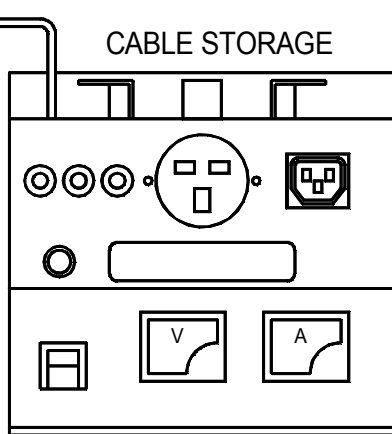

INPUT CABLE

CABLE STORAGE

4mm SOCKETS

FUSE

ON/OFF SWITCH

ADJUSTING KNOB

OUTPUT SOCKET / IEC SOCKET

PORTABLE STYLE VARIABLE TRANSFORMERS SAFETY INSTRUCTIONS

1. Read all of these instructions before you use the transformer.
2. This transformer is not designed to provide mains isolation.
3. Variable transformers operate at mains voltage.
DO NOT EXCEED THE MAXIMUM VOLTAGE AND CURRENT RATING.
4. Maintenance should only be carried out by suitably qualified personnel.
5. Variable transformers must not be tested as Class 2 appliances on portable appliances testers, flash test only at 1.5kV.
6. When connected to the electrical supply the terminals, brushes and track face are at mains potential with a potentially lethal voltage.
7. The output must always be applied across the load.
Never connect the transformer in series with the load.
8. The carbon brush should be inspected for damage or wear, faulty or worn brushes will result in damage to the windings.


Type	R S Part Code	Output Amps	W	D	H	Weight Kgs
WCCTV 5	8902878	5	210	200	270	10
WCCTV 10	8902872	10	210	200	270	12
WCCTV 10SC	8902884	10	210	200	270	12

Document ref

RS/SI/CTV

Date

Sept 2015

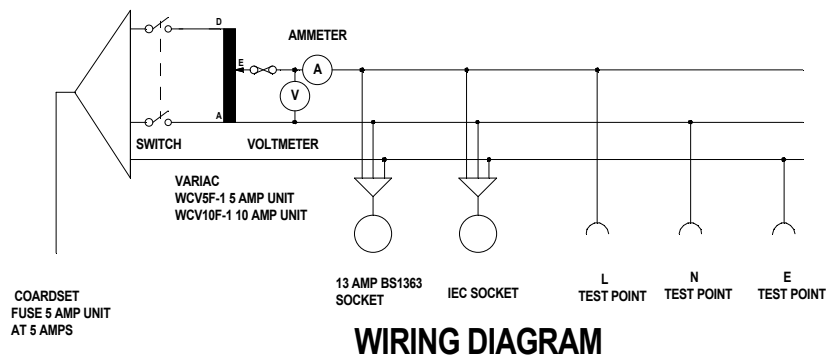

WIRING DIAGRAM