



Einhell

CLASSIC



Cordless Jig Saw

TC-JS 18 Li - Solo

Item No.: 4321209

Ident No.: 11018

Bar Code: 4006825640052

The Einhell jigsaw is flexible and is used for quick and precise cutting. Thanks to cordless freedom it can be used far away from the nearest socket outlet in the home, workshop or garage. As a member of the PXC system family, the rechargeable batteries can be used in all the devices from the series. For exact cutting it is really smooth in operation, and for fast cutting there is a selectable pendulum action. The universal blade holder enables the blade to be changed without tools. For optimum visibility there is a dust blow-off function. The integrated plastic sliding element protects sensitive workpieces. The product is supplied complete with a KWB quality saw blade for wood. This product comes without a battery and charger.

Features & Benefits

 
 
- Member of the Power X-Change family
- Very smooth operation for exact cutting
- Selectable pendulum action for fast cutting
- Universal blade holder without tools
- Includes dust blow-off function for optimum visibility
- Integrated plastic sliding element for sensitive workpieces
- Complete with KWB quality saw blade for wood
- Supplied without battery and charger (available separately)

Technical Data

- Number of strokes	2700 min ⁻¹
- Stroke height	20 mm
- Cutting depth in wood	70 mm
- Cutting depth in plastic	10 mm
- Cutting depth in steel	8 mm
- Max. bevel cuts	45 °
- Toolless saw blade change	yes

Logistic Data

- Product weight	1.62 kg
- Gross weight single packaging	1.87 kg
- Dimensions single packaging	240 x 90 x 215 mm
- Pieces per export carton	5 Pieces
- Gross weight export carton	11 kg
- Container quantity (20"/40"/40"HC)	4910 10000 10000

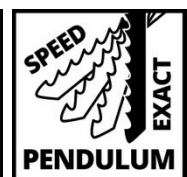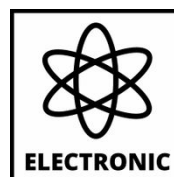

Available as special accessories



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory

Jigsaw-bl. set 4pc W/M Battery
Jig Saw Accessory
Item No.: 49625427
Bar Code: 4009316254271
KWB by Einhell



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times

One Battery for All	 sawing ¹ (m)
1.5 Ah	7
2.0 Ah	9.5
2.5 Ah	11
3.0 Ah	14
4.0 Ah	20
5.2 Ah	30
6.0 Ah	32
8.0 Ah	40

Test setup:

1) wood - chipboard 19 mm