

Thank you for choosing **Schneider Electric** AvatarOn series products. To ensure proper application of our product, please read through the following information before installation and use.

This application guide applies to the following products.

(Notes:suffix_WE/WG/GH/LW/WD/ST_C5/G2 etc. mean the colors and sales areas)

Cat. No.	Description
E8315_15N	15A 250V 1G 3 R P SW Skt w LED
E8315_15	15A 250V 1G 3 R P SW Skt
E8315	13A 250V 1G SW Skt
E8315C	13A 250V 1G SW Skt Cover
E8315N	13A 250V 1G SW Skt w LED
E83426_15	15A 250V 1G 3 R Pin Skt
E83426	13A 250V 1G Skt
E83426C	13A 250V 1G Skt Cover
E83T25	13A 250V 2G SW Skt
E83T25C	13A 250V 2G SW Skt Cover
E83T25N	13A 250V 2G SW Skt w LED
E83T426	13A 250V 2G Skt
E83T426C	13A 250V 2G Skt Cover
E8315TS	16A 250V 1 Gang switch international Socket
E83426TS	16A 250V 1 Gang international Socket

QGH8009314 V00

 
SPECIFICATIONS

Voltage	: 250V~
Mounting centre	: 60.3mm/120.6mm
Current	: 13A/15A/16A
Compliance(13A)	: BS1363-2,SS145,MS589
Compliance(15A)	: BS546,MS1577,SS472
Compliance(16A)	: IEC60884-2-3,IEC60884-1
Compliance(Cover)	: IEC60670,BS5733

IMPORTANT NOTE



1. The products must be installed by qualified electricians.
2. Please check your local wiring regulations before installation.
3. Pls sure use the standard 86/146 size wallbox.2G switch socket embedded depth is designed at 22mm , please try not to tie up all cables and ensure enough space for installation when using surface mount wall box
4. Safekeeping the surround to prevent damage during product installation.
5. Turn off the power supply when you clean the product. Use a piece of soft, slightly-moistened cloth or tissue paper to wipe off the dust and dirt on the surface. Clean with much diluted detergent if necessary but avoid using corrosive chemicals.

WIRING DIAGRAMS



MOUNTING INSTRUCTION

1. Connect the wires to the terminals (recommend to leave 10-12mm bare metal wire) and tighten the terminal screws.
2. Screw the grid plate onto the wall box.
3. Snap the product cover.

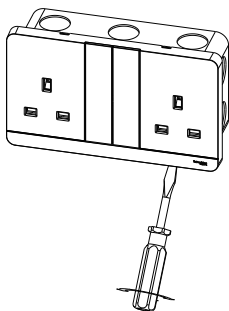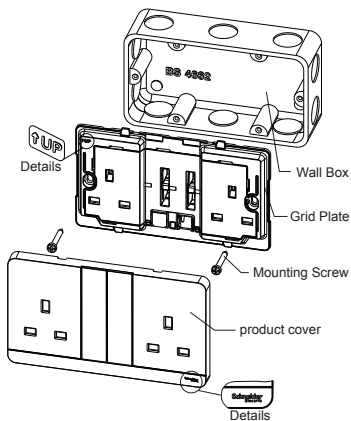

Insert a screwdriver into the clip lock, and twist the screwdriver to remove the cover.