

无线门铃使用说明书

一、产品简介：

本产品由发射器和接收器两部分组成。采用先进的无线接收技术、强大的微电脑控制系统，大容量、高质量的语音处理技术，性能稳定可靠、用途广泛，适合家庭、医院、养老院、别墅、会所、休闲中心等场合。



铃声可选



音量可调

特别注意事项：

1. 接收器只供室内使用，注意防水防潮。
2. 请勿私自打开或修理接收器和发射器。

二、功能特点：

- 现代时尚的设计
- 使用方便
- 音乐铃声可选
- 音量可调

 
三、规格：

接收器工作电压	AC 100-250V 50/60Hz
工作温度	-10°C-50°C

四、包装清单：


- 接收器
- 发射器
- 使用说明书
- 双面胶

五、产品示意图：

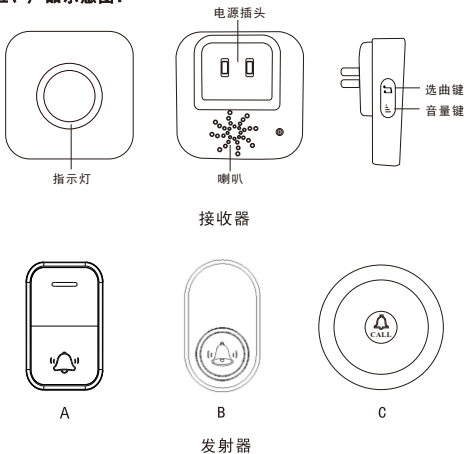

六、出厂配对：

 原则上出厂时配对好，用户插上即可使用，如需要自己配对请按如下操作。
第一步：长按接收器左侧的选曲键【♪】3秒，指示灯亮起表示进入配对状态。此模式只持续8秒，无操作将自动退出。
第二步：快速按下发射器上按钮，接收器指示灯闪烁并发出声音，表示配对成功。

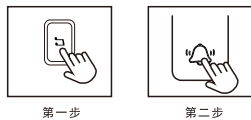


第一步

第二步

七、门铃密码：

同时按住选曲键【♪】和音量键【|||】插上电源，听到“叮咚、叮咚”即可。

 

同时按住两个键

八、音量与铃声调整

按压接收器侧边的音量键【|||】可调节音量大小，长按则返回第一首铃声。
按压接收器侧边的选曲键【♪】可选择不同铃声。当只配一个发射器时可以任意切换铃声，当配两个及以上发射器时会自动锁定它们配对时的铃声。

User Manual for Wireless Doorbell

Features:

- Modern & stylish design
- Easy installation
- Low power consumption
- 4 Levels of volume
- IP55 Waterproof
- 38 Ringtones

Specifications:

Working voltage of plug-in receiver	AC 100-250V 50/60Hz
Working temperature	-10°C-50°C

FCC Warning Statement

 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product diagram:

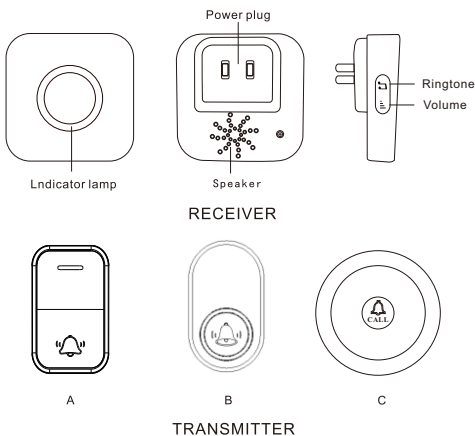


Packing list:

- Receiver
- Transmitter
- User manual
- Double Sided Adhesive Tape

Usage method:

 
Pairing:
Press and hold the music selection button for 3 seconds, the indicator light will light up, and then press the button on the transmitter. The receiver indicator light will flash and a bell will sound, indicating successful pairing.



Music selection

Transmitter

 Pairing clearing:
Simultaneously press and hold the music selection button and volume button to plug in the power, and hearing "Dingdong, Dingdong" indicates successful pairing and clearing.



Press both buttons simultaneously

Volume adjustment:
Press the volume button to adjust the volume, long press to return to the first ringing tone.

Change ringtone:
Press the music selection button to change different ringtones. Note that when only one transmitter is paired, the ringtone can be switched at will. When two or more transmitters are paired, the ringtone when they are paired will be automatically locked, pairing and clearing.

九、安装方法：

安装前，请先测试一下产品，再使用双面胶或螺丝钉固定到信号比较强的位置。注意：请不要直接将发射器固定在金属门上，否则信号会被屏蔽。

十、更换电池：

从发射器的侧边打开外壳（有些需要从背面拧下螺丝），再卸下已耗尽的电池，将新电池插入电池槽，请注意电池的正负极方向。

十一、常见故障说明：

如果接收器不响，可能有以下原因：

1. 发射器中的电池可能被耗尽（发射器指示灯比较暗），须更换电池。
2. 电池正负方向放反了，重新调整即可。
3. 检查发射器和接收器之间是否有干扰源，如电源适配器或其它无线设备。
4. 接收器与发射器之间有厚重的墙壁或者金属门阻断信号。如有，请调整接收器和发射器的位置。
5. 发射器和接收器之间配对丢失了，重新配对即可。

Installation:

Before installation, please test the product first, and then use double-sided adhesive or screws to fix it to a position with strong signal. Attention: Please do not directly fix the transmitter on the metal door, otherwise the signal will be blocked.

Replacing the battery:

Open the shell from the side of the transmitter (some require unscrewing the screws from the back), then remove the depleted battery and insert the new battery into the battery slot, paying attention to the positive and negative directions of the battery.

Common fault analysis:

- If the receiver does not sound, there may be the following reasons:
1. The battery in the transmitter may be depleted (the transmitter indicator light is relatively dark), and the battery needs to be replaced.
 2. If the positive and negative directions of the battery are reversed, readjust it
 3. Check for interference sources between the transmitter and receiver, such as power adapters or other wireless devices
 4. There are thick walls or metal doors between the receiver and transmitter to block the signal. If so, please adjust the position of the receiver and transmitter.
 5. The pairing between the transmitter and receiver has been lost, just pair again

Cautions:

1. The receiver is only for indoor use and should be waterproof and moisture-proof.
2. Do not open or repair the receiver and transmitter without permission.