


# **FEATURES**

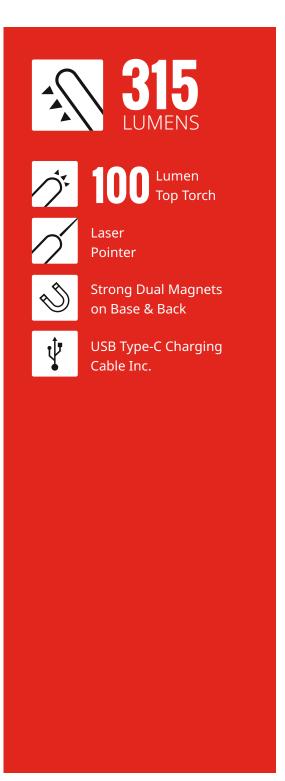

# HEAVY DUTY PENLIGHT WITH LASER POINTER

RS Stock No: 255-4203

RSPRO-P30R





## **Technical Data**

Floodlight: 315 Lumen white COB LED, 6500k Flashlight: 100 Lumen white SMD LED, 6500k Red laser pointer in the top (0.7mW / 650m wave length / class 2) Durable anodized machined aluminium body Magnetic pocket clip Strong magnet on base High quality 3.7v 700mAh Li-ion battery USB Type-C charging cable included Led charging indicator under the transparent switches Charging time: 2.5 hours IP20 dust resistant 2m drop resistant

Battery: Rechargeable high quality 3.7v 700mAh Li-ion

**Product Size:** 170.2 x 15.2 x 21mm

Product Weight: 60g

### Operation

Top Switch:- Laser Pointer (DO NOT point at anyone)

Lower Switch:- Flashlight > Floodlight Low > Floodlight High > Off When On in any mode for more than 5 seconds, next press will turn off.

Flashlight: 100 lm / 2.5 hours Floodlight Low: 110 lm / 5 hours Floodlight High: 315 lm / 2 hours Laser Pointer: 70 hours

# Recharging

- 1. Only use a 5V-1A USB Type-C charging cable.
- Lift the charge port cover on the side of the penlight.
- Plug the USB Type-C end of the cable into the charge port.
- Plug the USB-A end of the cable into a USB charging port (do not exceed 5V-1A charging input or damage may occur).
- 5. Green Flashing LED indicates charging, Solid Green LED indicates fully charged.6. Charge Time: 2.5 hrs

- **ADVICE & IMPORTANT INFORMATION!** Do not look directly at LEDs and NEVER POINT LASERS AT ANYONE.
- Do not operate in direct sunlight or extreme temperature conditions (below -10°C or
- LEDs can become warm/hot when switched on; DO NOT touch and NEVER place face down on any surface - risk of fire! Even once the device has been switched off, DO NOT place face down as the LED/Lens will stay hot/warm for a while.
- The aluminium housing can get warm/hot. If it gets too hot, turn down the brightness or switch off and allow to cool.
- Do not use the device if there is any visible damage.
- Do not use the device in the immediate vicinity of flammable materials or gases.
- The rechargeable battery will reach full performance after a few complete charging and discharging cycles.
- Take care when charging, check the charging output on the charging appliance you are using and DO NOT exceed the stated Max charging input for the device or damage may occur to the battery and may void the warranty.
- To keep the rechargeable battery in optimum condition, it should be recharged every 3-6 months, especially if it is not being used for a long period of time.
- Always fully charge batteries before storage.
- Always protect all batteries from heat, intense sunlight, fire, water and moisture danger of explosion!
- If a battery is damaged, fluids can leak out. AVOID contact as this can lead to skin irritation and/or burns. If skin contact occurs, rinse thoroughly with water. If irritation persists, seek medical advice. Seek immediate medical assistance if battery fluid comes into contact with the eyes.
- Children under 12 years of age should only use the product under adult supervision. Do not disassemble or attempt to modify the product; this will void the warranty and can be dangerous. Improper use or modification is not covered under the warranty.
- Take care not to let lenses come into contact with hard/sharp objects, damage/scratches to the lenses will affect light output.
- Before cleaning the device, disconnect the charge cable. Clean with a dry or slightly moist, clean, lint-free cloth and a mild detergent if required. Do not use cleaners that contain abrasives or solvents.
- If the product has been subjected to moisture or water the warranty may be void.
- Do not dispose of this device in normal household waste. It must be disposed of via an authorised disposal centre or at your local waste disposal unit.
- Please recycle packaging responsibly.
- Keep these instructions for future reference or for subsequent possessors.



