



725-5529
725-5531
725-5544

1 WIRING DIAGRAM FOR 3 PHASE SUPPLY WITH 400 V COIL

MFRS PART NOS:
DOLSW5.5400
DOLSW7.5400
DOLSW11400


BF0910A400/
BF1810A400/
BF2510A400
CONTACTOR



START CONTACT

2 INCOMING TP SUPPLY

L1 L2 L3

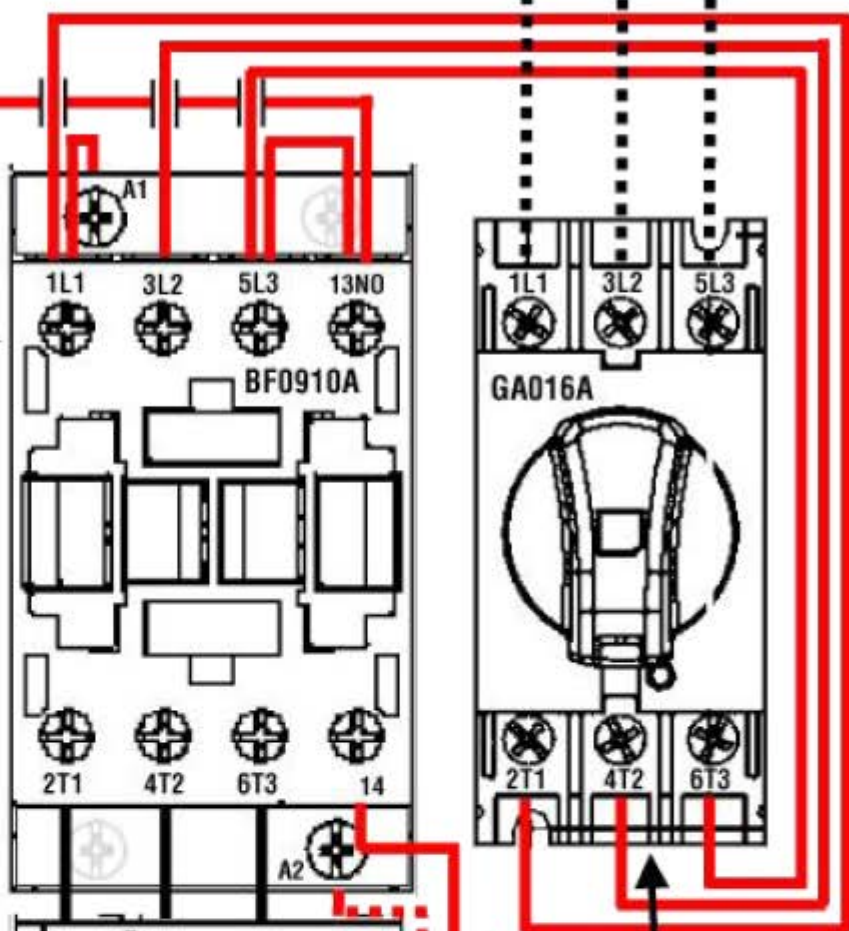

GA016A/GA025A/GA032A
ISOLATOR

*Power link cable sizing:
5.5kW = 1.5mm²
7.5kW = 2.5mm² & 11kW = 4mm²

RF38 THERMAL RELAY
(TO BE ORDERED
SEPARATELY)

****INSTALLER TO CONNECT
COPPER 4TH PIN TO LOWER
A2 ON CONTACTOR
& FLYING LEADS TO 96
ONLY**

**DO NOT
CONNECT ANY WIRES TO 95
BUT ENSURE 95 & A2
TERMINALS ARE TIGHTENED**

5

WARNING

TO PREVENT RISK OF
DAMAGE OR SAFETY
HAZARDS, THIS
EQUIPMENT SHOULD
ONLY BE INSTALLED BY
SUITABLY QUALIFIED OR
COMPETENT PERSONS
AND IN ACCORDANCE
WITH ALL APPLICABLE
ELECTRICAL
REGULATIONS

KEY

CONTROL WIRING ———

CONNECTIONS TO BE
MADE BY INSTALLER - - - - -

**RF38 INTERNAL
95-A2 CONNECTION - - - - -

OUTGOING SUPPLY TO
3PH MOTOR

10

6

7