DG400BB USER MANUAL




3. Turn upper tray up, tighten both knobs to fix upper tray and base position.

Set-up and Fold up



1. Make sure that the yellow rubber feet are on the RIGHT side, and loosen both knobs.

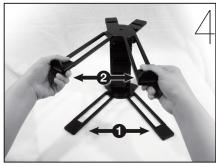

4. Spread legs and arms of upper tray. Basic set-up is now complete.



2. Hold central shaft and lift it upward.



5. Before folding up, please make sure laptop stand is set at the lowest(default) height (see instructions below for height adjustment). Reverse steps 4-1 to fold up.

Height adjustment after set-up and before folding up



1. Pull back moveable core to disengage it from the central shaft.



2. Move core to desired height by sliding along groove.



3. Lock core in place by pushing against the latch at one of three height calibrations.

Angle Adjustment for designated position



 Loosen upper tray knob, then swivel up and down until desired angle is reached. Tighten the knob to fix.



Loosen base plate knob, then swivel central shaft back and forth until desired angle is reached. Tighten the knob to fix.



For more product information and user manual in different languages, please go to HERCULES official website www.herculesstands.com

Please always make sure both knobs are well tightened before use.