



Bump Cap - BP65 User's Instruction

| | |
|---------------------------------|--|
| Description | The bump cap is intended to protect the wearer's head against injury caused by striking the head against hard, stationary objects. For adequate protection, this bump cap must fit or be adjusted to the size of the wearer's head. Any bump cap subjected to severe impact should be replaced. |
| | Standard: CE EN 812 |
| | Material: Polyethylene (PE) |
| | Size: 52 – 60 cm |
| Adjustment | Adjust the headband as showed below. |
| | |
| Limits of Use | DO NOT use a bump cap in an environment where an Industrial Safety Helmet is required. DO NOT modify or remove any of the original component parts of the cap, other than as recommended by the manufacturer. DO NOT apply paint, solvents, adhesives or self-adhesive labels, except in accordance with instructions from the manufacturer. |
| Instructions for Use | Fit the bump cap on head and fasten strap to ensure correct fit. |
| Inspection | Shell and suspension should be visually inspected before each use for signs of dents, cracks, penetration and damage due to impact, rough treatment or wear that might reduce the degree of protection originally provided. A cap with cracks, defective parts, or which has received a severe impact, should be removed from service. |
| Storage | Store the bump cap in a dry place, sheltered from sun light. |
| Cleaning and Maintenance | The bump cap should be cleaned by wiping with a cloth moistened with a weak mild detergent solution, and then the cap should be allowed to air dry. No strong or abrasive chemicals should be used. If the bump cap cannot be cleaned by this method it should be replaced. |
| Durability Life | 5 years |