



SAFETY NOTICE:

1. Only qualified persons are authorized to install the DEVICE
2. Automation and control devices must be installed so that they are protected against any risk of involuntary actuation.
3. It is essential to ensure that all control system connections meet applicable safety standards. Fluctuations or variations in the mains supply voltage should not exceed the tolerance stated thresholds.
4. Caution: Recommended to connect 250mA fuse externally at the input.


ASTRO Digital Time Switch.

**RS Stock No
896-6882**


CONNECTION DETAILS:

To connect DEVICE to PC using Serial or USB port: DEVICE has TTL Serial Port. Use TTL to Rs232 cable or USB cable for communication between DEVICE & PC.

Connection Diagram

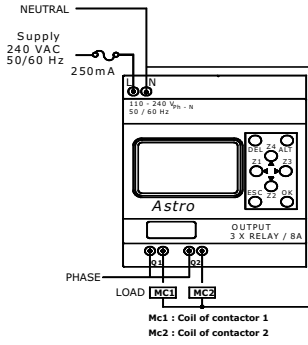

MECHANICAL DIMENSIONS:

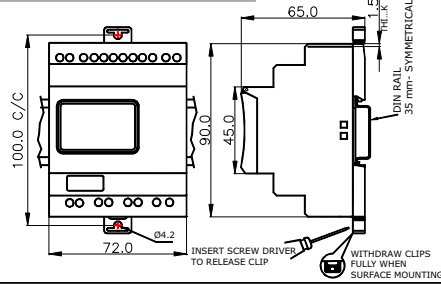

TERMINAL DETAILS:

	0.54 N.m (5 Lb.in) Terminal Screw - M2.5
	1 x 0.2...3.3 mm ² Solid Wire / Single Wire Ferrule
	2 x 0.2...1 mm ² Insulated Twin Wire Ferrule
AWG	1 x 24 to 12

Note: For selecting a required menu refer Appendix A & f or setting the value of parameter refer Appendix B
* - is not applicable for Single Phase Astro & Blank screen is also not applicable for Single Phase Astro.

