



ENGLISH

## Datasheet

# Vehicle Joint Splitter

RS Stock number [539-570](#)



### Description:

High quality nut splitter, designed to remove seized or rusted mild steel nuts easily and quickly  
Capacity: up to 9/16 in Whit; 5/8 in BSF; 1in AF

### Directions:

1. Retract the hardened steel cutting blade.
2. Place the nut splitter over the seized nut.
3. Tighten the high tensile bolt and force the cutting blade in to the nut.
4. The nut should split cleanly leaving the bolt or stud in tact.