

Thank you for choosing Schneider Electric™ products. Please read through the following information before installation and use.

SPECIFICATIONS


Rated Voltage : 250V~ Rated Current : Refer to product marking
Mounting centre : 60.3/120.6mm

IMPORTANT NOTE


1. The product must be installed by a qualified electrician.
2. Please check your local wiring regulations before installation.
3. Please install with standard wall box to aid correct operation of the product.
4. Please keep the front cover safe in order to prevent damages before and during installation.
5. Turn off the power supply when cleaning the product. Use a piece of soft and dry cloth to wipe off the dirt and contamination on the surface. Do NOT use corrosive chemicals.
6. Shield / mask the product before renovation to avoid contamination and degradation.

WIRING DIAGRAMS


1Way switch

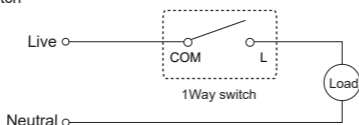


2Way switch

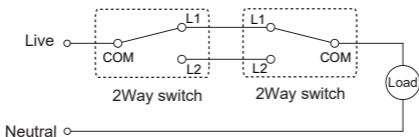


1Way switch with LED

 


Curtain Switch

 


2Way switch with LED

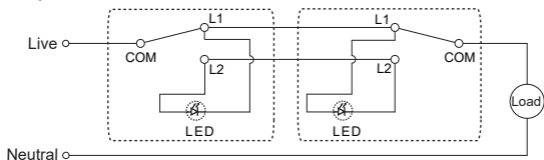


1-4 Gang 1Way switch

 


1-4 Gang 2Way switch

 


Intermediate Switch

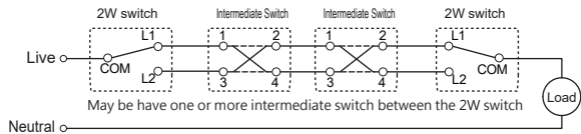

1Way Double Pole Switch with LED

 


1Way switch with Neon

 

MOUNTING INSTRUCTION

1. Remove the product cover and safekeeping .
2. Connect the wires to the terminals and tighten the terminal screws.
3. Screw the grid plate onto the wall box.
4. Snap the product cover.

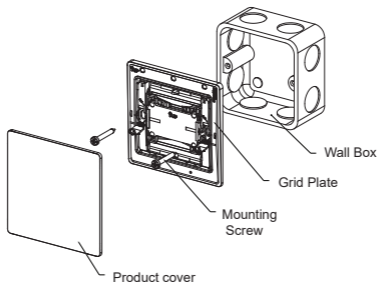

*Picture is for reference only