WELCOME!

LET'S SET UP YOUR PRO-MOTE

Before you connect your PRO-MOTE, you need to do a few things.

- You'll need to set up an account on www.easylogcloud.com so that you can view your devices remotely.
- Download the EasyLog Cloud App on your phone or tablet.
- Have your WiFi network details to hand.

Not an Apple or Android user? Visit www.easylogcloud.com and click on Support for alternative set up methods.




















Install AA batteries


> network replace the battery cover and install **PRO-MOTE in its place of application**








(do not refit this until set up is complete)

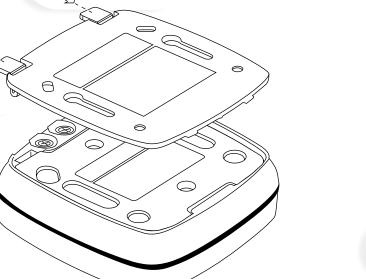


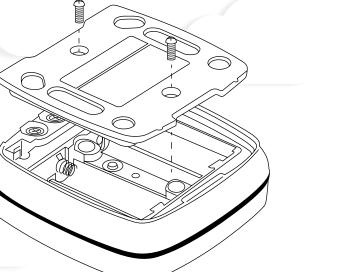


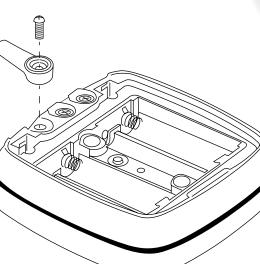


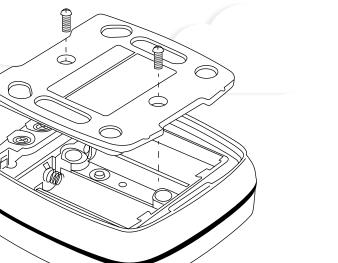


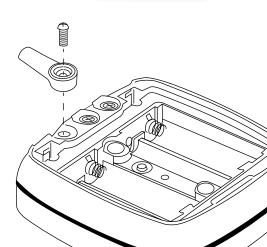

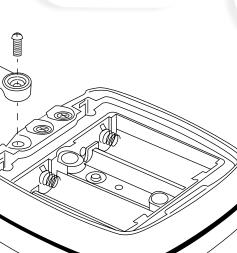

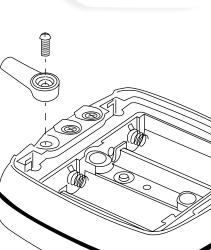

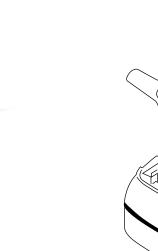

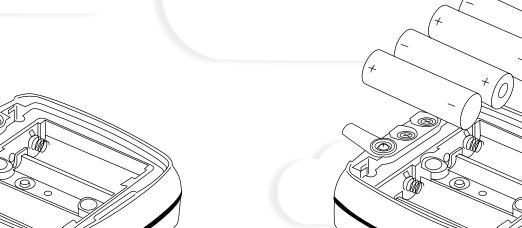





SALES & SUPPORT

08457 201201

rspro.com

RS Components Ltd

Birchington Road, Corby, Northants, NN17 9RS, UK



08/12/2017 Issue 1

WARNING: Failure to follow these safety instructions could result in fire, electrical shock, other injury or damage.

Repairing or modifying

Never attempt to repair or modify this product. Dismantling may cause damage that is not covered under the warranty. Servicing should only be provided by an approved supplier. If the product has been punctured or seriously damaged, do not use it and return it to an approved supplier.

Using connectors and ports

Never force a connector into a port. Check for obstruction in the port; make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port. If the connector and port do not join with reasonable ease, they probably do not match and should not be used.


Only use 1.5V AA batteries or a genuine PRO-MOTE power adapter to power your PRO-MOTE data logger.


Disposal and recycling

You must dispose of this product and batteries according to relevant laws and regulations. This product contains electronic components and therefore must be disposed of separately from household waste.

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Important Safety Information

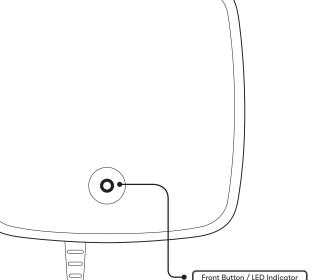

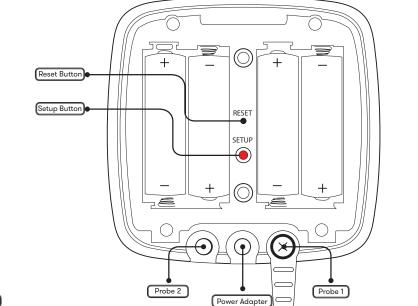

Device Indication Overview









State		Front Button LED	Sounder
✓	Device OK	1 Flash / 5 Sec	No Sounder
X	Fault	1 Flash / 5 Sec	Single tone ring every 30 minutes
.	Alarm	1 Flash / 5 Sec	Continuous two tone ring

Visit www.easylogcloud.com and click Support for a detailed visual / sound state indication guide.

QUICK START GUIDE