

911 INSTRUCTIONS WIRELESS RESTAURANT GUEST PAGING SYSTEM

PRODUCT LIST



TRANSMITTER
*1

RECEIVER
*16

POWER
*1

BASIC PARAMETERS

TRANSMITTER		RECEIVER	
DIMENSION	235*158*36mm	DIMENSION	103*51*10mm
MATERIAL	ABS	MATERIAL	ABS
TRANSMIT POWER	480mW	RECEIVING SENSITIVITY	-114dB
STANDBY POWER	650mW	STANDBY POWER	148mW
MAXIMUM POWER	18W	LI-POLYMER	3.7V/150mAh
FREQUENCY	315MHz	FREQUENCY	315MHz
POWER SUPPLY	DC12V/2A	RECEIVING DISTANCE	>800M OPEN AREA
LAUNCH DISTANCE	>800M OPEN AREA	STANDBY TIME	≈6HOUR
SUPPORT RECEIVER	99(18/SET)	PROMPT MODE	VIBRATION BEEP FLASHING
IP GRADE	IP32	IP GRADE	IP32

INSTRUCTIONS

1. Open the package

connect the power adaptor to the power supply to charge the pagers for 10-20 minutes, then you can do the Pagers ID Pair.

2. Pagers ID Pair

Press the Pager's Function Button (take down the plastic cover and AD card paper, you will see the buttons) at center and Cancel button at the flank at the same time, then the 2 red indicator lights on the right side will be on, thus the pager enters into the ID pair mode.

Then input the corresponding matching ID number and Press the Call button on the keypad of transmitter, the pager will vibrate and beep, which means they have paired successfully. If you input the wrong number, just press the Delete button on keypad to delete the wrong number and input again.

3. Pager Prompting Time Length

Every time you press the Function button, a red indicator light will be lighted on, and every 12 seconds of the prompting time will be lengthen. It can be lengthen to 60 seconds at most.

When all indicator lights went out, pager's prompting time is 60 seconds, and the beep mode (sounds mode) will be turned off, only vibration mode is left.

4. Turn On-Off

Press the Function button for several seconds, the pager will be powered off with vibration and indicator lights will go out. Then put it back to the corresponding charge slot.

Also you can press the Function key shortly to turn the pager on.

"On number" to turn off all receivers: Input the 99 on the keypad of transmitter and press the Call button, then all receivers will be powered off. Also you can reconnect the device to the power supply to turn on all pagers again.

5. Delete the Paired ID Number and Re-Pair

Follow the instructions of "Pagers ID Pair" to pair the pager number again, the new ID number will cover the registered one automatically.

6. Reset the Transmitter (Keypad) ID of JT-912

Keep pressing the "Call" key of keypad and reboot your system. The screen will flicker, then input a new ID and just press "Call" key again to save, the new ID will auto cover the previous one.

You can set a same ID number to 2 transmitters or more to let one pager could pair and work with multiple transmitters at the same time.

Note: *All pagers ID also need to repair after you reset the transmitter ID.