

**MODEL:AS7413**  
**OWNER'S MANUAL**



PLEASE READ BEFORE USE

## 1 Getting Started

### Welcome

Thank you for purchasing a Uniden phone.


**NOTE** : Illustrations in this manual are used for explanation purposes.  
Some illustrations in this manual may differ from the actual unit .

### Features Review

- DTMF/FSK Caller ID\*
- Records up to 50 calls
- Records up to 14 last dialed numbers
- On-hook pre-dialing
- Redial
- Ring tone selection
- Ring Volume selection
- Privacy setting & no disturbance setting
- Clock and Call Timer
- Flash time selection
- Local area code setting
- 8 digits outside line code setting( this function is only available to PABX system)
- IP setting
- Display Contrast Adjustment
- Music on Hold
- Lightning Surge Protection
- Interference free from Mobile phone signal

\*Caller ID requires subscription to your local telephone company.

### Location and function

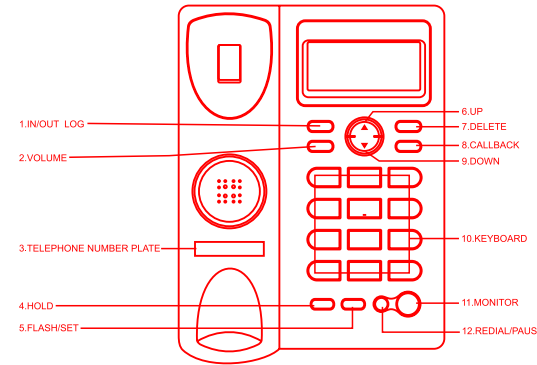

1. IN/OUT LOG button : Review outgoing calls and their durations. Press this button again to move to incoming call review.
2. Volume button
3. Telephone number plate
4. Hold button : Hold the conversation with music
5. Flash/Set button : (1) Select 600ms mode automatically by pressing this button after picking up the handset(see Flash time setting for other timing selections).(2) Press this button for 5 seconds to enter to Date/Time Seeing.
6. Up button : Review incoming calls
7. Delete button : Delete the last digit of number you dial,incoming and outgoing call numbers.
8. Call Back button : Dial out a number or a selected number from memory, incoming call or outgoing call log records.
9. Down button : Review incoming calls
10. Keyboard
11. Monitor button
12. Redial/Pause button : (1) Dial the last dialed number (need to pick up the handset or press the Monitor button).(2) Allow you to pause for 3.6 seconds while dialing number.

## 2 Setting

In on-hook state, press Flash/Set button to go to main menu, the display shows SET-12345678 on the screen.

### Date/Time setting

On the main menu, enter 1 and " 1-DATE 2-CL" will appear on the screen. Press 1 to go to Date. Press 2 to go to Time setting and set the item flashing. Press the Flash/Set button to confirm and then the Monitor button to exit.

### Ringing selection

On the main menu, enter 2 and " r1T 2VIP 3 VOL " will appear on the screen. Enter 1 and " ring TYPE 1 " will appear on the screen. Press Up and Down button to choose the ringing you want. Press Flash/Set button to confirm and the Monitor button to exit.

### Alarm setting

On the main menu,enter 3 and " AL 1-2-3 " will appear on the screen. Enter 1 and " ALARM OFF " will appear on the screen indicating this function is off.

Enter the timing for alarm and press the Flash/Set button to confirm. Enter for the second Alarm setting on the day," DAYAL 1 OFF " will appear on the screen. Enter the timing and press the Flash/Set button to confirm. Enter 3 for the third Alarm setting on the day, " DAYAL 2 OFF " will appear on the screen.

Enter the timing and press the Flash/Set button to confirm. To cancel the Alarm settings, press Up to Down button until you find " ALARM OFF " on the screen and press the Flash/Set button to confirm.

### No disturbance setting

On the main menu, enter 4 and " OFF\_R 00-00 " will appear on the screen. Enter the timing on the digits flashing, the first two digits are hours and the latter two are minutes.

Press the Flash/Set button to confirm. Once this setting is done, you can receive incoming call without ringing until the timing you have set has elapsed.

To cancel this setting, press the Monitor button.

### Flash time setting

On the main menu, enter 5 and " 1F 2-P-T 3D " will appear on the screen. Press 1 to go to Flash time setting and press the Up and Down button to select Flash time (90/95/100/120/180/300/600/1000ms). Press Flash/Set button to confirm and then the Monitor button to exit. The default is 600ms.

## 2 Setting

### Pulse/Tone selection

On the main menu, enter 5 and " 1F 2-P-T 3D " will appear on the screen. Press 2 to go to Pulse/Tone selection and press the Up and Down button to select ( Pulse/Tone ). Press Flash/Set button to confirm and the Monitor button to exit.

### Privacy setting

On the main menu, enter 5 and " 1F 2-P-T 3D " will appear on the screen. Press 3 to go to Privacy protection and press the Up and Down button to select ( On/Off ). Press Flash/Set button to confirm and the Monitor button to exit. ( Select Off if this unit is connected with an internal line. )

### Local area code setting

On the main menu, enter 6 and " 1-LOC 2-OL " will appear on the screen. Press 1 to go to local area code setting and enter a local area code up to 8 digits. Press Flash/Set button to confirm and the Monitor button to exit.

### Outside line code setting ( this function is only available to PABX system )

On the main menu, enter 6 and " 1-LOC 2-OL " will appear on the screen. Press 2 to go to outside line code setting and enter a code up to 8 digits. Press Redial button and then Flash/Set button to confirm and the Monitor button to exit. The default is Off mode.

### LCD Brightness Setting

On the main menu, enter 7 and " LCD con 4 " will appear on the screen. press " UP " or " DOWN " to setting the LCD brightness, the default is 4th level, 5 levels in total.

### IP setting

On the main menu, enter 8 and " 1-AU 2-3-IP " will appear on the screen. Press 1 to go to IP setting and press the Up and Down button to select IP number. Press Flash/Set button to confirm the Monitor button to exit. The IP number you have selected will be automatically dialed out before the call number you want to dial.

### Dial

Select a number from incoming, outgoing call long records or pre-dial a call number. Press Call Back to dial out the selected call number.

### Operation Pre-dial

In on-hook state, enter a telephone number. Press Call back to dial the telephone number. In case of wrong digit entered during the process, press Delete button to amend the digit.

### Redial/Pause

Pick up the handset or press the Monitor button. Press the Redial/Pause button to dial the last dialed call number. Pause can be inserted between digits of a telephone number especially getting an outside line. The pause time is 4 seconds.

### Music on hold

At off-hook status, press HOLD key, Hold music will play, then put down the handset.Picking up the handset again, the Hold music will stop, enter conversation state by handset automatically.Or, pressing Monitor button again, the Hold ring will stop, enter conversation state by Hand-free automatically.

### Review in on-hook mode

Press In/Out Log button to review incoming and outgoing calls. Press Up and button to search.

### Flash

Use this function to access services from your telephone company like call waiting or transfer call.

### Delete (Edit)

In pre-dialing a wrong digit entered can be edited, press Delete button to delete the last dialed digit of the call number. While reviewing incoming and outgoing call numbers, press Delete button to delete the selected call number. If pressing the Delete button for 3 seconds, all incoming and outgoing calls be deleted.

### Ringer volume selection - 3 volume levels

On hook state : press VOL button to select volume, and then press set to confirm.

### H-F Volume Function

In H-F state, pressing " VOL " is HF speaker volume function, 4 levels in total ( the default is max. 4th level), press " VOL "button to select the speaker volume.

## 3 WARRANTY CARD

### 18.COM Electronics Pte Ltd. WARRANTY CARD

Name : \_\_\_\_\_

Contact No.Tel: \_\_\_\_\_

Model: \_\_\_\_\_

Date Of Purchase: \_\_\_\_\_

Serial No: \_\_\_\_\_

Dealer's Stamp: \_\_\_\_\_

Service Centre:  
Monday- Friday Opening Hours  
9:30am - 12:30pm, 2:00pm - 5:00pm  
Tel: 6278 8274

### CUSTOMER'S COPY : DO NOT MAIL THIS

1. This warranty starts on the date of purchase and expires in 1 year. Customer must bring along this warranty card and original invoice or receipt together with the complete product for any repair services.
2. Any warranty application with no invoice and/or warranty card are regarded as invalid warranty. Customer must pay for repair charges.
3. This Warranty is invalid if the product has been modified,altered and /or repaired by persons other than technician of our company or mishandled by customer.
4. This warranty is applicable to Singapore only.
5. This warranty does not cover damages caused by natural disasters such as flooding and lightning etc.
6. Customers are requested to collect repaired unit within two months from date of submission.Units not collected after 6 months will be disposed off by the company.

-----  
18.COM Electronics Pte Ltd, 159 Sin Ming Road,Amtech Building,  
#04-01,Singapore 575625