

Products Warranty - Australia

Faucet Australia Pty Limited (ABN 83 683 523 321) warrants its products to the original owner as per the periods in the table below. This Warranty applies to all product purchased on or after 24 Oct 2017. Our liability under this warranty is limited at our option to the repair or replacement of the defective product or part, the cost of repair of the defective product or part or the supply of an equivalent product or part, in each case if we are satisfied the loss or damage was due to a defect in the materials or workmanship of the product or part.

Product Category	Residential Warranty Period	Commercial Warranty Period
Tapware, Showers, Accessories	5 Years parts & labour + 10 years parts	2 Years parts & labour + 3 years parts
Intro Tapware	1 Year parts & labour + 4 years parts	1 Year parts & labour
Silkstone Baths & Basins	Lifetime	2 Years parts & labour
Special Finishes	5 Years parts & labour	2 Years parts & labour

Note: "Residential" refers to normal residential domestic purposes including houses and residential apartments. "Commercial;" refers to all non-residential purposes including Hotels, Schools, Care homes, Hospitals, clubs etc.

Exceptions

Defects caused by improper use, improper installation, surface damage caused by installation, improper care of the product or failure to observe any one or more of the following will not be covered by this Warranty:

1. Applicable Health Acts;
2. Installation in accordance with manufacturer's instructions and specifications (Note: Tapware, mixers and filters must be installed by qualified plumber);
3. All products to be cleaned with only warm water and a soft clean cloth
4. Tapware and showers to be supplied with only clean potable water
5. Tapware and showers to be subject to no more than 700kpa whether during use or during site testing, and site must be fitted with 500kpa mains pressure limiting valve.
6. Tapware and showers to be subject to water temperatures no hotter than 65 degrees Celsius
7. Tapware and showers to be installed in accordance with AS/NZS 3500 and other standards which govern the water supply and sewerage plumbing requirements at the location of installation.

Limitations

8. Warranty does not cover fair wear and tear on sealing rings and washers. Depending on usage and conditions these may have to be replaced within the Warranty period;
9. For finishes, this warranty does not cover damage caused by use of chemicals or detergents or abrasives and is limited to coating failure by bubbling, cracking or flaking. Note that Organic finishes are expected to change colour, develop patina and verdigris.
10. Does not cover any loss or damage sustained by the consumer (including consequential loss or damage), in respect of the product or failure or omission on the part of Faucet Australia to comply with its obligations under these conditions.
11. For Baths & Basins, The warranty does not cover damage caused by exposure to direct sunlight or UV, exposure to temperatures over 60 degrees Celsius, damage caused by dropping sharp or heavy objects.
12. For Baths and basins this warranty does not cover damage caused by Strong Chlorinated solvents, Chloroform, Chlorobenzene, Nail polish remover, Methylene Chloride, Acetone, Turpentine, Ethyl Acetate, Acids, Ketones, Phenols, Ethers, Drain Cleaner, Toilet Cleaner, Salts, Oils, Milks and bathwater additives, non-approved liquids or Chemicals.

Lodging a claim

Claims must be lodged immediately or within 3 days of detection. Proof and Date of purchase from a Faucet Strommen dealer along with site details and contacts will be required to process a claim. All claims must be lodged with Faucet Australia via one of these methods:

Phone: 03 5450 4236

Email: sales@faucetstrommen.com.au

Mail: PO Box 271 Kerang VIC 3579

Your costs in making a claim under this warranty, including all freight, collection and delivery costs are to be borne and paid by you. We also reserve the right at our cost to inspect any alleged defect in the product wherever it is located or installed or on our premises.

Other Conditions

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Faucet Australia Pty Ltd 24 Oct 2017

Installation Guide

IG 024

Release Date: 15.07.21

Progressive Hob mixers



Suits Models:

30900, 30901, 30902, 30903, 30904, 30905, 30906, 30907, 30915, 30916, 30917, 30940, 30941, 30942, 30943, 30944, 30945, 30946, 30947, 30955, 30956, 30957

Important requirements:



Must be fitted in accordance with AS/NZS 3500 by qualified plumber



Mains 500kpa regulator must be fitted



Maximum hot water temp. 65°C



Mini stop taps must be fitted



Water lines must be flushed prior to connection



Only clean municipal water supply. No bore, dam or hard water without filtration & treatment

Cleaning

Clean only with a soft microfiber or similar cloth and warm clean water. Ensure that the cloth is clean and free of any grit or chemical. Dry tap off with a soft clean cloth. Ensure that your tap is not subject to any chemicals, building grit or any type of abrasive or polish. For care of special finishes please visit our website.

Maintenance

Aerators may need to be flushed from time to time if flow diminishes or stream pattern deteriorates. For Pegasi & Cascade mixers, use the aerator key provided to unscrew the aerator. You will notice a "castle" pattern around the edge of the aerator, the key engages with this allowing you to unscrew the insert easily. For Zeos models, use the aerator key to unscrew the aerator housing, you will then be able to pop the insert out the top of the housing. Rinse off the upper face of the insert with running water and gently brush clean with an old toothbrush to remove any debris before refitting the aerator.

Faucet Australia Pty Ltd
www.faucetstrommen.com.au

ABN 83683523321
P: +61 3 5450 4236

31 Tate Drive, Kerang VIC 3579
sales@faucetstrommen.com.au

Installation

1. Both the mixer and the spout (if applicable) fit through a standard 35mm tap hole and the maximum bench thickness is 45mm.
2. Place the red fiber washer over the body, drop the body through the tap hole and align such that the "I" symbol on the indicator ring is facing the front.
3. Press the rubber mount washer under the mixer body until it is against the underside surface of the sink or benchtop.
4. Assemble the mount nut/washer and screws as per **Diagram A**, then screw onto the bottom of the mixer up against the sink/benchtop hand tight only.
5. Fasten the 3 Phillips head screw to fasten in place. Be careful not to over-tighten as these screw provide a large clamping force and if overtightened can deform the brass nut.
6. Ensure that Hot and cold outlet points on the wall have been fitted with stop taps. Flush the lines by allowing full flow from each stop tap into a bucket for 15 seconds each.
7. Screw 3 hoses into the mixer body **hand tight only** taking careful note of the port designations as per **Diagram B**. The blue braided hose connects to the port marked "C"; the red hose to the port marked "H" and to the plain hose to the outlet port.
8. Connect the hot and cold hoses to the water supply stop taps using the swivel nuts. These will need only a very gentle tighten with a spanner to seal.
9. Place a red fiber washer over the spout body and insert the spout assembly through the other tap hole.
10. Fasten the spout in place using the black plastic spacer and the grey mount nut. For very thick benches you may discard the black spacer. (For sink mixer with pull out hose, note that the grey nut will need to be screwed past the brass connector before you can screw it onto the spout body)
11. Fasten the swivel nut on the end of the outlet flexi hose to the thread on the bottom of the outlet body. This will need only a very gentle tighten with a spanner to seal. (for pull out spray mixer, fasten the outlet flexi connector onto the brass adaptor on the end of the pull out hose, tighten gently with a spanner)
12. Test the tap and confirm operation is correct and there are no leaks.
13. Progressive valves open clockwise, over the first 90 degrees of rotation the cold water opens to full flow, then from 90-180 degrees the valve goes from warm to hot.
14. For sink mixer with pull out spray,
 - a) Check the path of the hose and ensure that the cupboard is clear of any obstructions to allow the hose to hang and move freely without touching anything.
 - b) fit the plastic weight to the s-flex hose. It should be positioned close to the lowest point of the hanging hose, but slightly towards the spout side of the "u" loop.
 - c) Check the operation of the hose and ensure action is smooth and free.

Diagram A

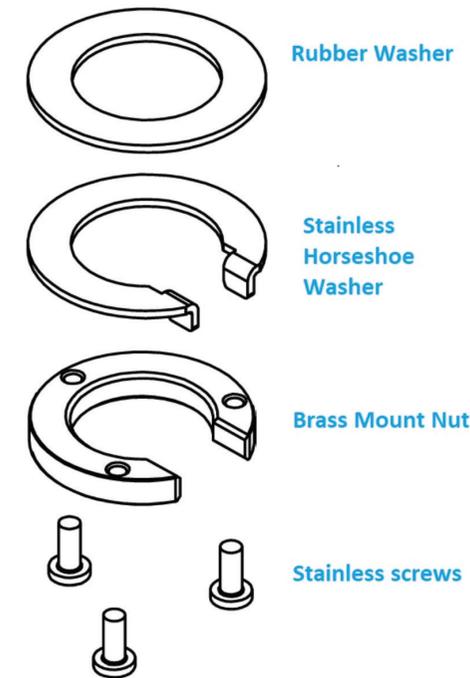


Diagram B

