

# IOX-WRKS INSERT

Rev. A2 - 03/2021 - PAC-INSIOXWRKS

For the most up-to-date version, please visit: [gtb.page.link/9Xn7](http://gtb.page.link/9Xn7)

## Preparing for Installation

Before installing, please document your GO device and IOX-WRKS serial numbers. You will need this information to verify your installation.

Ensure you have all of the following IOX-WRKS components:

- + GO device
- + IOX-WRKS
- + Any additional components needed to enable desired functionality.

**NOTE:** Contact Geotab Winter Solution Support at: 1-800-984-6175 Monday to Friday 7:30 a.m. - 8:00 p.m. (ET), Saturday 11:00 a.m. - 7:00 p.m. (ET). Spreader-specific integration documents are available here.

## Preparing for Installation

**NOTE:** Professional Installation Required – Installation of the IOX-WRKS requires the installer has sufficient technical knowledge and expertise for mobile device installation and integration into modern vehicles, i.e. Certified Geotab® Installer Certificate and Winter Installer certification.


**WARNING!** Your in-vehicle devices must be kept clear of debris, water and other environmental contaminants. Failure to do so may result in units malfunctioning or short-circuiting that can lead to a fire hazard or vehicle damage or serious injury.

**WARNING!** Prior to IOX-WRKS installation, read and follow the Important Safety Information and Limitations of Use in the IOX-WRKS document. Always read and follow all safety information to prevent loss of vehicle control and serious injury.


**WARNING!** Always unplug the GO device from the OBD port before plugging in or unplugging any IOX accessories. Failure to do so may damage the GO device permanently.

# IOX Installation Instructions

## 1. Install IOX-WRKS

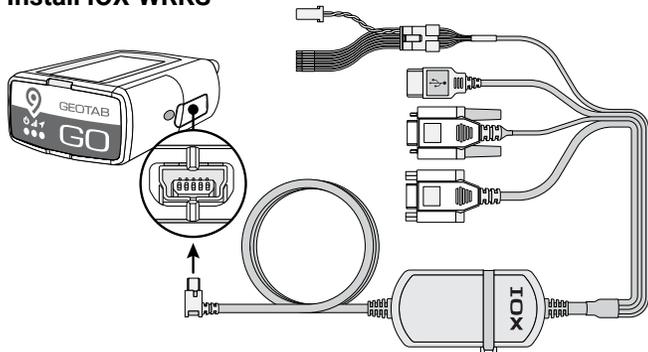


## 2. Integration

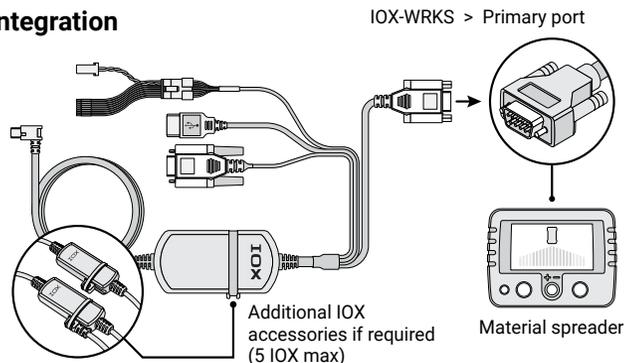

Call support for required spreader specific configuration download.

## 3. Telemetry

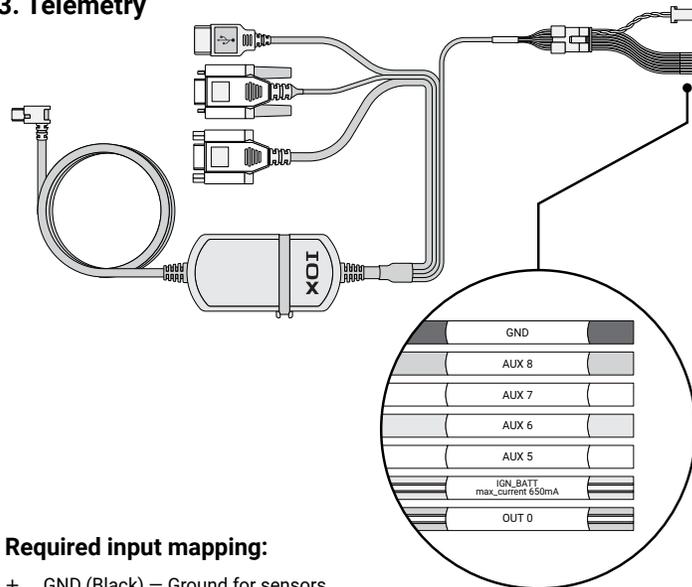

### Required input mapping:

- + GND (Black) – Ground for sensors
- + IGN-BATT (Red/White) – +12VDC for sensors (650mA max)
- + OUT 0 (Blue/White) – Not Used
- + AUX 5 (Blue) – Ground input for **belly plow or manual spreader** telemetry
- + AUX 6 (Orange) – +12V input for **plow** telemetry
- + AUX 7 (Green) – +12V input for **wing** telemetry
- + AUX 8 (White) – +12V input for **tow plow or beacon** telemetry

**NOTE:** If the device is not communicating, please ensure the device is installed correctly and try again.