


15.Transfer Unit (D017/D018/D019/D020)

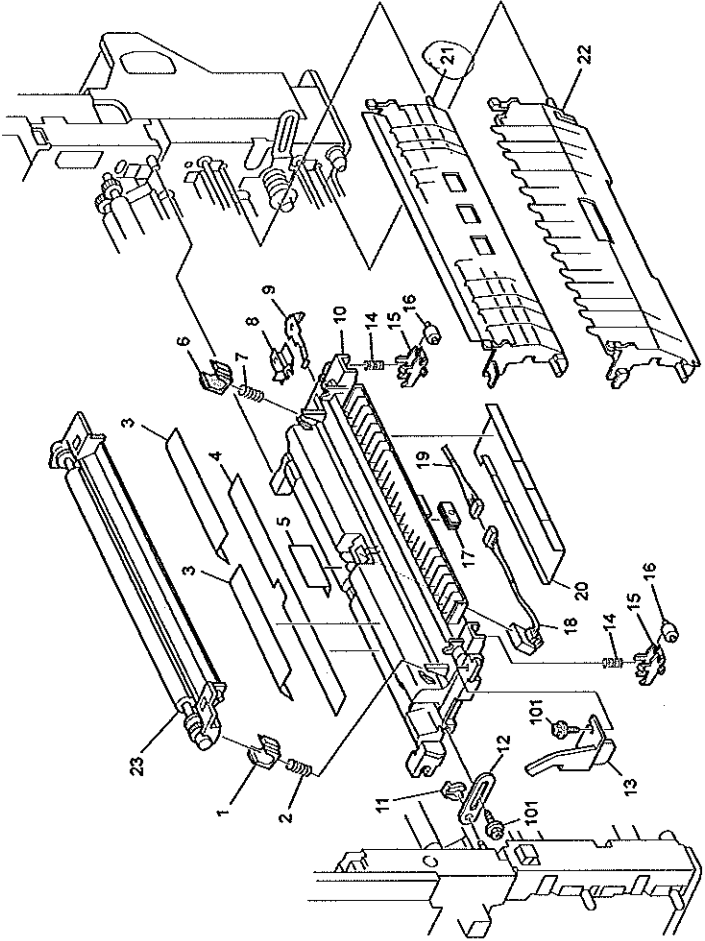

36

15.Transfer Unit (D017/D018/D019/D020)

Index No.	Part No.	Description	Qty Per Assembly
1	AA08 0256	Front Bushing - Transfer Roller	1
2	B091 3911	Compression Spring:Pressure:Front	1
3	AA15 0708	Front Discharge Sheet	2
4	A267 2712	Cleaner - Regist Driven Roller	1
5	A267 3905	Cover - ID Sensor	1
6	AA08 0250	Rear Bushing - Transfer Roller	1
7	B091 3912	Compression Spring:Pressure:Rear	1
8	A267 3861	Terminal - Transfer Roller	1
9	A267 3862	Terminal - Separation	1
10	D019 3855	Cover:Transfer/Separation Unit:C5	1
11	S447 2681	Snap Ring	1
12	D019 3941	Band - Vertical Transport Cover	1
13	D019 3931	Lever:Shutter	1
14	D019 3859	Compression Spring	2
15	D019 3866	Pressure Over - Transfer Unit	2
16	D019 3867	Roller - Transfer Unit	2
17	AG07 0514	Magnet Catch	1
18	D019 3901	ID Sensor	1
19	D019 5236	Interface Harness - Density Sensor	1
20	D019 3908	Cover - Density Sensor Harness	1
21	D019 2656	Guide Plate - Upper	1
22	D019 2775	Guide Plate - Lower	1
23	B209 2870	Spring Plate:Paper Size Sensor:Ass'y	2
23	B209 3831	Separation Unit:Ass'y	1

Index No.	Part No.	Description	Qty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	

37