


IMU z-axis = LY530A z-axis

IMU x-axis = LPR530A y-axis

IMU y-axis = (-) LPR530A x-axis

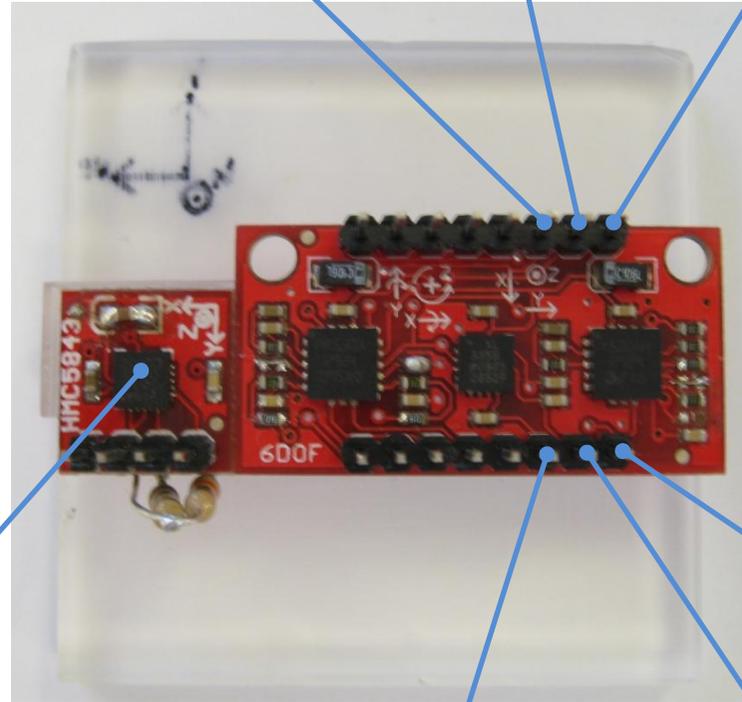

IMU x axis = (-) HMC5843 y axis

IMU y axis = HMC5843 x axis

IMU z axis = HMC5843 z axis

IMU x-axis = (-) ADXL330 x-axis

IMU y-axis = (-) ADXL330 y-axis

IMU z-axis = ADXL330 z-axis