

How to Replace Blown Fuse


This bulletin covers the following Champion Power Equipment models (*Note: Read instructions completely before performing service*):

- All Champion Power Equipment 50-100Amp Automatic Transfer Switches


⚠ CAUTION

ATS cannot be live or installed to perform this procedure. Be sure all power is disconnected before continuing. Failure to do so can result in serious injury or even death.


- 1) Locate and remove ATS Cover plate by removing Mounting Screws (1-4) Shown Below.

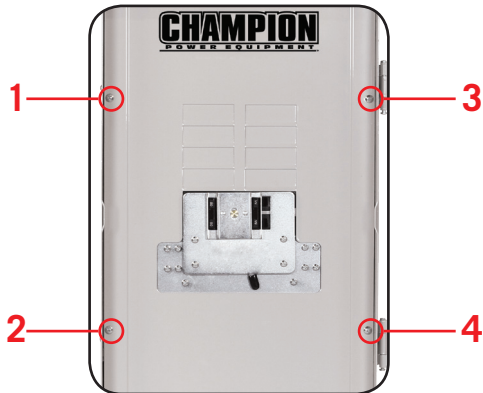

- 2) a. Locate and Remove Bus Bar Mounting Screws (2- 8/32) A Shown Below
b. Locate and Remove Mounting Bracket Screws (4- 10/32) B Shown Below
DO NOT MISPLACE SCREWS-MUST RETURN TO SAME LOCATION

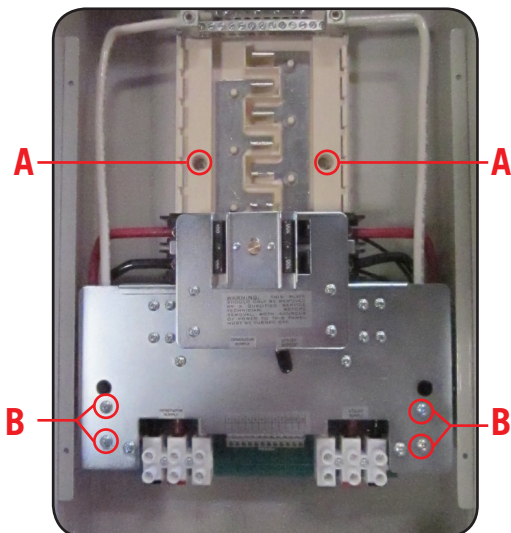

- 3) Remove mechanism from cabinet and turn upside down to expose fuses and replace fuse as necessary

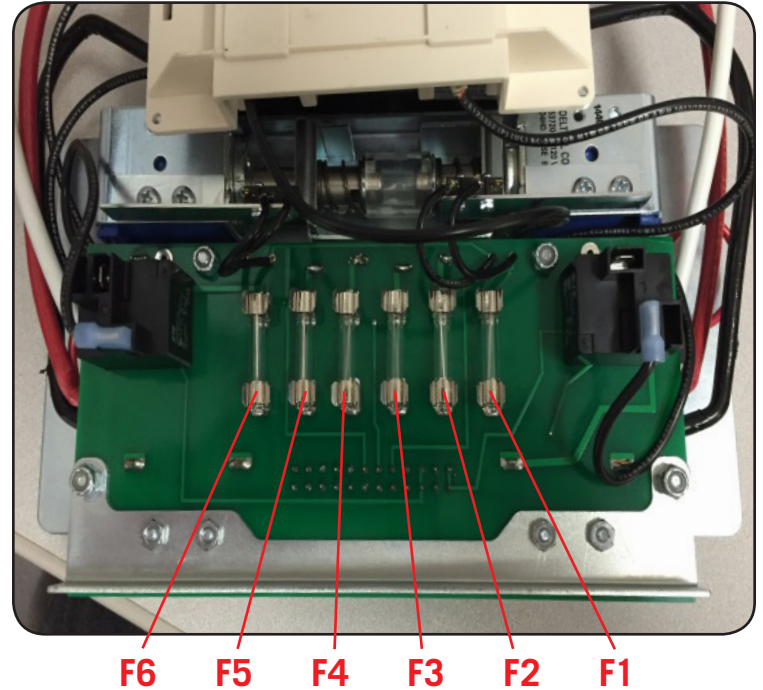

If you have any questions Please call our Toll free number at **877-338-0999 EXT-772**
Thank you