


# 座檯式洗碗碟機

Countertop Dishwasher

PDW5000

ZH-HK 說明書

EN Instruction Manual

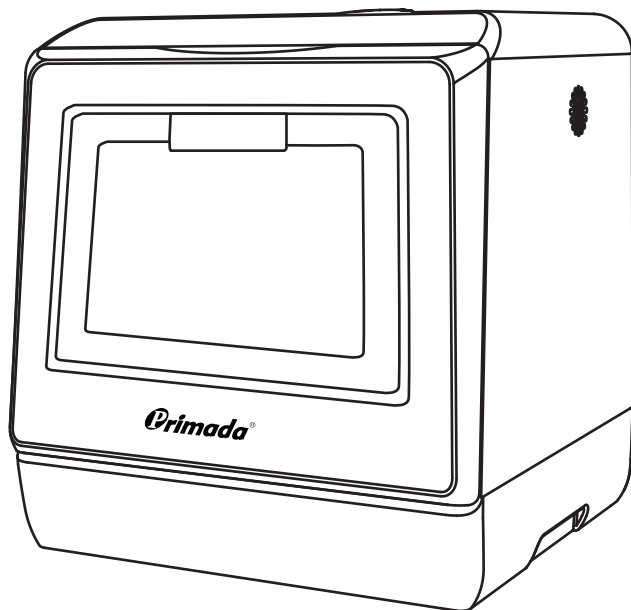

**Primada** 寶康達®

<b>ZH-HK</b>	<b>說明書</b> .....	2
<b>EN</b>	<b>Instruction Manual</b> .....	18

---

感謝您選購寶康達產品 — 座檯式洗碗碟機！  
希望您使用愉快，我們相信這款全新的座檯式洗碗碟機將為您帶來更好的生活體驗。

使用中如果遇到任何問題，請聯絡我們的售後服務中心，將有專業人員為您解答問題。

如欲了解更多產品資訊請登入：[www.primada.com.hk](http://www.primada.com.hk)  
本資料產品以實物為準，原廠保留產品更新的權利，如有變動，恕不另行通知。

感謝您的選擇！

## 目錄

---

1. 安全注意事項 .....	2
2. 產品組成 .....	4
2.1 包裝隨附物件 .....	4
2.2 技術參數 .....	4
2.3 組件名稱 .....	5
2.4 控制面板說明 .....	6
2.5 故障代碼 .....	7
3. 產品安裝說明 .....	8
3.1 進水管安裝 .....	8
3.2 排水管安裝及連接 .....	9
4. 產品使用 .....	10
4.1 操作說明 .....	10
4.2 擺放餐具說明 .....	12
4.3 清潔及保養 .....	13
5. 產品原理圖 .....	15
6. 疑難排解 .....	16

# 1. 安全注意事項

使用電器產品前請仔細閱讀此說明書的所有內容。  
請保管好此說明書。

使用電器產品時，請保持一貫的警惕性，遵循以下事項：

⊘ 禁止	必須禁止的行為或操作
⚠ 警告	必須遵守的行為或操作
ⓘ 注意	如果操作錯誤有可能造成人身、物品及財產的損傷

## 安放場所選取

⚠ 本洗碗機僅供家庭或者類似廚房場合使用，只能用於家用餐具的洗滌、烘乾、儲藏。選取安放位置時請遠離煤氣灶，建議放在水槽旁邊，以方便排水管安放（排水管伸出機身最大長度為150cm）。

⚠ 請勿將本產品放在不平穩、潮濕、光滑、不耐熱（如塑料台布、棉布、地毯等）的檯面上使用，以免觸電、起火、脫落等造成傷害事故和財產損失。

注意：本機在使用過程中請保持水平放置，否則可能會造成水箱缺水指示燈不熄滅或中途異常報警等現象。

## 交貨驗貨

⚠ 交貨時，請立即檢查外包裝或洗碗機是否有運輸損傷的痕跡。如果發現機器破損、故障、零部件缺失或損壞、電源線或插頭破損，請不要使用並及時和供貨商聯繫。

## 安裝

⚠ 請單獨使用額定電流10A，額定電壓220V 單相電源插座，請勿與其它電器共用插座，可能會因發熱引起火災。

⚠ 洗碗機專用電源插座必須可靠接地，未安裝接地裝置，可能會引起箱體或其它進水部件帶有感應靜電，當發生故障或漏電時會有觸電的危險。

⊘ 請勿將洗碗機放置於距煤氣灶等熱源150mm 以內的範圍內使用。

⊘ 請勿將洗碗機安裝或者儲存在溫度低於0°C的地方或室外。

## 日常使用及維護

⚠ 洗碗機在運行狀態時，若需中途開門，請先按 [ 啟動/ 暫停 ] 鍵，機器停止運轉後再打開門添加或取出餐具。

⚠ 洗滌過程中請勿開門，因為洗滌水、熱氣、洗碗機內均為高溫，可能導致燙傷，洗滌過程中，請勿接觸排水軟管排出的熱水，請勿接觸側面出氣口。

- ⚠ 洗碗機打開後，禁止在門上放置其它重物，以免發生傾倒，造成人體損傷及財物損失。
- ⚠ 門不應一直處於完全打開的位置，因為這可能會導致器具翻倒危險，運轉時，請勿傾斜或移動機體。
- ⚠ 刀具和其它尖銳物品擺放上擱架或碗籃時，必須把尖銳面朝下或水平放置，避免被劃傷。
- ⚠ 為保證最佳洗滌效果，請至少一周清理一次過濾器組件。
- ⚠ 排水管在排水時有一定噴射壓力，請牢靠固定排水管出水口，以免排水管警告排水時跳動，導致污水流到檯面或地板上。
- ⊘ 請使用洗碗機專用洗滌劑，禁止使用洗潔精、肥皂、洗衣粉、洗手液等代替。
- ⊘ 請使用洗碗機專用鹽，不能用其它類別的食鹽或工業用鹽等代替。
- ⊘ 請勿用力拖拽、按壓上層擱架，以免損壞。
- ⊘ 在斷開洗碗機電源線時，請勿濕手或者手持電源線拔出插頭。
- ⊘ 請勿向洗碗機潑水（否則，會導致火災、觸電等危險）。如需連接進水管，請一定使用新進水管，不能使用舊管。
- ⊘ 兒童一定要遠離洗碗機專用消耗品（否則，可能會造成口腔、喉嚨、眼睛等燒灼甚至窒息）。
- ⊘ 洗碗機門打開時，請勿讓兒童靠近，機器內殘留的水中任有洗滌劑和殘渣不能直接飲用。
- ⊘ 本產品可供年齡在8歲或以上的兒童及體質、感覺或智力有障礙人士或缺乏經驗和相關知識的人士使用，但他們必須接受負責安全人士的監督或指導如何安全地使用產品和理解所涉及的危險。
- ⊘ 切勿讓嬰兒靠近。若有孩童在旁，須加倍小心使用及看管小孩，以確保他們不會把此產品當作玩具。切勿讓小孩單獨使用，亦切勿將本產品放於小孩能觸及的地方。


## 機器發生故障或損壞

- ⚠ 出現異常或故障時，請立即停止使用，並拔出電源插頭，關閉水源。
- ⚠ 除非本說明書特別說明，否則切勿維修或更換洗碗機的任何零件，如有需要，請聯繫售後進行維修，或參看【疑難解答】一節了解相關信息。
- ⚠ 如果電源線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
- ⚠ 處理舊機器時，為防止事故發生，請確保舊機器無法再被使用，請您將舊機器按相關規定處理，如剪斷電源線將門鎖打壞不能關門等。


## 2. 產品組成

### 2.1 包裝隨附物件

隨機物件

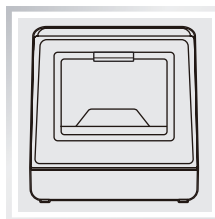


PDW5000

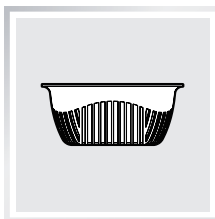


水果籃




量杯

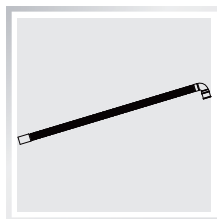

排水管

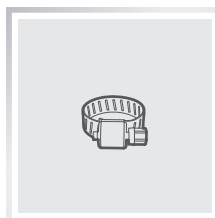


可調節卡箍

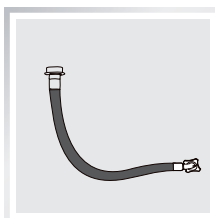

進水管



產品保用證

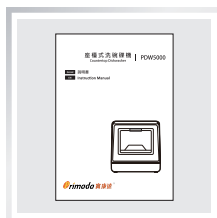

說明書


### 2.2 技術參數

型號	PDW 5000
額定電壓	220-240V
額定頻率	50Hz
額定功率	950W
水箱容量	5L
機體淨重	13公斤
進水水壓	0.04-1Mpa
機身尺寸	428(長) x 425(寬) x 458(高) mm
包裝尺寸	480(長) x 510(寬) x 524(高) mm


\* 因產品持續改善，原廠保留產品更新的權利，如有變動，恕不另行通知。

## 2.3 組件名稱

### [ 正面 ]

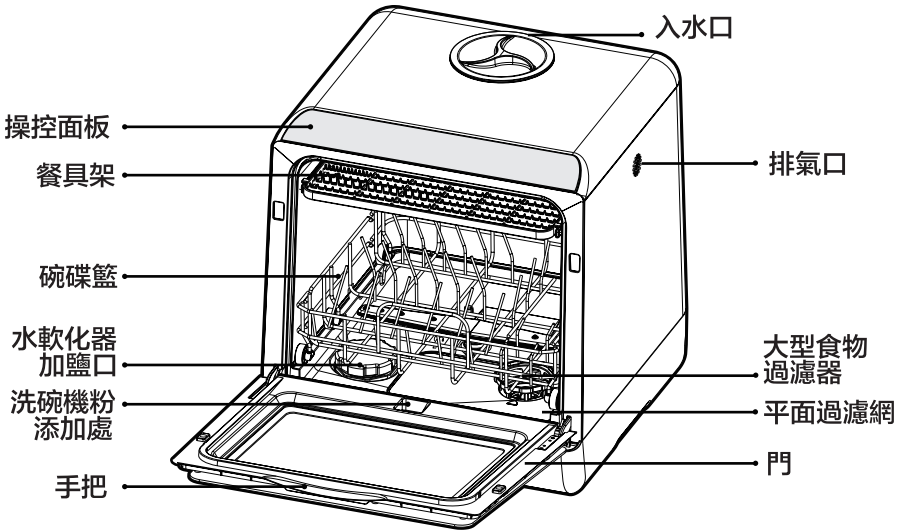

### [ 背面 ]

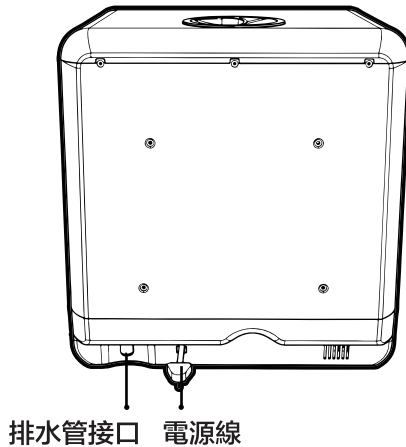

## 2.4 控制面板說明








圖示	功能	程序/說明	清洗時間	清潔劑份量	溫度	風乾時間	乾燥存儲(可選)
Dry	乾燥存儲 按鍵	選擇後可讓機械進入 乾燥存儲模式				60分鐘	循環換氣 73小時
1:00	時間顯示						
Normal	標準模式	熱水洗滌→冷水沖洗→ 冷水沖洗→熱水沖洗	69分鐘	8克	洗滌 55° C 熱沖洗 68° C	60分鐘	循環換氣 73小時
Speed	快洗模式	熱水洗滌→冷水沖洗→ 熱水沖洗	29分鐘	8克	洗滌 50° C 熱沖洗 62° C	60分鐘	循環換氣 73小時
ECO	節能模式	熱水洗滌→冷水沖洗→ 熱水沖洗	59分鐘	8克	洗滌 55° C 熱沖洗 68° C	60分鐘	循環換氣 73小時
MAX	強力模式	熱水洗滌→熱水沖洗→ 冷水沖洗→熱水沖洗	89分鐘	12克	洗滌 55° C 熱沖洗 55° C 熱沖洗 75° C	60分鐘	循環換氣 73小時
Fruit	洗水果 模式	冷水沖洗→冷水沖洗	19分鐘				
Mode	選擇 模式鍵	可按動選擇清洗模式					
Start/Pause	開始 / 暫停鍵	按動以控制開始及暫 停機械運作					
Power	開關鍵	按動以開啟或關機					

\*備註：使用手動注水方式使用本機的情況下，【標準洗】及【強力洗】將會比起接駁水龍頭放水方式少一次沖洗，但總洗我滌時間則相同。

\*備註：機體每次再啟動時，會自動回到上一次使用時的模式(燈會長亮)。可自行點選【 】鍵改用其他模式洗碗。



圖示	功能	說明
	水箱模式指示燈	圖標顯示為白色，表示在水箱模式下工作，圖標為紅色表示缺水。顯示面板缺水圖標由紅變白，表示加滿。
	水龍頭模式指示燈	圖標顯示為白色，表示在水龍頭模式下工作，圖標為紅色表示缺水。
	時間指示燈	當顯示屏顯示時間時指示燈會亮起提示。
	風機乾燥指示燈	當風機乾燥程序使用時，指示燈會亮起提示。
	門沒有關指示燈	當機器門未關上，會有指示燈亮起提示須關門。

## 2.5 故障代碼


顯示	說明	解決方法
E2	排水異常	<ol style="list-style-type: none"> <li>1.檢查排水管，如果出現折彎，將其順直。</li> <li>2.關機並拔下電源插頭，檢查過濾器 and 排水管確保沒有大的食物殘渣堵塞過濾器。</li> <li>3.檢查有無異物堵塞水路。</li> </ol>
E3	溢水異常	將洗碗機往後傾餘30~45度，保持2分鐘以上，使底座中的水能全部流出，並重新啟動，重新啟動依然不能解除，請聯繫售後人員。
E4	溫度傳感器異常	拔電後，稍等數分鐘。再重新接駁電源並重新啟動。若過程中如仍然出現相同故障代碼，請聯繫售後服務人員並告知故障代碼。
E5	通訊異常	
E6	加熱異常	
E7	壓力開關異常	

### 3. 產品安裝說明

#### 3.1 進水管安裝

##### 1. 彎頭端安裝


取出進水管，將其弄平整，將彎頭端對準洗碗機進水口端再擰緊。

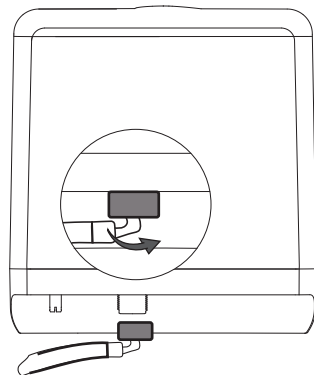

##### 2. 水龍頭端安裝

推薦使用A / B / C三種方式與水龍頭連接。

B方式和C方式需要在櫥櫃後面或水槽位置開孔，以便進水管穿過並進入到櫥櫃下方與水龍頭連接。

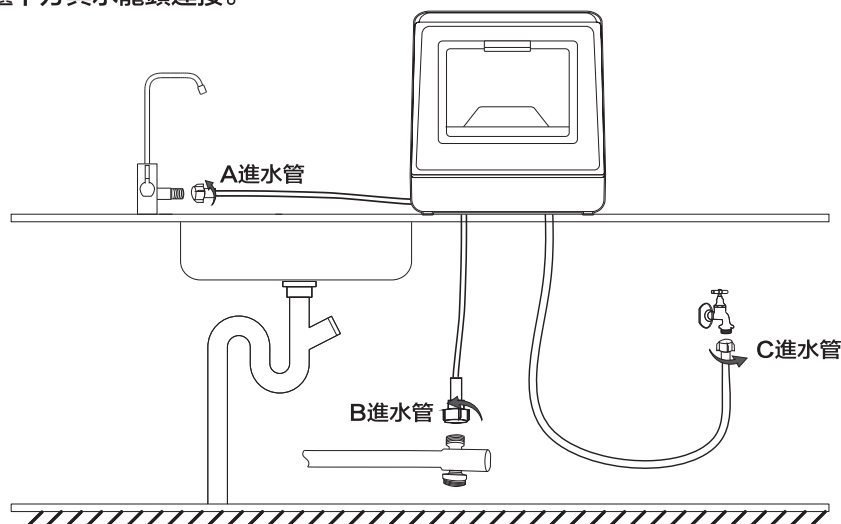


\*\*備註：進水管為4分內螺紋接口，與之連接的水龍頭接口必須是4分外螺紋接口。

## 3.2 排水管安裝及連接

### 1. 安裝


取出排水管，將彎頭端套上可調節卡箍，插接到洗碗機後部出水管口。用螺絲擰緊卡箍，以防漏水。

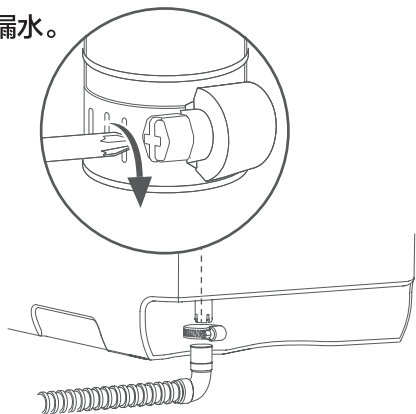

### 2. 連接

排水管可以通過A、B、C三種方式與排水管連接。

 
B方式和C方式需要在櫥櫃後面或水槽位置開孔，以便排水管穿過並進入到櫥櫃下方與下水道連接。

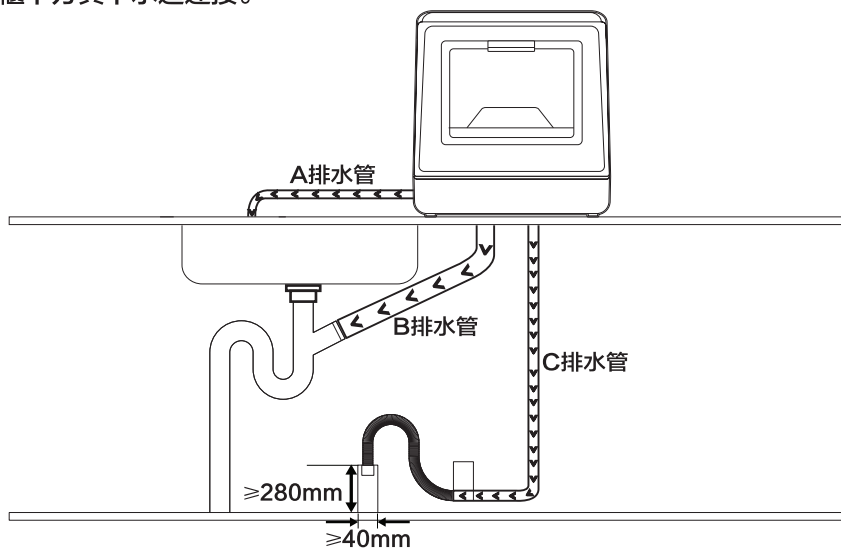


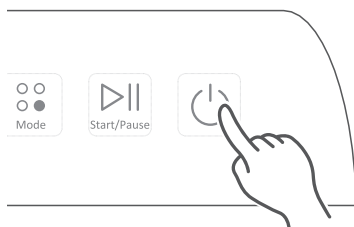
## 4. 產品使用

### 4.1 操作說明

#### 1. 開啟電源

接通電源後，輕觸【】按鍵，開啟機器。

\*\*備註：洗碗程序未結束前，可長按【】3秒強制關機。




#### 2. 添加洗碗機專用粉

打開門，將適當的洗碗機專用粉添加至洗碗粉槽，如是塊狀洗碗粉每次清潔只需添加一塊，並將門關上。


\*\*備註：

- ① 洗水果不需要添加洗碗機專用粉。
- ② 塊狀洗碗粉因品牌不同，體積大小可能有差異，可直接投放進內膽。

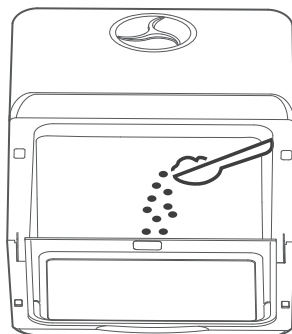


#### 3. 選擇清洗程序

輕觸【】按鍵，所有程序指示燈將循環滾動亮起，可根據不同需求選取清洗程序。

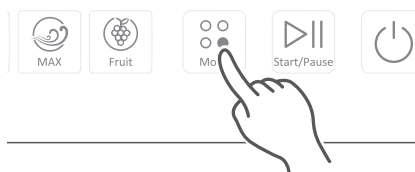

#### 4. 啟動程序

輕觸控制面板上【▶||】按鍵，啟動運行所選程序。啟動3秒後，會自行偵測是否連接自來水。

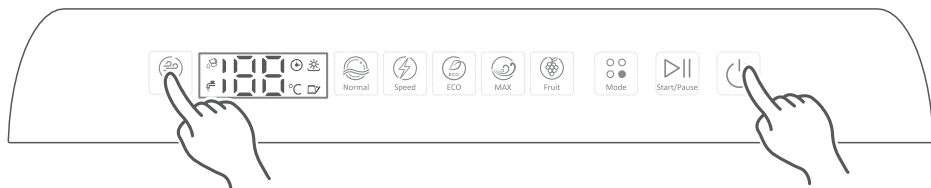

\*\*備註：


- ① 如果圖標【】及【】同時亮紅燈，則表示需要打開水龍頭，並重新啟動程序或手動注滿水箱運行。
- ② 啟動程序後，自動檢測次數超過5次，機器會自動進入待機狀態。
- ③ 若需要中途添加餐具或暫停程序，可輕觸【▶||】按鍵。
- ④ 若要退出程序，請長按【⏻】按鍵3秒，機器自動排水程序結束後會停止。
- ⑤ 在洗滌程序運行過程中，輕觸點亮【】按鍵，可增加73小時循環換氣存儲功能。

#### 5. 餐具洗滌


擁有水龍頭進水洗滌和水箱進水洗滌兩種洗碗模式。

\*\*備註：

- ① 圖標【】為白色，表示在水箱模式下工作，圖標為紅色表示缺水。
- ② 圖標【】為白色，表示在水龍頭模式下工作，圖標為紅色表示缺水。
- ③ 水龍頭模式工作狀態下，若手動將水箱注滿，會自動切換到水箱模式工作。
- ④ 使用附設的水杯往水箱加水(約3杯的水量)，直至機器發出「滴滴滴」聲，顯示面板缺水圖標【】由紅變白，表示加滿。
- ⑤ 水龍頭進水，進水管在連接好的情況下，水龍頭旋開進水。。

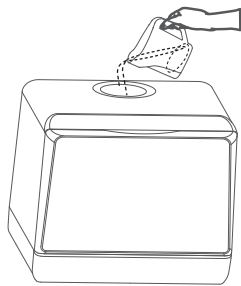


手動注水模式

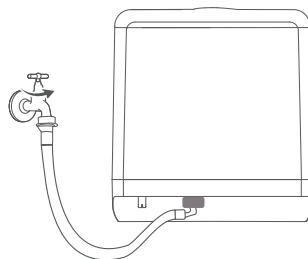

水龍頭進水模式



## 4.2 擺放餐具說明

1. 擺放前，請將大塊食物殘渣清理掉以防堵塞水路及影響洗滌效果。

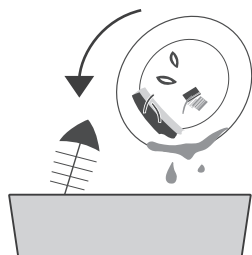

2. 請參考擺放圖，將碗碟逐一擺放。



\*備註：為了使噴射水柱能否充分沖刷污漬面，需將污漬面斜向內側放置。

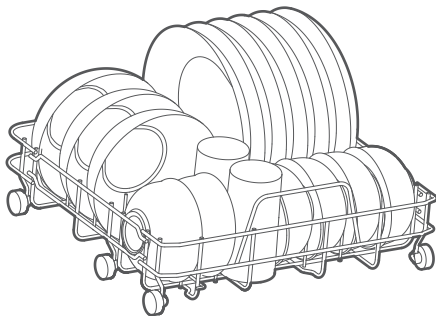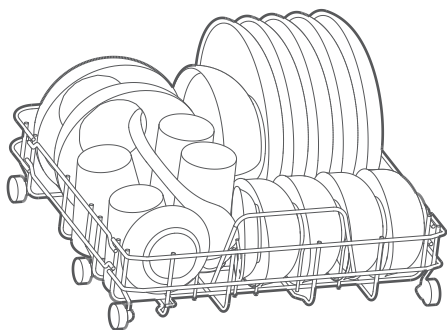

3. 請參考上擱架擺放圖，將勺子、筷子間隔擺放。

另外，上擱架可架在碗籃上面，上擱架可以擺放茶具。

\*備註：部分西餐餐具（刀、叉等）也可擺放，擺放時保持相互間隔。

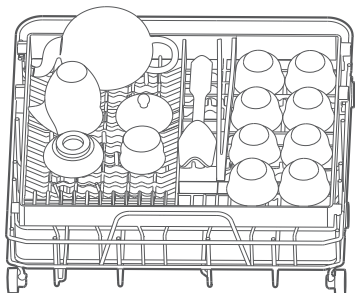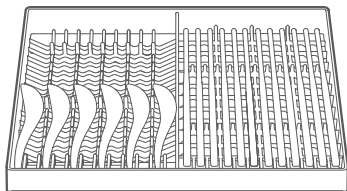


## 4.3 清潔及保養

### 過濾器清潔保養


#### 1. 拆卸

逆時針旋轉過濾器，以完成拆卸。過濾器裝置由三部分組成，取下時可對其逐一清潔。

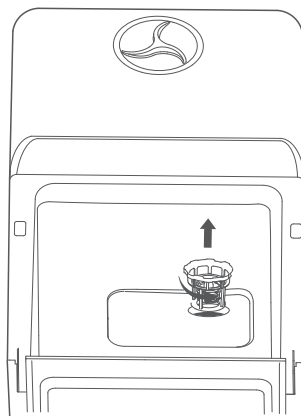


#### 2. 清洗

拆卸的過濾裝置，可於水喉下進行沖洗，也可配合軟毛刷進行清洗。

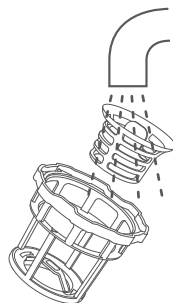

#### 3. 安裝


清洗乾淨後，將過濾器安裝回原來位置，請勿丟失每一件部件，並注意擰緊。

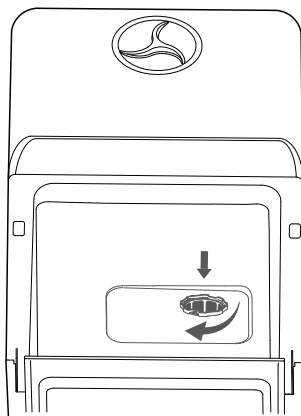

## 噴臂清潔保養


### 1. 拆卸

打開洗碗機門，拉出碗籃。確保腔內溫度正常後，將噴臂向上拉出。

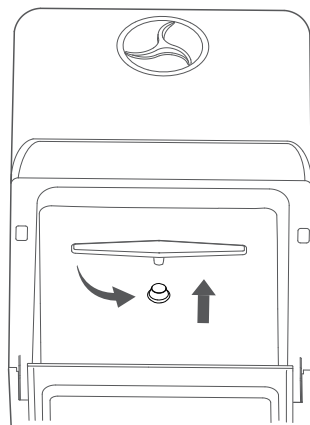


### 2. 清洗

拆卸的噴淋裝置，可於水喉下進行沖洗，也可配合軟毛刷進行清洗。若噴水孔有堵塞請用尖銳物（如牙籤）清理。

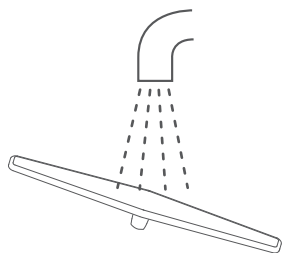


### 3. 安裝

清洗乾淨後，將噴臂安裝回原來位置。安裝完成後，向下按壓確保噴臂安裝好。

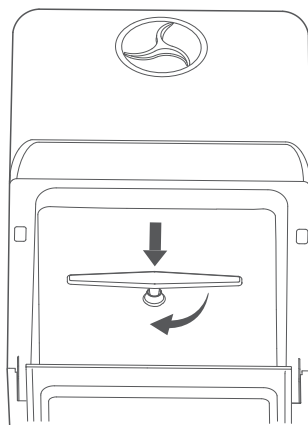



## 5. 產品原理圖

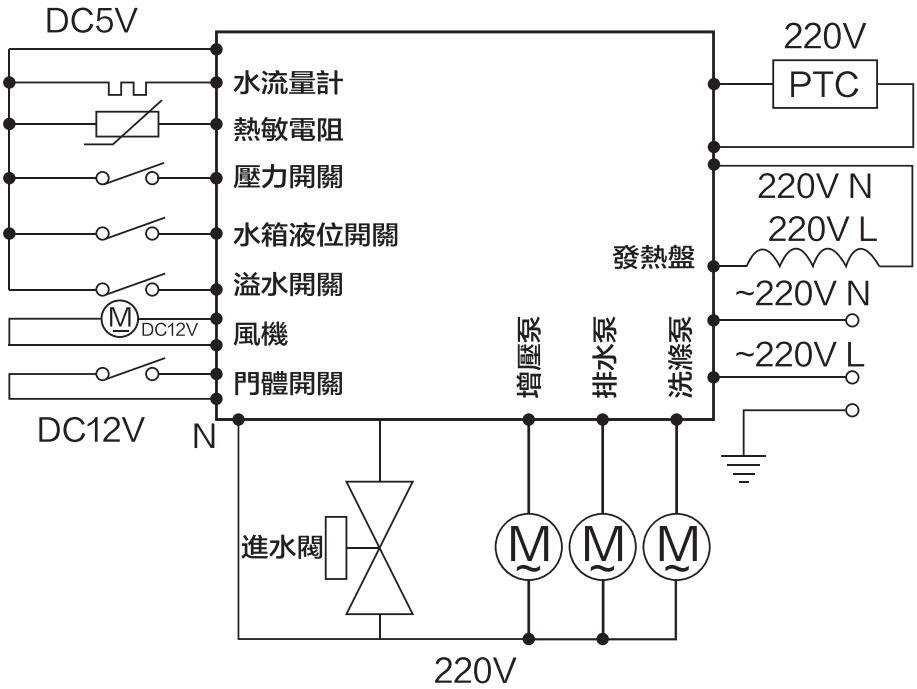

## 6. 疑難排解

產品使用過程中，若遇上以下情況可對照查詢，自主解決。

現象	原因分析	解決方案
餐具洗不乾淨	餐具擺放不正確	參考擺放餐具說明，確保餐具相互間隔。水可以正常沖刷
	噴淋臂運轉不順暢	確保無掉落餐具阻擋噴淋臂
	噴淋臂噴孔堵塞	清潔噴淋臂
	過濾網髒污	清潔過濾網
	過濾網安裝錯誤	參考清潔及保養說明，正確安裝過濾網
	程序選擇不合理	參考控制面板說明，選擇合適程序
	缺少洗碗粉	參考控制面板說明頁分量，添加適量洗碗粉
機械不啟動	水箱未加滿水	繼續加水，直到缺水指示燈熄滅門
	門沒有關閉到位	檢查機器門，是否碰到其他物件，清除障礙物
機械無法進行程序設置	程序正在運行	需終止當前程序或程序運行結束後，重新選擇程序
餐具未乾	選用了洗水果程序	選擇其他程序洗滌
	塑料餐具乾燥效果差	使用前請用乾抹布擦拭乾淨
	餐具堆疊、擺放不正確	正確擺放餐具，確保碗底、杯底等不兜水，餐具開口不要朝上
	洗滌程序結束，乾燥程序未開始	等待附加乾燥程序結束
	木質餐具	洗滌結束拿出，單獨擺放
塑料餐具變色	洗滌溫度過高	使用較低溫度的程序
洗碗粉殘留	水流被阻擋，無法沖刷到洗碗粉	正確擺放餐具，確保不阻擋噴臂轉動，不遮擋洗碗粉槽
	洗滌劑過期	更換洗滌劑

現象	原因分析	解決方案
內膽內有泡沫	洗碗粉使用不正確	<ol style="list-style-type: none"> <li>1.使用洗碗機專用的洗碗粉；</li> <li>2.打開洗碗機，讓泡沫揮發掉；</li> <li>3.添加2-3升水，運行任何一個程序約1-2分鐘後退出可將水排出。</li> <li>4.反覆操作，直到泡沫清除為止。</li> </ol>
機器發生撞擊或「噠噠」聲	噴淋臂碰到餐具	擺放餐具時，請將餐具擺放固定好
	餐具輕微抖動	正常現象，檢查是否有重要餐具未放穩
蒸雞蛋的餐具 有殘留	蛋白變性，與餐具粘合	建議此類餐具手工清洗或清洗完畢後手工補充清洗
程序結束後內 壁潮濕	程序完畢後，水滴在 內壁上殘留	正常現象，非機器故障，如長時間不使用，建議使用乾燥存儲程序

**注意!** 如果電源線損壞，需用專用工具，必須到指定的維修服務中心更換。  
在委託維修服務中心之前，請先檢查以上各點。

---

Congratulations on the purchase of your Primada Countertop Dishwasher! We hope it brings you many years of satisfaction.

Should you encounter situations that have not been properly addressed in this Instruction Manual, please contact our Customer Service Center where a technician can address your specific problem or question.

For more information, please visit the official website:  
[www.primada.com.hk](http://www.primada.com.hk)

The Company reserves the right to make technological and/or design changes to this product for continuous improvement.

Thank you for your choosing!

## Contents




---

<b>1. Important safety Instructions</b> .....	<b>18</b>
<b>2. Package Contents and Technical Specifications</b> .....	<b>20</b>
2.1 Package contents .....	20
2.2 Technical Specifications.....	20
2.3 Components.....	21
2.4 Control Panel .....	22
2.5 Error code .....	23
<b>3. Installation</b> .....	<b>24</b>
3.1 Inlet hose installation .....	24
3.2 Drain hose installation.....	25
<b>4. Product usage instruction</b> .....	<b>26</b>
4.1 Operation.. ..	26
4.2 Placement of the tableware.....	28
4.3 Maintenance .....	29
<b>5. Electrical drawing</b> .....	<b>31</b>
<b>6. Troubleshooting</b> .....	<b>32</b>



# 1. Important Safety Instructions

**READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.  
PLEASE KEEP THE INSTRUCTION MANUAL**

**When using our product, basic precautions should always be followed, including the following:**


 Prohibition	Behavior or action that must be prohibited
 Warning	Behavior or action that must be observed
 Attention	If the operation is wrong, it may cause damage to people, articles and property.

## Place selection





-  This dishwasher is intended for home or similar kitchen use only. It can only be used for washing, drying and storage of household tableware. Please keep away from the gas range when selecting the location. It is recommended to be placed near to the sink to facilitate the placement of the drain. (The maximum length of the drain pipe is 150cm)
-  Do not place this product on a platform that is not stable, wet, smooth, or not heatresistant (such as plastic table cloths, cotton cloth, carpets, etc.) to avoid injury, property damage, etc. caused by electric shock, fire, or falling off.

Note: Please keep the machine horizontally during use, otherwise it may cause the water shortage indicator of the water tank to not go out or the abnormal alarm in the middle.



## Delivery inspection

-  When receiving the product, immediately check the outer packaging or the dishwasher for any signs of shipping damage. If the machine is found to be damaged, defective, missing or damaged, or the power cord or plug is damaged, please do not use it and contact the supplier in time.

## Installation

-  Please use a single-phase power socket with a rated current of 6A/10A and a rated voltage of 220V. Do not share the socket with other appliances, as it may cause fire due to heat.
-  The dishwasher's dedicated power outlet must be reliably grounded. Failure to install a grounding device may cause static induction in the cabinet or other water inlet components. There is a risk of electric shock when a fault or leakage occurs.
-  Do not use the dishwasher within 150mm of a heat source such as a gas range.
-  Do not install or store the dishwasher at temperatures below 0 °C or outdoors.

## Daily use and maintenance

-  If you need to open the door during the dishwasher is running, please press the "Start/Pause" button first, wait for the machine to stop running, then open the door to add or remove the tableware.
-  Do not open the door during the washing process. Due to the high temperature of the washing water, hot air, and dishwasher, it may cause burns. Do not touch the hot water from the drain hose during the washing process. Do not touch the side air outlet.


- ⚠ After the dishwasher is opened, it is forbidden to place other heavy objects on the door to avoid dumping, causing human injury and property damage.
- ⚠ The door should not be in a fully open position as this may cause the appliance to fall over. Do not tilt or move the body while it is running.
- ⚠ When placing knives and other sharp objects on shelves or baskets, the sharp side must be placed face down or horizontally to avoid being scratched.
- ⚠ To ensure excellent washing results, clean the filter assembly at least once a week.
- ⚠ The drain pipe has a certain injection pressure when draining. Please firmly fix the drain outlet to prevent the drain from jumping when it drains, causing the sewage to flow to the platform or floor.
- ⊘ Please use special detergents for dishwashers. Do not use detergents, soaps, washing powders, hand sanitizers, etc.
- ⊘ Please use the special salt for the dishwasher. It cannot be replaced by other types of salt or industrial salt.
- ⊘ Do not forcefully press or pull or press the upper shelf to avoid damage.
- ⊘ When disconnecting the dishwasher power cord, do not pull the plug out with wet hands or the handheld power cord.
- ⊘ Do not pour water into the dishwasher (otherwise, it may cause fire, electric shock, etc.). If you need to connect the inlet pipe, please use the new inlet pipe and you cannot use the old pipe.
- ⊘ Children must stay away from dishwasher-specific consumables. (Otherwise, it may cause burning, even suffocation in the mouth, throat, eyes, etc.)
- ⊘ Keep children away when the dishwasher door is open. No detergent or residue in the residual water in the machine can be directly consumed.
- ⊘ Never allow children to operate the dishwasher. Children under the age of 8 must stay away from household dishwashers unless they are supervised by adults. For children over 8 years of age, persons with disabilities or those who lack experience in life, this machine is not permitted because they are not supervised or instructed by those responsible. Cleaning and maintenance cannot be performed by unsupervised children.

## Failure or damage


- ⚠ In case of abnormality or malfunction, please stop using it immediately, and power plug to turn off the water source.
- ⚠ Do not repair or replace any parts of the dishwasher unless specifically stated in this manual. If necessary, please contact the after-sales service for repair, or see the "Questions and Answers" section for information.
- ⚠ If the power cord is damaged, it must be replaced by a professional from the manufacturer, its service department, or similar department to avoid a hazard.
- ⚠ To prevent accidents when handling old machines, make sure that the old machines are no longer usable. Please dispose of the old machine according to the relevant regulations, such as cutting the power cord, breaking the door lock so that it cannot close the door.

## 2. Package Contents and Technical Specifications

### 2.1 Package contents

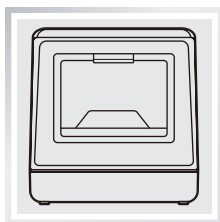


PDW5000

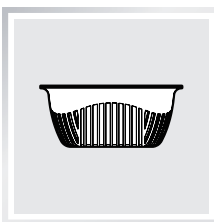


Fruit basket




Water cup

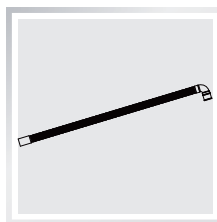

Drain pipe

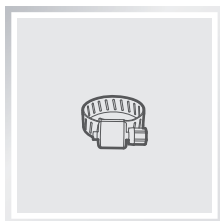

Adjustable card box

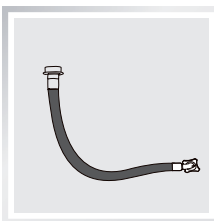

Inlet hose



Warranty Card



Manual


### 2.2 Technical Specifications

Model	PDW 5000
Rated Voltage	220-240V
Rated Frequency	50Hz
Rated Power	950W
Water Tank	5L
Net weight	13kg
Inlet water pressure	0.04-1Mpa
Machine dimensions	428(L) x 425(W) x 458(H) mm
Package size	480(L) x 510(W) x 524(H) mm


\* Package Contents and Technical and design specifications may be changed in the course of continuous product improvement.




**2.3 Components**  
**[ Front ]**

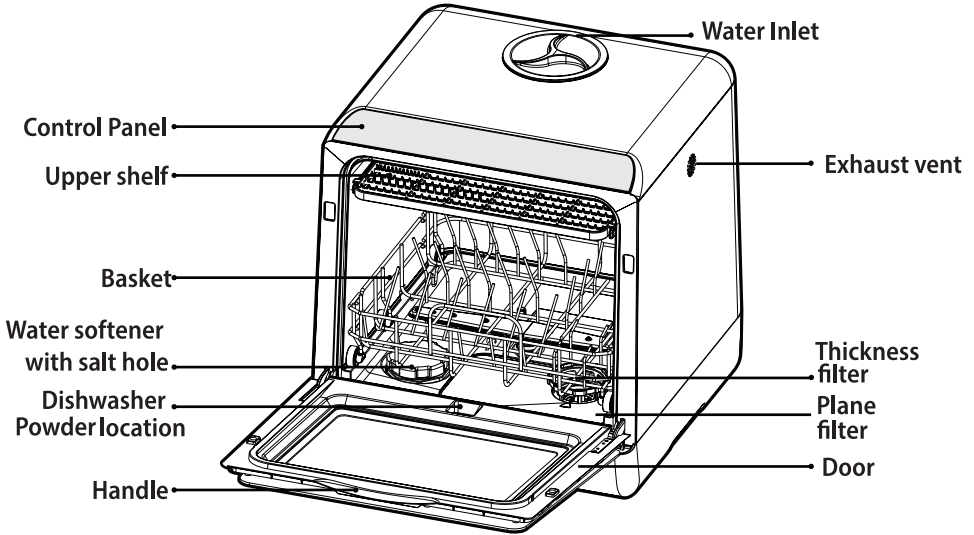

**[ Back ]**

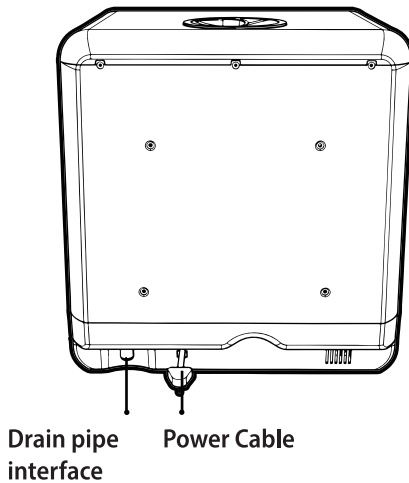

## 2.2 Control Panel

 






Icon	Function	Program/ description	Time	Powder Portion	Temp.	Drying Time	Dry storage (Optional)
Dry	Dry storage Button	Select to allow mechanical access dry storage mode				60mins	Circulating fresh air for 73 hours
100	Time display						
Normal	Normal	Hot water washing> Cold water rinsing x2> Hot water rinsing	69mins	8g	Wash 55°C Rise 68°C	60mins	Circulating fresh air for 73 hours
Speed	Speedy	Hot water washing> Cold water rinsing > Hot water rinsing	29mins	8g	Wash 50°C Rise 62°C	60mins	Circulating fresh air for 73 hours
ECO	ECO	Hot water washing> Cold water rinsing > Hot water rinsing	59mins	8g	Wash 55°C Rinse 68°C	60mins	Circulating fresh air for 73 hours
MAX	Strong	Hot water washing> Hot water rinsing> Cold water rinsing > Hot water rinsing	89mins	12g	Wash 55°C Rinse 75°C	60mins	Circulating fresh air for 73 hours
Fruit	Wash fruit	Cold water rinsing x2	19mins				
Mode	Option Button	Select the working mode					
Start/Pause	Start/ Pause	Press to start or pause the machine					
Switch	Switch	Press to turn on or turn off the machine					

感謝您的選擇!

\*\*Note: By using self water injection mode, [ Normal mode ] and [ Strong mode ] will rinse less once than using water tap connection. But the total washing time will be same.

\*\*Note: The mode will light up to show the last used mode every time restart.

Icon	Funtion	Description
	Water Tank indicator light	Icon in white, represent it works under the self-water injection mode. When its in red, represent is lack of water. When the icon red turns to white, that means the water tank is full.
	Water tap indicator light	Icon in white, represent it works under the water tap mode. When its in red, represent is lack of water.
	Time indicator light	When the display screen shows the time, it will light up.
	Drying indicator light	When the machine under the drying mode, it will light up.
	The door indicator light	Once the machine did not close properly, it will light up.

## 2.5 Error code

Code	Phenomenon	Solution
E2	Abnormal drainage	1.Check drain pipe, be sure the pipe is straight, no bending. 2.Power off, check if anything block filer or drain pipe. 3.Be sure all pipes are not blocked by something.
E3	Abnormal overflow	Tilt the machine to 30~45 degree, let water flow out from base of machine, then restart machine, If this problem occurs again, please contact the customer service and inform the model and the error code.
E4	Abnormal temperature sensor	Please restart the machine. If this problem occurs again, please contact the customer service and inform the model and the error code.
E5	Communication exception	
E6	Abnormal heating	
E7	Abnormal pressure switch	


## 3. Installation

---

### 3.1 Inlet hose installation


#### 1. Connect machine

Insert inlet hose elbow into the water inlet behind machine and tighten the screw.

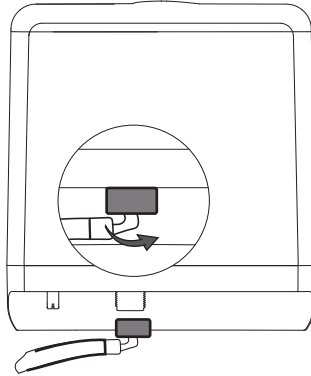

#### 2. Connect tap

A、B、C three options for tap connection, but B and C options need make a hole on or behind cabinet in order the hose can go through cabinet.

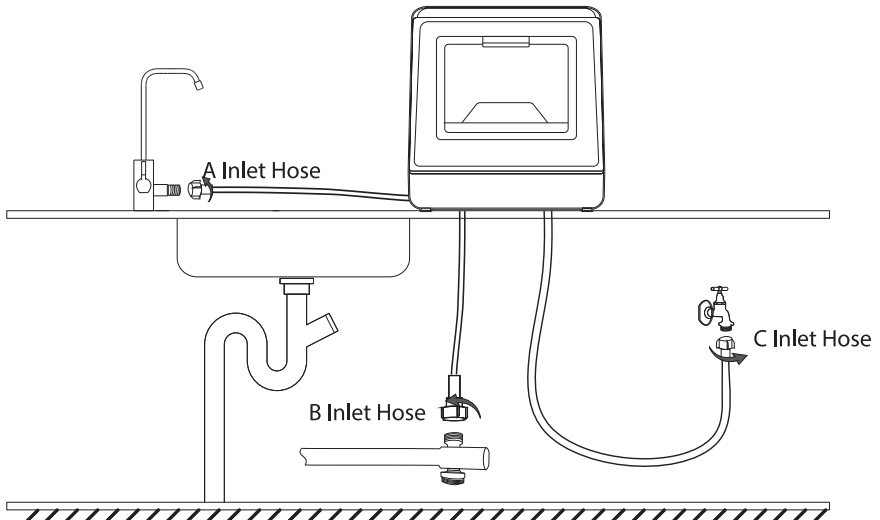


Note: the size of inlet hose elbow is 1/2' with inner thread, the tap size must be 1/2' with outer thread.

## 3.2 Drain hose installation


### 1. Connect machine

\* Insert drain hose elbow to the water outlet behind machine and tighten the collar.

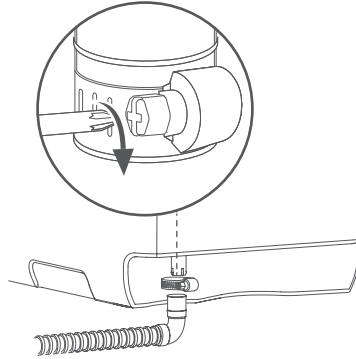

### 2. Connection sewer

A、B、C three options for sewer connection, B and C options need make a hole on or under cabinet in order the hose can go through cabinet.

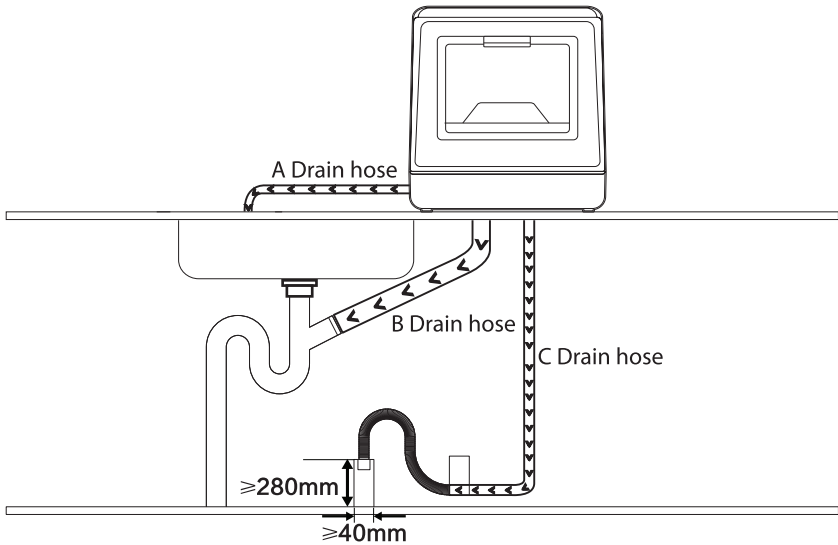


## 4. Product usage instruction

### 4.1 Operation

#### 1. Power on

Press **[⏻]** the button to turn on the dishwasher.

\*\*Note: Press **[⏻]** button for 3 seconds force to turn off the dishwasher.

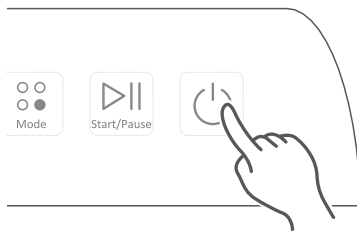


#### 2. Add detergent

Open the door, add moderate detergent powder, or 1 piece detergent block into the machine, then close the door.


\*\*Note:

- ① No detergent when fruit washing.
- ② Dishwashing detergent pod size might be different, please put ONE in the specific location is fine.

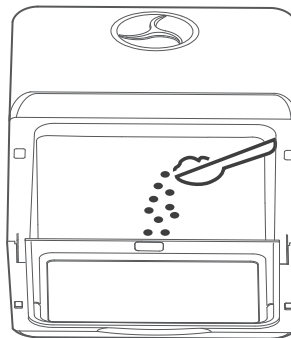


#### 3. Choose the cleaning mode

Press **[○○●]** each of program indicator will light up one by one, select the program you want.

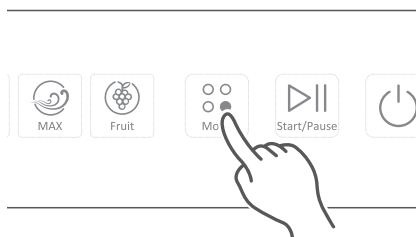

#### 4. Run program

Press **[▶||]** to run selected program, the machine will check water supply automatically.

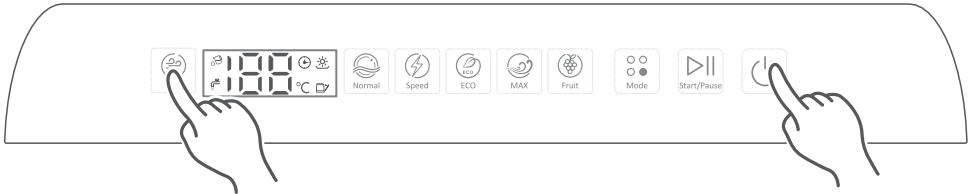

#### \*\*Note:


- ① If the icon **[🚰]** 及 **[🚰]** both in red light, it represent is lack of water. Please refill the water tank or use tap mode, and restart.
- ② If the self-detect mode detect over 5 times, the machine will automatically enter standby mode
- ③ You may press **[▶||]** button to pause the machine and add more tableware during washing.
- ④ Please press **[⏻]** for 3 seconds to quit program, the machine will drain, then turn of.
- ⑤ Touch the **[🌀]** button to add 73 hours' circular wind to keep air fresh inside machine.

#### 5. Dishwashing


The machine has two water supply mode, tap model and tank mode.

#### \*\*Note:

- ① **[🚰]** in white represent under the water tank working mode, when is red means is lack of water.
- ② **[🚰]** in white represent under the water tap working mode, when is red means is lack of water.
- ③ If the water tank if full, it will automatically change to water tank mode.
- ④ Add around 3 measuring cup for the water tank, until the machine alert "Di Di Di" sound. And the **[🚰]** icon turn red to white means the tank is full.
- ⑤ Please make sure the pipe are well connected and turn on the water tap while using water tap mode.

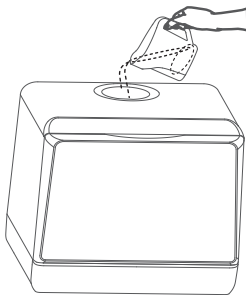


Fill water by hand  
(For tank mode)

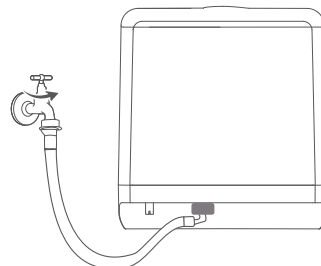

Connet tap  
(For tap mode)



## 4.2 Placement of the tableware

1. In order to avoid clogging the filter and affecting the performance of the dishwasher. Please get rid of large food residue on tableware.


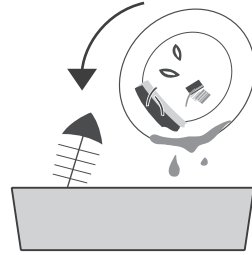


2. Please place all the tableware refer to the photo below.

\*Note: In order to fully clean tableware, please tilt tableware internally or put stained face down.

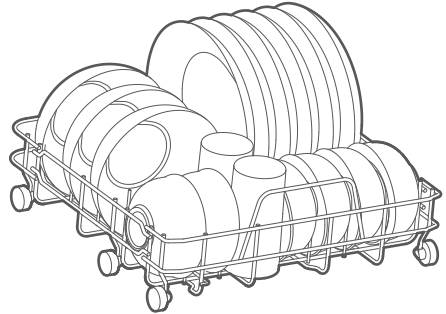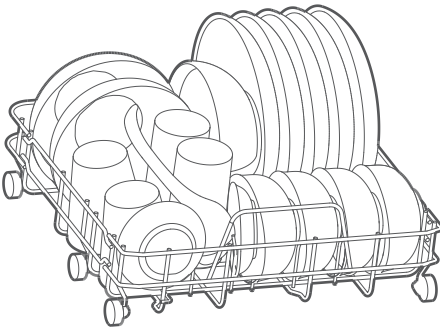

3. Please make reference to below pictures, put spoons, fork and knives on the tray. Keep enough gap between them. And, tea tools can be put on it to clean.

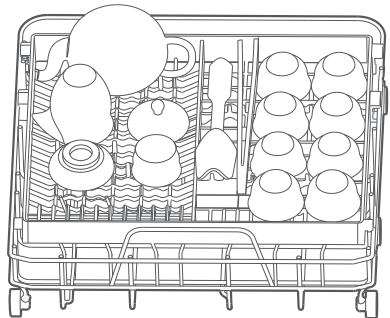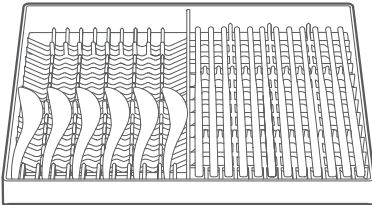




### 4.3 Maintenance

#### Clean the filter


##### 1. Disassemble.

Rotate anticlockwise to disassemble the filter set, which have 3 parts including filter mesh, main filter and fine filter.

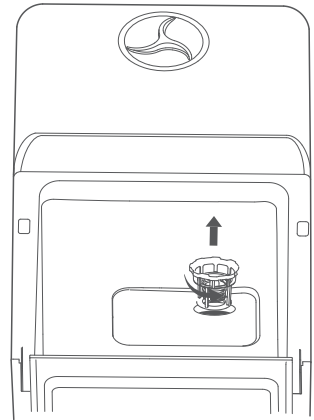


##### 2. Clean

Use water to flush and brush each part of filter

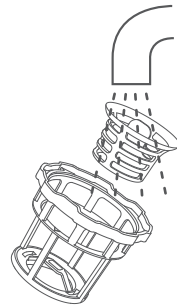

##### 3. Assemble


After cleaning, rotated clockwise to close the filter set.

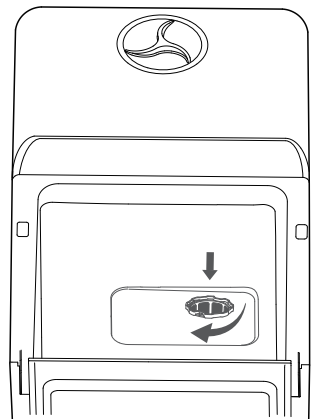

Clean the spray arm


1. Disassemble.

Open the door, take out the basket, then pull out up and down spray arm.

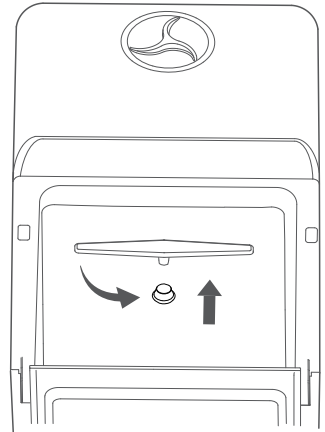


2. Clean

Use water to flush and brush each spray arm, use tools with sharp point, like needle to clean holes if needed.

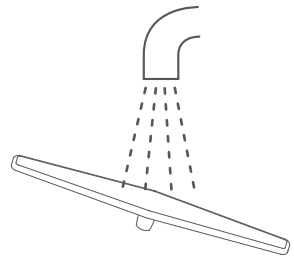


3. Assemble

After cleaning, please press each arms into positions, make sure the arms can move smoothly.

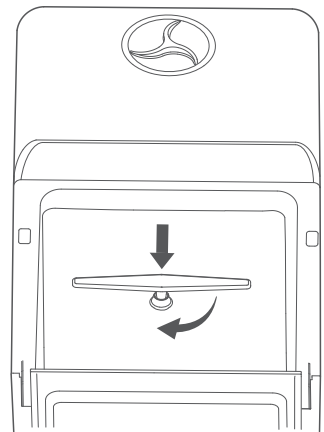

## 5. Electrical Drawing

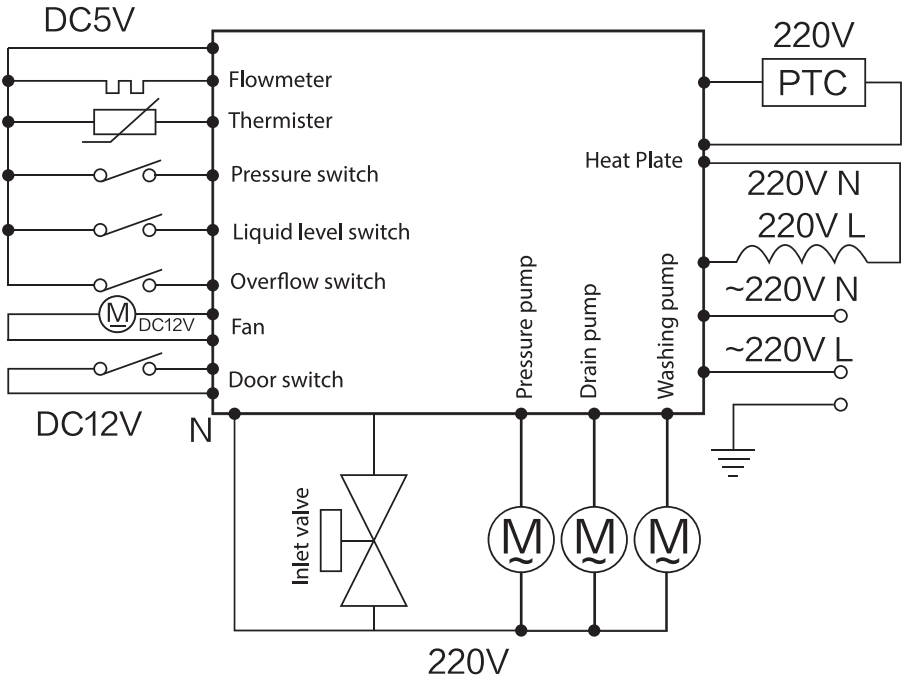

## 6. Trouble shooting

Problem	Reason	How to deal with
Tableware is not clean	Incorrect tableware loading	Be sure enough gap between tableware.
	Spray arm trapped	Be sure nothing trap the spray arm.
	Blocked spray arm	Clean spray arm.
	Blocked filter	Clean filter set.
	Incorrect filter installation	Correctly assemble filter set.
	Incorrect program	Select appropriate washing program.
	No detergent	Add detergent (block/powder/liquid).
Machine did not start	Water shortage	Add water till the indictator light off.
	Door do not close fully	Check the door if anything stop closing fully.
Can not select program	Start washing	Re-select program after stop in-progress program or wait in-progress program finish.
Tableware are not dry	Inappropriate program	Select appropriate program
	Plastic tableware	Wipe to dry these plastic tableware by hand
	Incorrect tableware loading	Correct tableware setting in accordance
	Drying program not finish yet	Wait the dry program finishing
	Wooden tableware	Wipe to dry these wooden tableware by hand
Discoloration of plastic tableware	Over high washing temperature	Select program with lower temperature
Detergent left	Spray arms are trapped	Be sure spray arm move smoothly
	Poor quality detergent	Use qualified detergent

Problem	Reason	How to deal with
A mount of foam in the machine	Use incorrect detergent	<ol style="list-style-type: none"> <li>1. Use special detergent for dishwasher.</li> <li>2. Open machine, wipe out foam by hand.</li> <li>3. Fill 2-3L water into machine, select any program, after 1-2 mins, the foam will be drained, can repeat the process if needed.</li> </ol>
Abnormal sound in the machine	Spray arm knock tableware	Correctly loading the tableware
	Tableware move slightly	Fix tableware before washing
Egg custard left on the tableware	Portein solidification	Wash the tableware with egg custard by hand
Water drops left inside of machine	Drying time is not enough	Selet "☉" program

# **Primada**® **寶康達**

分銷商 Distributor:



愛家名品有限公司 iPlusHome Limited

[www.iplushome.hk](http://www.iplushome.hk)

總代理 Sole Agent:

昇鋒國際有限公司 Pro Logic International Limited

香港九龍紅磡鶴園東街4號恆藝珠寶大廈1樓106-107室

Unit 106-107, 1/F, Heng Nagai Jewelry Centre 4 Hok Yeun Street East,

Hung Hom, Kowloon, HK

Tel: (852) 2365 0655



[www.primada.com.hk](http://www.primada.com.hk)

