

SPEEDY 快速智能煲 | PC6610AI INTELLIGENT COOKER PC8610AI

ZH-HK

說明書

EN

Instruction Manual



Primada 寶康達®

1. 安全注意事項

ZH-HK	說明書	2
EN	Instruction Manual	20

感謝您選購寶康達產品 — 快速智能煲！

希望您使用愉快，我們相信這款全新的快速智能煲將為您帶來更好的生活體驗。

使用中如果遇到任何問題，請聯絡我們的售後服務中心，將有專業人員為您解答問題。

如欲了解更多產品資訊請登入：www.primada.com.hk

本資料產品以實物為準，原廠保留產品更新的權利，如有變動，恕不另行通知。

感謝您的選擇！

目錄

1. 安全注意事項	2
2. 產品組成	3
2.1 包裝隨附物件	3
2.2 技術參數	3
2.3 組件名稱	4
3. 電器原理圖	6
4. 產品使用	7
4.1 使用前須知	7
4.2 操作說明	8
4.3 顯示器與指示燈指引	13
4.4 提醒	14
4.5 烹飪參考	14
5. 清洗與保養	15
6. 疑難排解	17

1. 安全注意事項

使用電器產品前請仔細閱讀此說明書的所有內容。
請保管好此說明書。

使用電器產品時，請保持一貫的警惕性，遵循以下事項：

1. 一般電器產品並不是為體質、感覺或智力有障礙人士（包括小孩），或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。
2. 請小心看管小孩，以確保他們不會把此電器當作玩具。
3. 禁止將產品放在易燃物品及潮濕環境中使用。
4. 加入內煲的食物和水的高度必須按產品使用內操作說明的第2點規定。
5. 不能損傷密封圈，不能用其他膠圈取代，不能使用張力圈來增加密封。
6. 不能用手或其他工具強行扭動煲蓋內側鋼圈。如果鋼圈脫落煲蓋，請停止使用，更換煲蓋。
7. 防堵罩應經常清洗，保持清潔。
8. 浮子閥未落下時，切勿強行開蓋。
9. 限壓放氣閥上不得添加任何重物或以其他物體代替。
10. 內煲底部與發熱盤接觸面應保持清潔。內煲不能放在其他熱源上燒煮，不能用其他容器取代內煲。
11. 內煲碰撞變形後，請勿使用，否則會造成漏氣。
12. 內煲塗有不粘塗層，為防止劃傷內壁塗層，請使用木質或塑料飯杓。
13. 保溫最長時間24小時，使用時宜不超過6小時，以免影響烹飪效果。
14. 在加熱烹飪過程中，發生鍋蓋周邊大量排氣，屬於非正常工作現象，此時泄壓安全裝置起了保護，請立即拔下電源插頭，停止使用，送本公司維修點檢修。
15. 在使用過程中，發生警報聲，並且顯示器顯示如下故障代碼，請停止使用。送本公司維修點檢修。

顯示器代碼	故障	處理方法
E1	傳感器斷路	送到維修中心檢查
E2	傳感器短路	送到維修中心檢查
E3	超溫	送到維修中心檢查
E4	信器開關失靈	送到維修中心檢查

16. 搬移產品時，請端提手，勿提煲蓋手柄。
17. 用戶請勿自行拆卸產品，或用其他零件更換，產品僅可使用本公司的零配件。
18. 提起限壓放氣閥放氣時，請勿將手或臉靠近限壓放氣閥放氣管，工作時請勿觸摸煲蓋，以免燙傷。
19. 烹調結束後，食用前必須先將電源切斷。
20. 工作時或結束後煲蓋未達到冷卻狀態，切勿用手觸摸煲蓋，以免燙傷。
21. 禁止用抹布堵塞煲蓋與外煲扣合處周邊，以免影響安全性。
22. 當煲內還有氣壓時，不能強行開蓋，以防止意外。
23. 提起煲蓋時，請小心由限壓放氣閥槽位流出的熱水燙手。


2. 產品組成

2.1 包裝隨附物件


隨機物件




主機

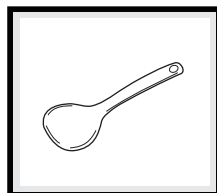


飯勺

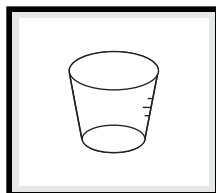

量杯

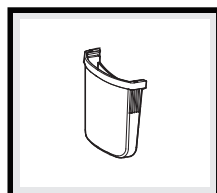

集水盒

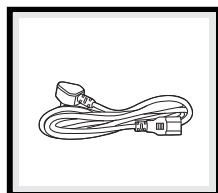

電源線



說明書



食譜



產品保用卡



2.2 技術參數

型號	PC6610AI	PC8610AI
電壓	220-240V	220-240V
功率	1000W	1200W
容量	6公升	8公升
工作壓力	0-70kpa	0-70kpa
保溫溫度	60-80° C	60-80° C
內鍋口徑	22cm	24cm
產品尺寸	368x368x368 mm	375x375x445 mm
總重量	6kg	8.6kg
淨重	5kg	6.5kg

* 因產品持續改善，原廠保留產品更新的權利，如有變動，恕不另行通知。


2.3 組件名稱

主機

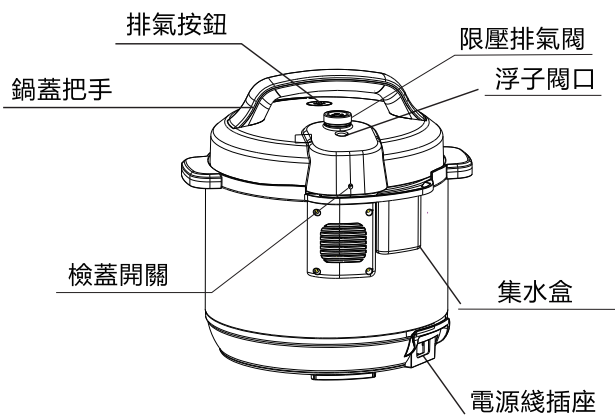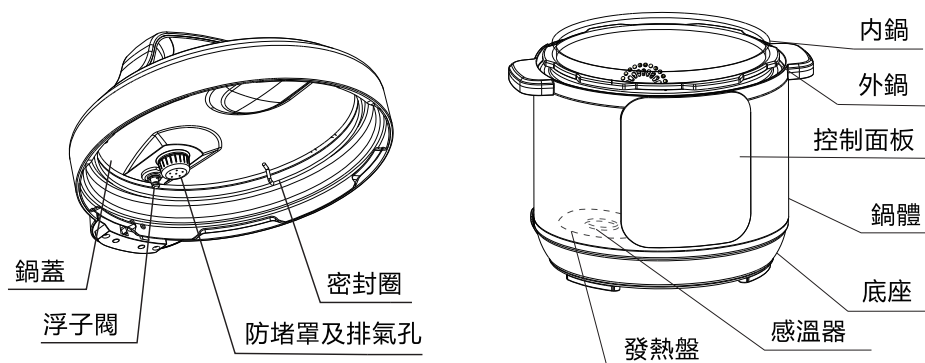


2.3 組件名稱

控制面板

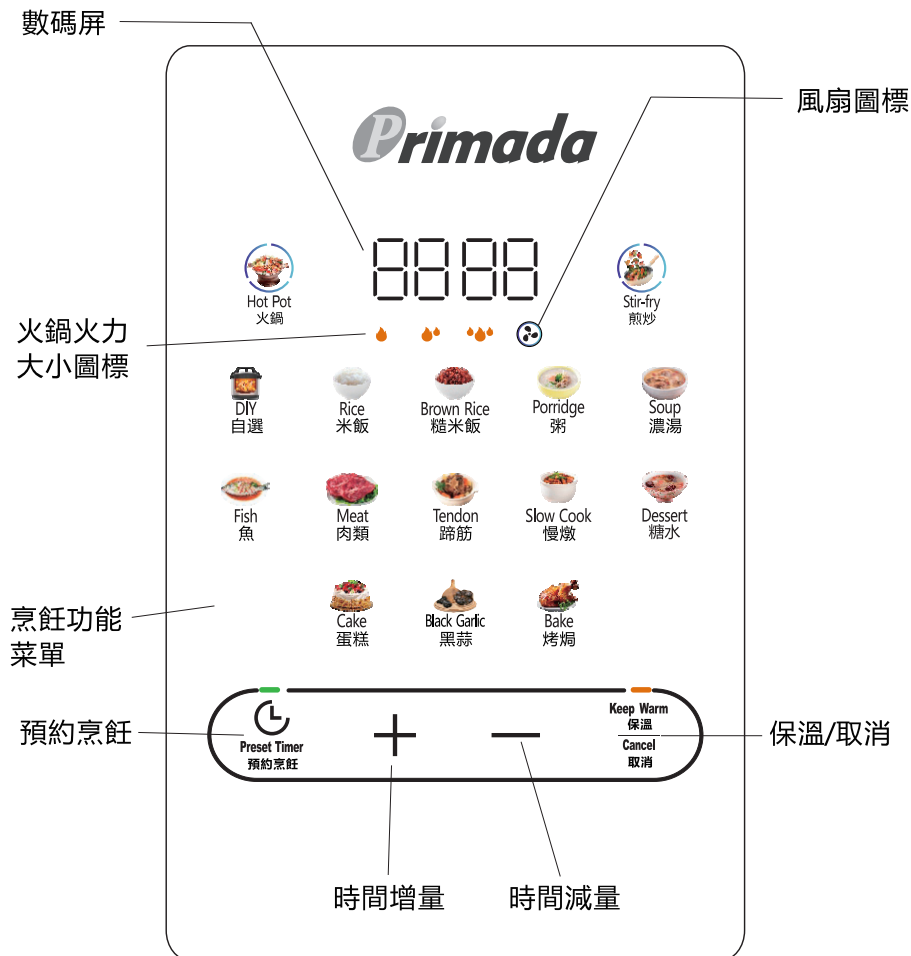

3. 原理電器圖

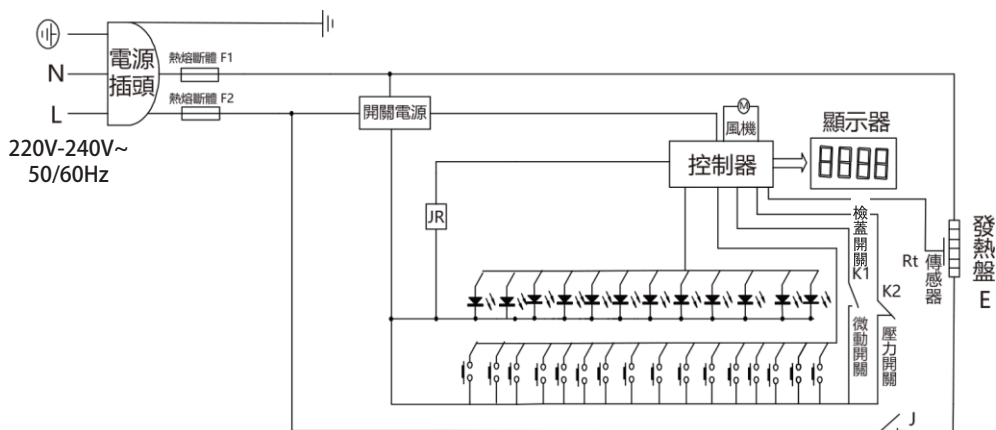


4. 產品使用

4.1 使用前須知



首次使用

- 將所有包裝拆除。
- 取出所有隨附物件。
- 用軟布清洗與食物直接接觸的所有物件。

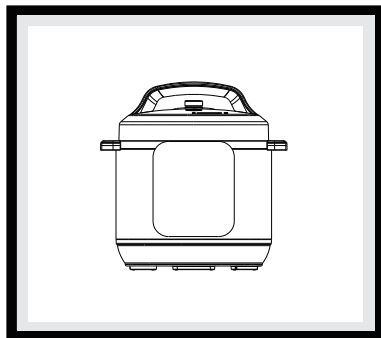

日常使用


- 檢查密封圈是否正確安裝在鍋蓋上，密封圈卡槽必須卡在固定支架卡上，並均勻貼於鍋蓋內側。
- 檢查排氣孔、浮子閥是否通暢。如有堵塞，必須清洗乾淨。

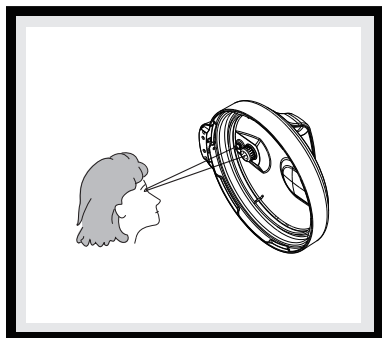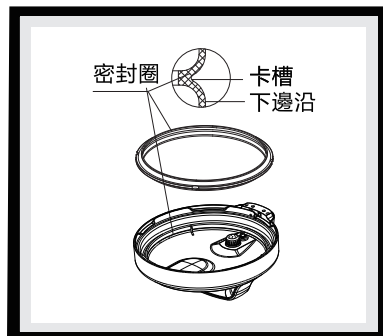

4.2 操作說明




第1步: 開蓋

- 開蓋前，請確認浮子閥是否落下。
- 用手握緊煲蓋手柄，逆時針方向旋轉煲蓋至旋不動，向上提起即可打開煲蓋。

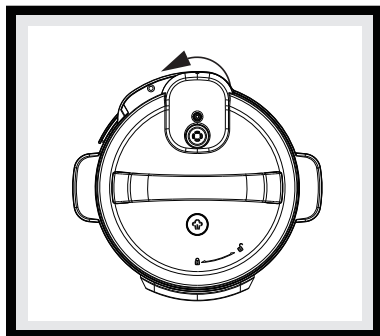

第2步: 放入食材

- 食物和水不得超過煲內高度的 $\frac{4}{5}$ 。
- 水中易膨脹的食物不得超過煲內高度 $\frac{3}{5}$ 。
- 食物和水不得少於煲內高度的 $\frac{1}{5}$ 。

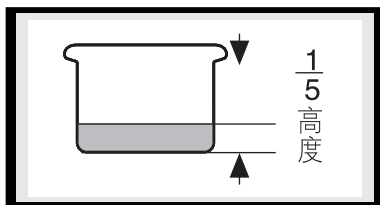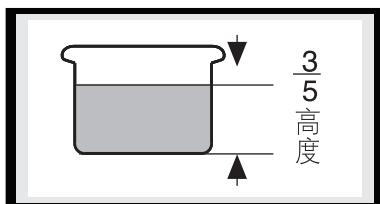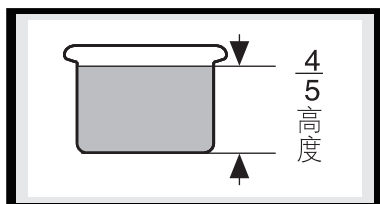


提示

6公升的最大米量是9杯。8公升的最大米量為12杯。
建議以1:1的份量煮米飯; 1杯米配1杯水。用戶亦可根據不同的米質及個人口味而適當調整水量。


第3步: 將內煲放入智能煲

- 放入前，先把內煲及發熱盤抹乾淨，外煲內及發熱盤表面不得放入雜物。
- 放入後，左右輕輕旋轉內煲，保持內煲與發熱盤接觸良好。

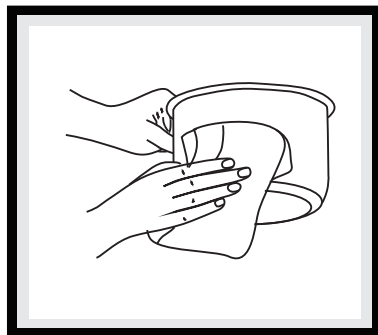


第4步: 合蓋

- 檢查密封圈是否已放入煲蓋內側鋼圈上
- 檢查排氣孔、浮子閥孔是否暢通。
- 手握煲蓋手柄，將煲蓋後端對準合蓋標示處方向，往下蓋在煲體上，然後順時針旋轉煲蓋至旋不動，並聽到“咔嚓”扣合聲。
- 檢查限壓排氣閥是否正確安裝在限壓排氣關座上。

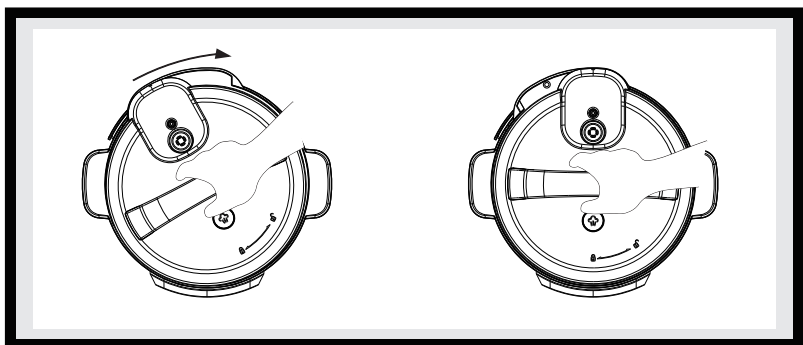


第6步: 檢查限壓放氣閥

- 放置好限壓放氣閥，根據圖示放置，並檢查浮子是否落下（未加熱工作前浮子閥是落下的）。
- 如未啟動煲的情況下，可在浮子閥口用筷子等細長物捅一下，使浮子閥下降。

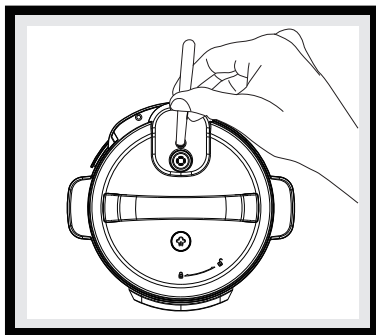


溫馨提示

- 當浮子閥未定期進行清洗或曾經煮流質食物，有機會導致浮子閥被四周的黏性流質食物殘餘物黏住不能自動掉下，而未能順利開蓋。
- 在操作期間，為確保用家安全，請勿將手和面靠近浮子閥處，以免發生危機或燙傷。

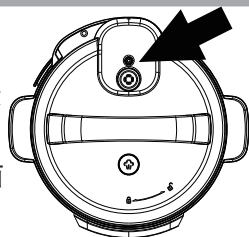

第7步: 連接電源

- 將電源線插到煲背面的插座，另一端插入電源插座。
- 接通電源，蜂鳴器響一聲(1秒)。同時所有LED指示燈亮1秒後會熄滅。
- 此時任意按面板上的任何按鍵，面板上的菜單功能圖示會亮起。若沒有選擇任何功能，5分鐘後會自動熄屏回到待機狀態。

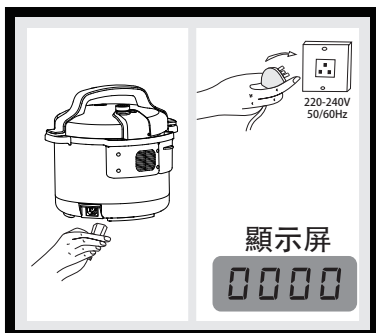

特別注意

為保障安全，須將鍋蓋合蓋到位，否則無法啟動工作。

(* 【煎炒】及【火鍋】菜單不包括在內。)

第8步: 選擇烹飪功能

選擇已預設的功能 (菜單)

- 按一下屏幕，再選擇所需烹飪功能。
- 選擇的功能指示圖案會閃爍亮，而數碼屏幕會顯示其功能之預設保壓時間 / 限溫工作時間。
- 選好後5秒內無任何按鍵操作，蜂鳴1聲（0.2秒）顯示屏顯示【C+滾動圖案】，代表煲內開始加熱。

更改保壓時間/工作時間設定


- 按一下屏幕，再選擇所需烹飪功能。
- 選擇的功能指示圖案會閃爍亮，而數碼屏幕會顯示其功能之預設保壓時間 / 限溫工作時間。
- 可按【+】或【-】鍵調節其保壓時間/工作時間以1分鐘為其單位，可循環設定(如長按【+】或【-】可加快調節速度。)

其他功能介紹

- 【慢燉】
按【+】或【-】鍵調節，顯示屏會顯示【001.0】、【001.5】、【002.0】、【002.5】及【003.0】，以代表1小時至3小時的調節。當工作完成後會自動轉保溫。
- 【黑蒜】
按【+】或【-】鍵調節，可調節時間為【168】至【360】小時。啟動後會有蜂鳴聲。機器開始運作後會以1小時為單位，並倒時方式顯示。當工作完成後會轉為待機狀態。
- 【火鍋】
按菜單後會顯示C+滾動圖案，按【+】或【-】鍵可調節熱力大小。
熱力(小)【●】、熱力(中)【●●】、熱力(大)【●●●】。

特別注意

【火鍋】、【煎炒】、【蛋糕】此三個功能不會顯示時間。當選擇菜單後會直接開始加熱。

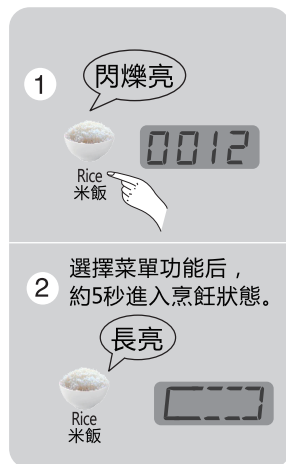

預約定時

- 選擇好所需菜單及調節保壓時間後，再按【預約烹飪】鍵。（*可倒轉步驟設置）
- 按【+】或【-】鍵，而設定預約時間。
- 預約時間指設定多少時間後，開始加熱工作。

第9步: 自動風冷解壓

- 菜單烹調完成後，系統會自動轉入風冷程序降壓（風機開始啟動工作）。
- 菜單指示燈會熄滅，數碼屏幕顯示【COOL】，代表風冷解壓中。
- 【E】開始閃爍亮，當風冷解壓結束後，轉自動轉為保溫。【⊕】長亮，保溫指示燈都會長亮，蜂鳴聲會長響(提示10秒)。數碼顯示屏會顯示【END】。

第10步: 烹調完成，安全排氣

- 當數碼顯示屏會顯示【END】，可以先按【保溫/取消】鍵，再按排氣鍵排氣(如右圖指示位置)。
- 確保浮子閥落下後，即可開蓋。

第11步: 開蓋

- 拔下電源插頭。
- 手握煲蓋手柄，逆時針旋轉煲蓋至旋不動，向上提起煲蓋即可。
- PC6610AI 設有可左右放置煲蓋功能。

1 選擇所需烹飪功能

2 按一下



3 按“+”“-”鍵調整所需時間

4


預設時間 05:12 保壓時間

5

設置預約時間後
約5秒後進入預約狀態

特別注意

【火鍋】、【煎炒】及【黑蒜】菜單沒有風冷降壓功能。

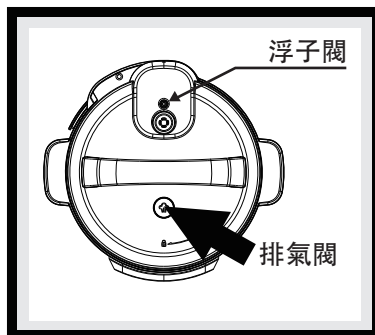



特別注意

- 屏幕未顯示END時，如想提早開蓋可按【保溫/取消】鍵取消工作。按住排氣按鈕排氣，直至浮子閥落下後即可開蓋。
- 如果煮流質食物（粥類、粘性液），必須等待風冷解鎖工作完成，浮子閥落下及顯示【END】後才可開蓋，否則粘性液會在排氣管噴出。

4.3 顯示器及顯示燈指引

顯示器

- 選擇菜單，菜單指示燈會長亮，顯示器顯示：
【C+滾動圖案】，表示開始加熱。
- 如選擇可調整時間的菜單，菜單鍵會閃爍，顯示器會顯示時間並閃爍。當時間設定後，繼續閃爍6秒，顯示器會顯示【C+滾動圖案】。菜單鍵會長亮，表示開始加熱。
- 選擇菜單，菜單鍵長亮，表示已選定。如設定了預約功能，定時鍵會燈亮，顯示器會顯示【預約時間】，並開始倒數。倒數結束後，會自動進入加熱狀態，開發烹調。
- 加熱一段時間後，煲內壓力達到其烹飪壓力或達到指定溫度後，顯示器會顯示
【P+滾動圖案/時間】。
* 慢燉功能會顯示時間。
- 工作時間完成後，顯示器會顯示【COOL】，表示進入風冷解鎖工作。風冷解鎖完成後顯示器會顯示【END】，進入保溫狀態。保溫燈長亮，此時烹飪已結束。

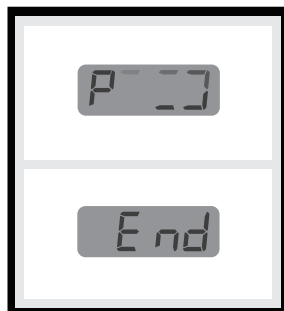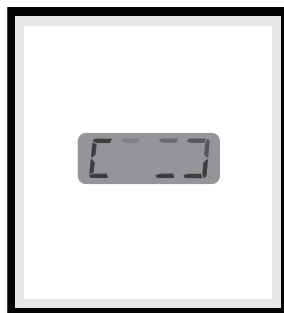

保溫/取消和開蓋指示燈

- 工作時間完成後會自動轉入保溫狀態。最長的保溫時間為24小時。當智能煲於保溫狀態下，按【保溫/取消】鍵，可以取消保溫功能。
- 在設定/烹調過程中，按【保溫/取消】鍵，可以取消設定及工作狀態。
- 在待機狀態下，按【保溫/取消】鍵，會進入保溫狀態。如要取消保溫功能，按【保溫/取消】鍵，可取消保溫。
- 如機身處於保溫狀態時，煲內仍有壓力，將不能直接開蓋。必須要待煲內壓力下降，風扇圖標長亮，表示可以按下排氣按鈕排氣，再安全開蓋。



4.4 提醒

- 針對米飯、綿粥、濃湯、豆類、肉類、蹄筋菜單，設有煲蓋檢測保護。
- 如煲蓋沒有鎖到位，當按下菜單時，會蜂鳴三聲提示煲蓋沒有鎖好，並轉回待機。
- 在工作過程中，如煲蓋被解鎖/打開，產品會蜂鳴一聲提示煲蓋打開，並停止加熱，直至煲蓋鎖到位，繼續當前工作。

4.4 烹飪參考

類型	菜單	默認時間	可調時間範圍	檢測鍋蓋	時間顯示
無壓力	火鍋	無	不可調	不檢測	不顯示時間
	蛋糕	35分鐘	不可調	不檢測	顯示時間並倒數
	煎炒	30分鐘	不可調	不檢測	顯示時間並倒數
	烤焗	30分鐘	1-99分鐘	不檢測	顯示時間並倒數
	黑蒜	PC6610AI-240小時 PC8610AI-192小時	168-360小時	不檢測	顯示時間並倒數
壓力烹調	米飯	12分鐘	6-20分鐘	檢測	顯示時間並倒數
	糙米飯	15分鐘	6-20分鐘	檢測	顯示時間並倒數
	粥	20分鐘	10-40分鐘	檢測	顯示時間並倒數
	肉類	12分鐘	9-25分鐘	檢測	顯示時間並倒數
	蹄筋	22分鐘	20-99分鐘	檢測	顯示時間並倒數
	糖水	22分鐘	10-40分鐘	檢測	顯示時間並倒數
	魚	5分鐘	3-10分鐘	檢測	顯示時間並倒數
	自選保壓	1分鐘	1-99分鐘	檢測	顯示時間並倒數
	濃湯	30分鐘	10-40分鐘	檢測	顯示時間並倒數
	慢燉	1小時	1-3小時	檢測	顯示時間並倒數
	保溫	24小時	不可調	不檢測	-
	預約定時	24小時	-	-	-

5. 清洗與保養


清潔方法

- 清洗前請先拔下電源插頭。
- 用抹布將煲體擦乾淨。禁止將煲體浸入水中清洗或用水噴淋。
- 將集水盒拆下來清洗，用濕布擦乾淨上座。
- 用水清洗煲蓋內側包括：密封圈、限壓放氣腳、防堵螺母、放氣管、浮子閥，然後用抹布擦乾淨。
- 用細刷子清洗限壓放氣閥底座。

煲蓋配件拆卸

浮子閥


- 先拆下浮子閥上面的小膠圈，再從浮子閥口取出浮子閥。
- 一般情況下，請不要拆開浮子閥。
- 再次使用時，請先清洗浮子閥，以免浮子疊被食物黏住，而導致未能順利開煲蓋。

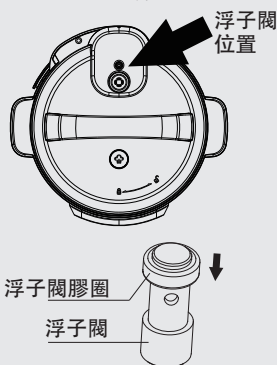


防堵蓋

- 將防堵蓋拔下，用水清洗。

將防堵蓋拔下

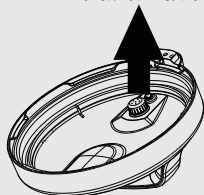


- 清洗後，請檢查防堵閥及浮子閥有否安裝到位。

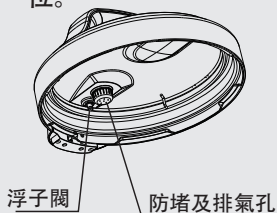

密封圈

- 將密封圈從煲蓋輕輕向上拉出。
- 清洗後，將密封圈裝回到鋼圈上。
- 請勿用力拉扯密封圈，如拉扯變形，會影響密封效果。
- 請定期更換密封圈，以確保密封烹調之效果。

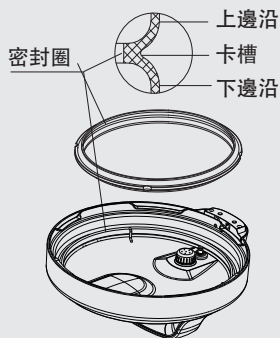


清洗內鍋

- 內鍋要輕拿輕放，避免碰撞後變形。
- 內鍋宜用溫清水或溫清水加清潔劑清洗，為了不損傷內鍋，請不要敲打或摩擦內鍋！不要把子或餐具放進內鍋，不要用以去污粉、鋼絲球或尼龍刷等摩擦性大的東西擦洗內鍋。
- 可用海綿或非金屬軟刷清洗內煲，然後用抹布擦乾。



清洗發熱盤

- 飯粒或其它雜物可能會附著在發熱盤上，可用乾軟布擦掉。
- 注意：不能用硬物敲打發熱盤。

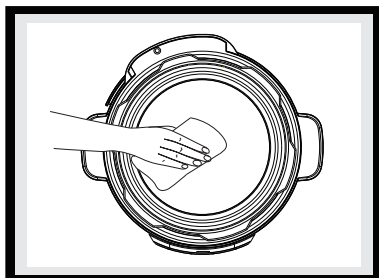

清洗煲體

- 最後用乾軟布將鍋具內外側的水珠都擦拭乾淨，放置在乾燥通風處。

提示

所有配件拆卸清洗後，必須安裝回原處及安裝到位。

6. 疑難排解

● 產品使用過程中，若遇以下情況可對照查詢，自主解決。

問題	造成原因	處理方法
合蓋困難	密封圈未放好	放開密封圈
	浮子閥被卡住，未能落下	在浮子閥處用細長物捅一下
開蓋困難	放氣後浮子閥未能落下	用手輕拍煲邊數次，令浮子閥落下
煲蓋漏氣	未放上密封圈	放上密封圈
	密封圈粘有食物渣	清潔密封圈
	密封圈有磨損	更換密封圈
	未合好蓋	按規定合蓋
浮子閥漏氣	浮子閥粘有食物渣	清潔好浮子閥及小膠圈
	浮子閥小膠圈有磨損	更換小膠圈
浮子閥未能上升	煲內食物和水過少	按規定放入水和食物
	煲蓋/限壓閥漏氣	送到維修中心檢查
限壓閥排氣閥漏氣	超過工作壓力造成排氣	送到維修中心檢查
	排氣閥未能正確安裝/損耗	正確安裝/更換零件
E1	傳感器斷路	送到維修中心檢查
E2	傳感器短路	送到維修中心檢查
E3	超溫	送到維修中心檢查
E4	信器開關失靈	送到維修中心檢查

Congratulations on the purchase of your Primada Speedy Intelligent Cooker! We hope it brings you many years of satisfaction. We trust the purchase of your new cooker will help you with fast and convenient cooking, allowing you to enjoy the process and savor delicious meals.

Should you encounter situations that have not been adequately addressed in this Instruction Manual, please contact our Customer Service Center, where a technician can address your specific problem or question.

For more information, please visit the official website:
www.primada.com.hk.

The Company reserves the right to make technological and/or design changes to this product for continuous improvement.

Thank you for choosing!

Content

1. Important Safety Instructions	18
2. Package Contents and Technical Specifications.....	19
2.1 Package Content	19
2.2 Technical Specifications	19
2.3 Product Diagram	20
3. Schematic Diagram.....	21
4. Operation	22
4.1 Before use	22
4.2 Operation.....	23
4.3 Screen and Indicator Guideline.....	29
4.4 Reminder.....	31
4.5 Cooking Reference	31
5. Cleaning and maintenance.....	32
6. Troubleshooting	34

1. Important Safety Instructions

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.
PLEASE KEEP THE INSTRUCTION MANUAL

When using our product, basic precautions should always be followed, including the following:

- 1.This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2.Children should be supervised to ensure that they do not play with the appliance.
- 3.DO NOT place the product near flammable materials or use it in humid environment.
- 4.The amount of food and water to be put into the Inner Pot MUST be strictly according to the step 2 in the section "Operation".
- 5.DO NOT damage the Seal Belt and DO NOT replace it with any other rubber belt or tensile belt.
- 6.DO NOT move the Steel Ring in the Lid with any tools or external forces. If the Steel Ring breaks off from the Lid, please stop using the cooker and replace the Lid with a new one.
- 7.Clean the Filter regularly to keep the cooker clean.
- 8.DO NOT open the Lid with external force when the Floating Valve has not sunk.
- 9.NEVER add any additional weight on the Pressure Limiting Valve or replace the Pressure Limiting Valve with other object.
- 10.The surface of contact between the Inner Pot and the Electronics Heater should always in clean condition. DO NOT use the Inner Pot to cook by using other heating sources. DO NOT replace the Inner Pot with other container.
- 11.Please do not use the damaged Pot, otherwise will cause air leaking.
- 12.The Inner Pot consist of a Non-stick layer surface. To avoid scratching the Non-stick surface, please use wooden or plastic ladle or spoon.
- 13.Food should not be kept warm for more than 6 hours in order to preserve the Natural Nutrients, Texture and Tastiness of the foods.
- 14.If steam is released around the Lid during the cooking process, please unplug the power supply immediately, and send the product back to our company for repair. This is an abnormal situation because the Pressure Discharging Device has been activated and this indicates that the Pressure Limiting Device is malfunction.
- 15.If there is any malfunction of the cooker during the cooking process, please stop using the device and send it back to the workshop for checking and repairing.

Indicator Code	E 1	E 2	E 3	E 4
Problems/Causes	Open Circuit of the sensor	Short Circuit of the sensor	Overheating	Signal switch Malfunction


- 16.When moving the product, please use the Side Handle and avoid using the Lid Handle.
- 17.DO NOT disassembly the product, or replace its parts with others which are not produced by our company. The product can only use the spare parts produced by our company.
- 18.When discharging, keep your face or hand away from the relief pipe and from the lid during operation to avoid scald.
- 19.Unplug appliance from main electricity supply before taking food.
- 20.Don't touch the lid during cooking procedure or in heating status.
- 21.Never block the periphery of the clamping position to ensure safety.
- 22.Never attempt to uncover the cooker when floating valve is flopping or hercis pressure inside.
- 23.Please mind of flowing hot water from the pressure limiting valve when opening the lid.

2. Package Contents and Technical Specifications


2.1 Package Content




Cooker

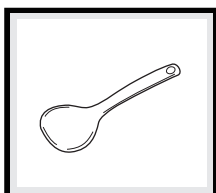


Spoon

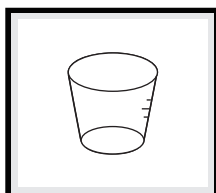

Measuring cup

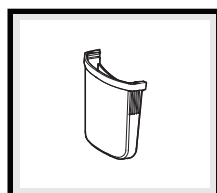

Water storage

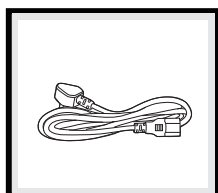

Power cord



Manual



Recipe



Warranty card


2.2 Technical Specifications

Model	PC6610AI	PC8610AI
Voltage	220-240V	220-240V
Power	1000W	1200W
Capacity	6L	8L
Working Pressure	0-70kpa	0-70kpa
Keep warm temp.	60-80° C	60-80° C
Inner pot diameter	22cm	24cm
product dimension	368x368x368 mm	375x375x445 mm
Gross weight	6kg	8.6kg
Net weight	5kg	6.5kg


* Package contents and technical and design specifications may be changed in the course of continuous product improvement.

2.3 Product Diagram

Main body

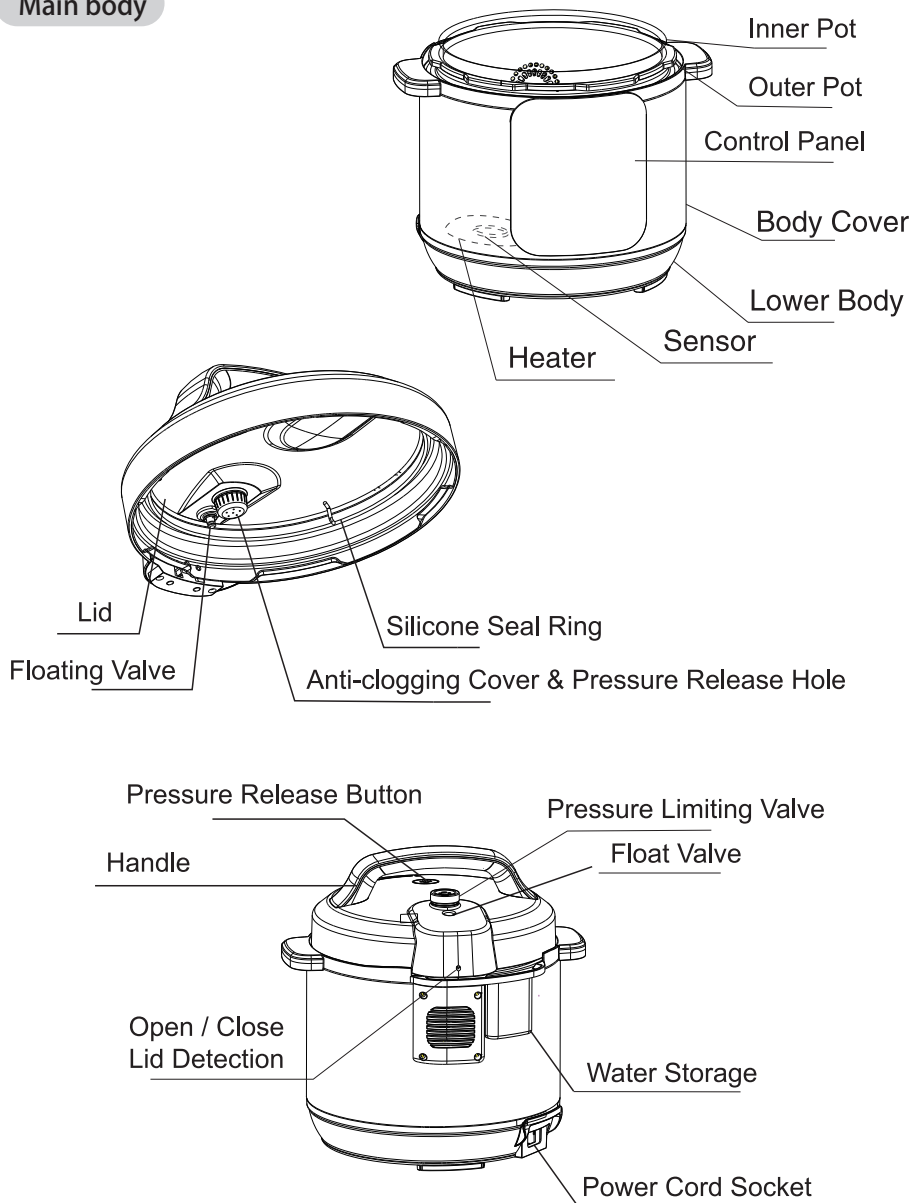

3. Schematic Diagram

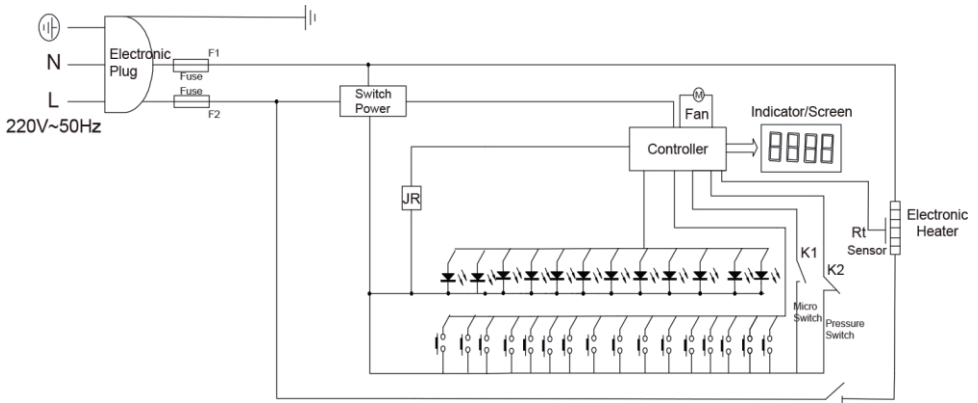


4. Operation

4.1 Before use



1st Time use

- Remove all packaging.
- Remove all included items.
- Clean all items that come into direct contact with food with a soft cloth.

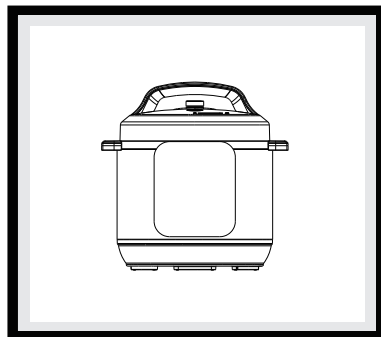

Daily use


- Check if the sealing ring is properly installed on the lid. The sealing ring slot must be snapped onto the fixed bracket slot and evenly attached to the inside of the lid.
- Check if the exhaust port and float valve are unobstructed. If there is any blockage, it must be cleaned.

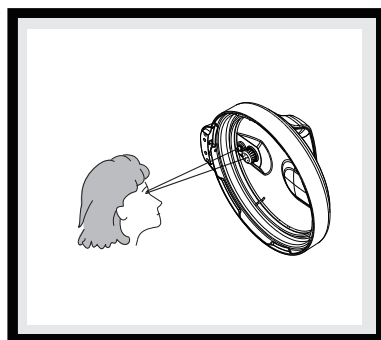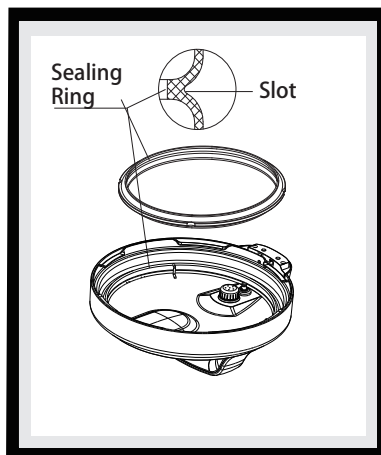

4.2 Operation




Step 1: Open the lid

- Before opening the lid, please confirm that the float valve has dropped.
- Hold the lid handle with your hand and turn the lid counterclockwise until it cannot be turned. Then lift it up to open the lid.

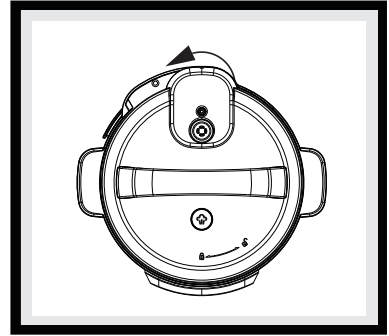

Step 2: Place food

- Food and water should not exceed $\frac{4}{5}$ of the height of the pot.
- Food that is easy to expand in water should not exceed $\frac{3}{5}$ of the height of the pot.
- Food and water should not be less than $\frac{1}{5}$ of the height of the pot.

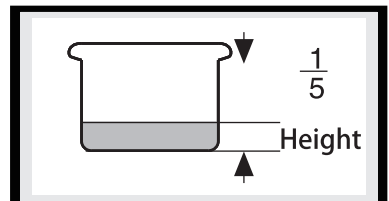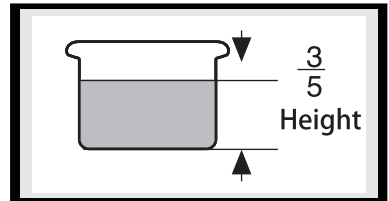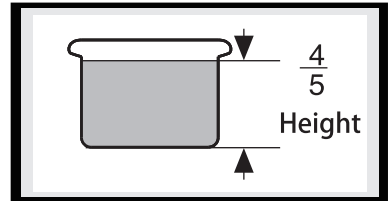

Reminder

The maximum amount of rice for 6 liters is 9 cups. The maximum amount of rice for 8 liters is 12 cups. It is recommended to cook rice in a 1:1 ratio; 1 cup of rice with 1 cup of water. Users can also adjust the amount of water according to different rice qualities and personal preferences.


Step 3: Placing the inner pot into the intelligent cooker

- Before placing the inner pot, clean the inner pot and heating plate. Do not put any foreign objects on the surface of the inner pot and heating plate.
- After placing the inner pot, gently rotate it left and right to ensure good contact between the inner pot and the heating plate.




Step 4: Close the lid

- Check if the sealing ring has been placed on the inner steel ring of the lid.
- Check if the exhaust port and float valve hole are unobstructed.
- Hold the lid handle and align the rear end of the lid with the direction of the lid closing mark. Cover it down on the pot body, then turn the lid clockwise until it cannot be turned, and you hear a "click" sound.
- Check if the pressure relief valve is correctly installed on the pressure relief valve seat.

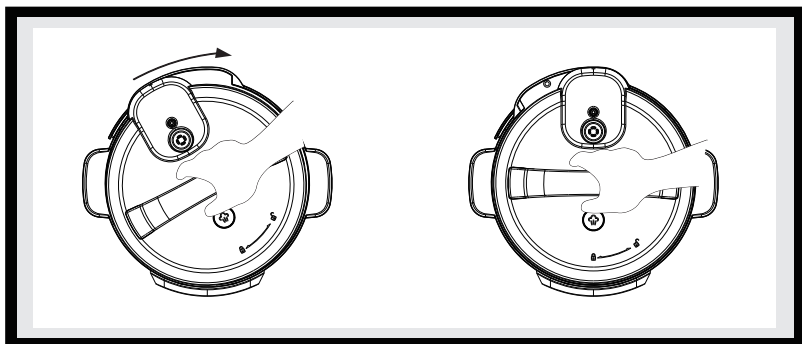


Step 6 : Check the pressure relief valve

- Place the pressure relief valve according to the diagram and check if the float has dropped (the float is down before the heating starts).
- If the cooker is not turned on, you can poke the float valve hole with a chopstick or other long object to lower the float valve.

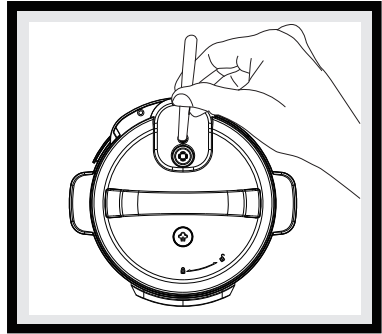


Tips

- If the float valve is not cleaned regularly or has been used to cook liquid food, the float valve may be stuck by the viscous food residue around it and cannot be dropped automatically, which will prevent the lid from opening smoothly.
- During operation, to ensure the safety of the user, please do not put your hands and face near the float valve to avoid danger or burns.

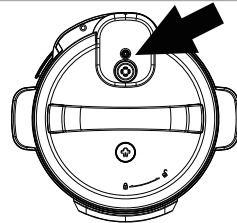

Step 7: Connect the power supply

- Plug the power cord into the socket on the back of the pot, and the other end into the power outlet.
- When the power is turned on, the buzzer will sound once (1 second). At the same time, all LED indicator lights will light up for 1 second and then turn off.
- At this time, press any key on the panel, and the menu function icons on the panel will light up. If no function is selected, the screen will automatically turn off after 5 minutes and return to standby mode.

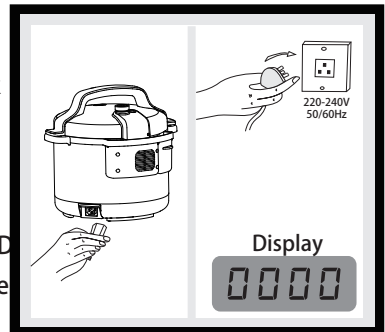

Special reminder

For safety reasons, the lid must be closed in place, otherwise, it will not start working.(* 【Stir-fry】 & 【Hot Pot】 menus are not included.)

Step 8: Select cooking function

Select the preset function (menu)

- Tap the screen and select the desired cooking function.
- The selected function indicator will flash, and the digital screen will display its default pressure holding time / temperature holding time.
- If there is no key operation within 5 seconds after selection, the buzzer will sound once (0.2 seconds) and the display will show 【C+rolling pattern】 , indicating that the pot has started heating up.



Pre-set Pressure/ Cooking Time

- Tap the screen and select the desired cooking function.
- The selected function indicator will flash, and the digital screen will display its default pressure time / temperature .
- You can press the 【+】 or 【-】 key to adjust the pressure/cooking time/working time in units of 1 minute. You can set it cyclically (for example, long press 【+】 or 【-】 to speed up the adjustment).

Other function

- 【Slow Stew】
Press the 【+】 or 【-】 key to adjust. The display will show 【001.0】 , 【001.5】 , 【002.0】 , 【002.5】 , and 【003.0】 , representing adjustments from 1 hour to 3 hours. It will automatically switch to Keep Warm (heat preservation) when the work is completed.
- 【Black Garlic】
Press the 【+】 or 【-】 key to adjust. The adjustable time is 【168】 to 【360】 hours. There will be a beep after startup. After the machine starts working, it will display in units of 1 hour and in a countdown manner. It will switch to standby mode when the work is completed.
- 【Hot Pot】
After selecting the menu, the C+ scrolling pattern will be displayed. Press the 【+】 or 【-】 key to adjust the heat level. Heat (low) 【 🔥 】 , heat (medium) 【 🔥🔥 】 ,heat (high) 【 🔥🔥🔥 】 .

Special attention

【Hot Pot】、【Stir Fry】、【Cake】 functions do not display time.
When the menu is selected, it will start heating directly.

Pre-set cooking

- After selecting the desired menu and adjusting the pressure cooking time, press the 【Pre-set Timer】 .
(*The steps can be reversed.)
- Press the 【+】 or 【-】 key to set the reservation time.
- The reservation time refers to how much time is set before the heating operation starts.

Step 9: Air-cool-unlock Function

- After the menu is cooked, the system will automatically switch to the air-cooling program to reduce pressure (the fan starts to work).
- The menu indicator light will turn off, and the digital screen will display 【COOL】 , indicating that the air-cooling decompression is in progress.
- 【C】 starts to flash. When the air-cool-unlock function is finished, it automatically switches to heat preservation. 【⊕】 indicator light is on, and the buzzer will sound for a around 10 seconds. The digital display will show 【END】 .

1 Select the menu.

2 Press.



3 Press “+” “-” to adjust the time.

4 Preset Time **0.512** Cooking Time


5 Enter the appointment status approximately 5 second after setting the appointment time.

Special Reminder

【Hot Pot】、【Stir Fry】及【Black Garlic】 Menu did not contain Air-Cool-Unlock Function.

Step 10: Cooking is complete

- When the display shows 【END】 ,press 【Keep warm/cancel】 ,press the exhaust key to exhaust (As the right figure shown).
- Make sure the float valve is down before opening the lid.

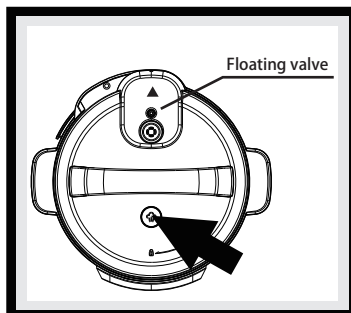

Step 11: Open the lid

- Unplug the power plug.
- Hold the lid handle and turn the lid counterclockwise until it cannot be turned, then lift the lid upwards.
- PC6610AI has a function to place the lid on the left or right.

Attention

- If the screen does not display END, you can press the **【Keep Warm/Cancel】** key to cancel the operation if you want to open the lid in advance. Press and hold the exhaust button to exhaust until the float valve drops before opening the lid.
- If you cook liquid food (porridge, viscous liquid), you must wait for the air-cooling unlock operation to complete, the float valve to drop and **【END】** to be displayed before opening the lid, otherwise the viscous liquid will spray out from the exhaust pipe.


4.3 Screen and Indicator Guideline

Display

- Select the normal menu, the indicator light will remain on, display show 【C+Scrolling Pattern】 means it will start to cook.
- If you select a menu with adjustable time, the menu key will flash, the display will show the time and flash. After the time is set, it will continue to flash for 6 seconds, and the display will show 【C+Scrolling Pattern】 . The menu key will light up, indicating the start of heating.
- Select a menu, and the menu key will light up, indicating that it has been selected. If the reservation function is set, the timer key will light up, the display will show 【reservation time】 , and the countdown will begin. After the countdown ends, it will automatically enter the heating state and start cooking.
- After heating for a period of time, when the pressure in the pot reaches its cooking pressure or reaches the specified temperature, the display will show 【C+Scrolling Pattern/Time】 .

* The slow stew function will display the time.。

- After the working time is completed, the display will show 【COOL】 , indicating that the air-cooling unlocking work has started. After the air-cooling unlocking is completed, the display will show 【END】 and enter the heat preservation state. The heat preservation light is on, and the cooking is finished at this time.

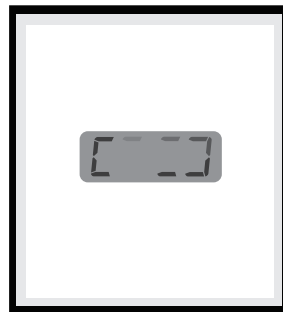

Keep Warm/Cancel and Lid Indicator Light

- After the working time is completed, it will automatically switch to the heat preservation state. The longest heat preservation time is 24 hours. When the intelligent cooker is in the heat preservation state, press the 【Keep Warm/Cancel】 key to cancel the heat preservation function.
- During the setting/cooking process, press the 【Keep Warm/Cancel】 key to cancel the setting and working status.
- In the standby state, press the 【Keep Warm/Cancel】 key to enter the preservation state. To cancel the heat preservation function, press the 【Keep Warm/Cancel】 key to cancel the heat preservation.
- If the body is in a heat preservation state, there is still pressure in the pot and the lid cannot be opened directly. It is necessary to wait until the pressure in the pot drops, the fan icon lights up, indicating that the exhaust button can be pressed to exhaust, and then the lid can be opened safely.



4.4 Reminder

- For rice, congee, soup, beans, meat, and tendon menus, there is a pot lid detection protection.
- If the pot lid is not lock well, when the menu is pressed, it will beep three times to indicate that the pot cover is not locked and will return to standby.
- During operation, if the pot cover is unlocked/opened, the product will beep once to indicate that the pot cover is open, and stop heating until the pot cover is locked in place, and continue the current operation.

4.5 Cooking reference

Type	Menus	Default Time	Adjustable Time Range	Lid Check	Time Display
without pressure	Hot Pot	No	Not adjustable	Do not detect	Do not show time
	Cake	35min.	Not adjustable	Do not detect	Show countdown time
	Stir-fry	30min.	Not adjustable	Do not detect	Show countdown time
	Bake	30min.	01–99min.	Do not detect	Show countdown time
	Black Garlic	MPC6330– 240hr. MPC8330– 192hr.	168–360hr.	Do not detect	Show countdown time
pressure cooking	Rice	12min.	6–20min.	Detect	Show countdown time
	Brown Rice	15min.	6–20min.	Detect	Show countdown time
	Porridge	20min.	10–40min.	Detect	Show countdown time
	Meat	12min.	9–25min.	Detect	Show countdown time
	Tendon	22min.	20–99min.	Detect	Show countdown time
	Dessert	22min.	10–40min.	Detect	Show countdown time
	Fish	5min.	3–10min.	Detect	Show countdown time
	DIY	1min.	01–99min.	Detect	Show countdown time
	Soup	30min.	10–40min.	Detect	Show countdown time
	Slow Cook	1hr.	1.0–1.5–2.0 –2.5–3.0	Detect	Show countdown time
	Keep Warm	24hr.	Not adjustable	Do not detect	–
	Preset Timer	24hr.	–	–	–

5. Cleaning and maintenance


Cleaning Method

- Unplug the power plug before cleaning.
- Wipe the cooker body clean with a rag. Do not immerse the cooker body in water for cleaning or spray it with water.
- Remove the water collector and clean it, and wipe the base clean with a damp cloth.
- Use water to clean the inside of the pot cover, including: sealing ring, pressure relief feet, anti-blocking nut, exhaust pipe, float valve, and then wipe it clean with a rag.
- Use a small brush to clean the base of the pressure relief valve.

Pot cover accessory disassembly


Floating valve

- First remove the small rubber ring on the float valve, and then take out the float valve from the float valve port.
- Under normal circumstances, please do not disassemble the float valve.
- Before using it again, please clean the float valve to prevent the float valve from being stuck by food, which may prevent the pot cover from opening smoothly.

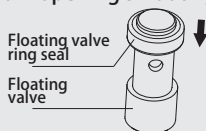


Anti Clogging Cover

- Pull out the anti-clogging cover and wash it.

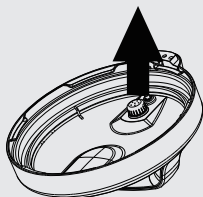


- After cleaning, please check whether the anti-clogging valve and the float valve are installed in place.

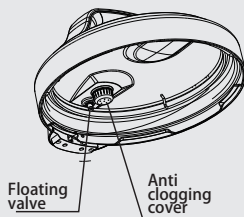

Seal Ring

- Gently pull the sealing ring upwards from the pot cover.
- After cleaning, put the sealing ring back on the steel ring.
- Do not pull the sealing ring forcefully, as deformation will affect the sealing effect.
- Please replace the sealing ring regularly to ensure the sealing cooking effect.

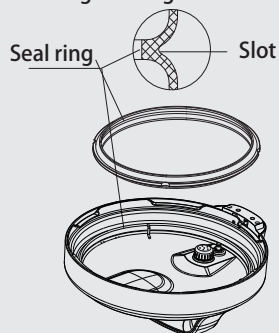


Wash the inner pot

- Handle the inner pot with care to avoid deformation after collision.
- It is recommended to clean the inner pot with warm water or warm water and detergent. In order not to damage the inner pot, please do not knock or rub the inner pot! Do not put spoons or tableware in the inner pot, and do not use scouring powder, steel balls or nylon brushes and other things with strong friction to clean the inner pot.
- The inner pot can be cleaned with a sponge or non-metallic soft brush, and then wiped dry with a rag.



Clean the heating plate

- Rice grains or other debris may adhere to the heating plate, which can be wiped off with a dry soft cloth.
- Note: Do not knock the heating plate with hard objects.

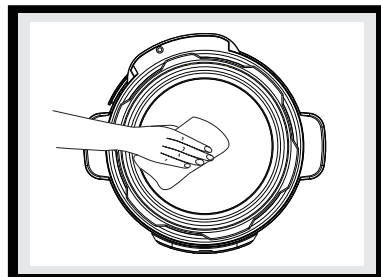

Clean the cooker

- Finally, use a dry soft cloth to wipe off the water droplets inside and outside the pot, and place it in a dry and ventilated place.

Tips

All accessories must be reinstalled in their original positions and installed in place after disassembly and cleaning.

6. Troubleshooting

If the following situations occur during the use of the product, you can check and solve them yourself.

No.	Malfunction	Possible causes	Solutions
1	Difficulty in closing the lid	Seal Belt is not properly fitted	Fit in the Seal Belt properly
		Floating valve stuck on the bar	Push the bar lightly
2	Difficulty in opening the lid	Floating Valve has not sunk	Spank the cooker several times to let the valve down in place.
3	Steam leaking out around the lid	Seal Belt is not in place	Fit in the Seal Belt
		Dirty Seal Belt	Clean the Seal Belt
		Damaged Seal Belt	Replace the Seal Belt
		Lid is not closed tightly	Close the lid according to the instructions
4	Steam leakage from the Floating Valve	Dirty Seal Ring for Floating Valve	Clean the Seal Ring for Floating valve
		Damaged Seal Ring For Floating Valve	Replace the Seal Ring for Floating Valve
5	Floating Valve is not rising up	The amount of food and water is lower than the minimum level	Determine the amount of food according to the instructions
		Steam leakage around the lid or from Pressure Limiting Valve	Send the cooker to Service center for checking purposes
6	Steam leakage from the Pressure Limiting Valve	Exceeding work pressure causes exhaust	Send the cooker to Service center for checking purposes
		Pressure Limiting Valve is not installed in place or loss	Install correctly or replace parts



獨家代理 Sole Agent:

昇鋒國際有限公司 Pro Logic International Limited

香港九龍紅磡鶴園東街4號恆藝珠寶大廈1樓106-107室

Unit 106-107, 1/F, Heng Ngai Jewelry Centre, 4 Hok Yuen Street East, Hung Hom,
Kowloon, Hong Kong

Tel: (852) 2365 0655

分銷商 Distributor:



愛家名品有限公司 iPlusHome Limited

www.iplushome.com.hk



www.primada.com.hk

