


## 簡介

H210A 吸塵機械人可配置自溢式水箱使用。  
打開水箱入水口的膠塞，即可往水箱內加水；水箱加滿後平放並壓緊膠塞，水箱中有少量的氣泡，屬正常的狀態。將水箱直立，氣泡會跑到加水口的位置，底部的空氣排除後，可確保水箱內水均勻滲透到拖布。



## 結構

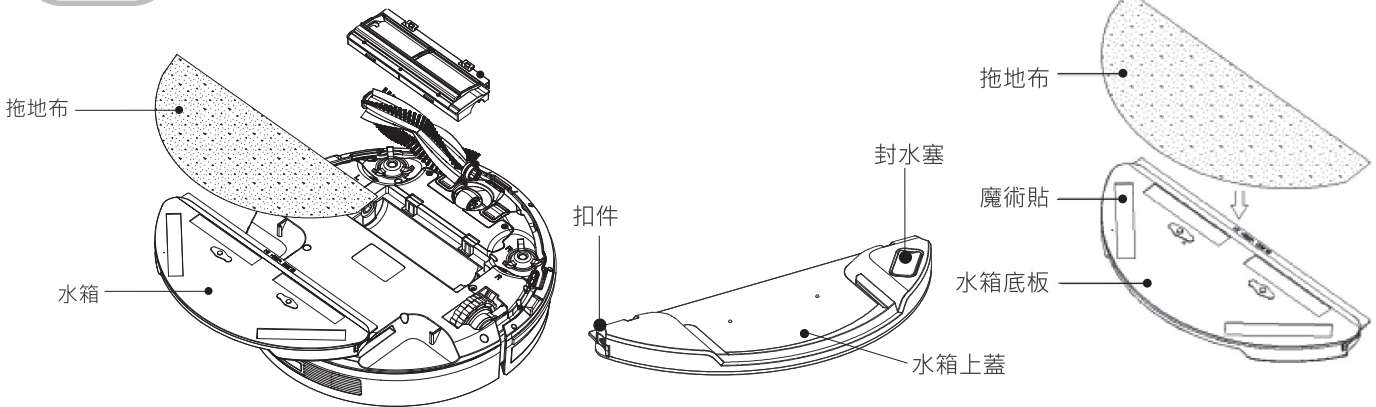


## 安裝水箱方法

按如下步驟進行安裝（參照下圖）

### 1 安裝拖地布：


如圖 a 所示，把拖地布安裝在水箱底板中。

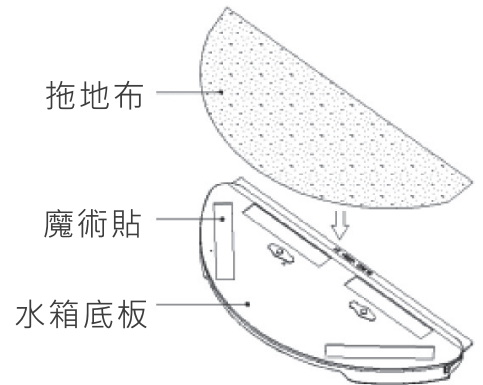

圖a

### 2 水箱加滿水：


如圖 b 所示，打開水箱的封水塞，在水箱中注入自來水，然後把封水塞塞入水箱中，以免漏水。

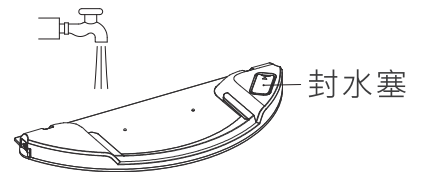

圖b

### 3 安裝水箱：

如圖 c 所示，把機器翻轉過來，將水箱裝入主機中，確認是否水箱固定住。如圖 c 所示。

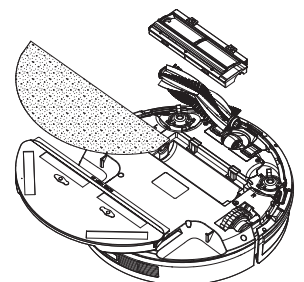


圖c

## Introduction of Mechanical Wet Reservoir

H210A equipped with a water tank. Open the rubber plug of the wet reservoir inlet to add water to the wet reservoir. After the wet reservoir is full, put the rubber plug flat and press it tightly. If there are a few bubbles in the wet reservoir, which is in normal state. Put the wet reservoir upright, the air bubbles will run to the position of the water filling port. After the air at the bottom is removed, the water in the water tank can be ensured penetrates evenly.



## Structure

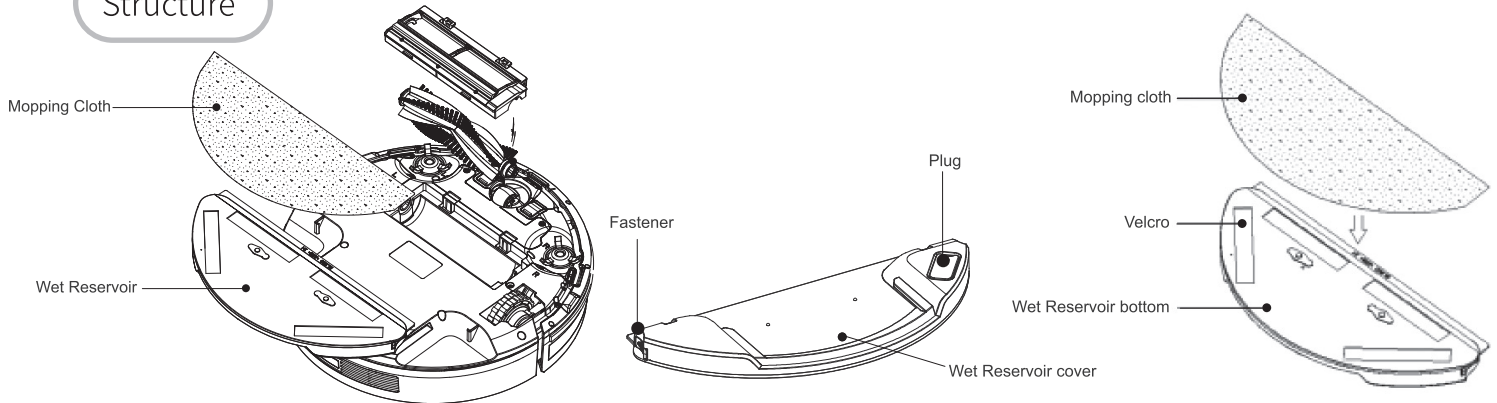


## Install the water tank

Please follow the below steps to install.

### 1 Assembly the mopping cloth:


Put the mopping cloth onto the mopping plate, and assemble the mopping plate on the bottom of the robot as shown in picture 1 to mop the floor.

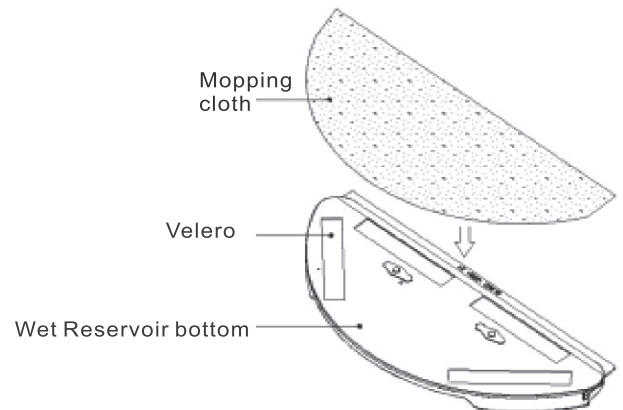

Picture 1

### 2 Fill the reservoir with water:


As shown in picture 2, open the water plug of the wet reservoir, fill the water into the wet reservoir, and then plug the water plug to avoid leakage.

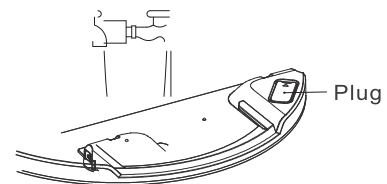

Picture 2

### 3 Assembly the wet reservoir:

As shown in picture 3, turn the robot over and put the wet reservoir into the main engine to confirm whether the wet reservoir is fixed. As shown in Picture 3.

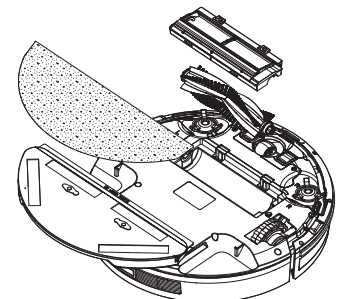

Picture 3