

ref. 54299

WHEEL HUB AND BEARING REMOVER AND INSTALLER KIT

Function

This tool allows you to extract and install wheel hubs and bearings.

Advantages

- ✓ Includes pressure plates with many sizes.
- ✓ Its centering bracket ensures that the pressure bolt gets placed in the correct position.



Technical specifications

Pressure adapters (internal diameter)	8.9, 9.9, 12cm
Support plate (external diameter)	9.5cm
Pressure plates (external diameter)	5.3, 6.6, 6.5, 7.3, 7.1, 7.8, 8.3, 6.8, 5.85cm
Sleeve adapter (internal diameter/external diameter)	8.6-10.9cm 8.2-10cm 7.1-9.45cm
Spacer ring (internal diameter/external diameter)	8.6-9.55cm
Bolt size	24x280cm
Bolt thread	7/8"- 9 UNF
Weight	14,58kg