

Tool Needed: 5mm Hex Key

..kūat..[®]
(koo-at)

1. Remove four 8mm bolts from the toggle clamp.
2. Replace screws in the reverse order with the new toggle clamp
3. Tighten nuts until sufficient tension is reached

