

- 1. Using the 4mm Hex Key, remove the two 6mm bolts.
- 2. Pull on on the upper pivot cap to remove.
- 3. Repeat these steps in reverse to install the new one.

