

- 1. Use the 5mm Hex Key to remove the two 6mm screws to slide off Piston System.
- 2. Slide the piston assembly, caps, and washers off the tray assembly.
- 3. Use the 2.5mm Hex Key to remove two 4mm flat head screws and retainer tabs.
- 4. Squeeze the slider tabs together and remove the tire chock.
- 5. Use the 7mm Hex Wrench and 17mm Box Wrench to remove the 10mm tire/arm bolt and nut.
- 6. Repeat these steps in reverse to install the new one.
  - 1. Apply medium strength threadlocker (loctite 243) on each of the screws retaining the Piston System

