

Tools Needed: 7mm Hex Wrench & 17mm Wrench

..kuaat..
(koo-at)

1. Open the Tire Arm.
2. Using the 7 mm Hex and 17 mm Wrenches, remove the Tire Arm Pivot Bolt. Take note of the location of the Arm Spacers and Washers.
3. Install the new Tire Arm Hardware by following the instructions in reverse. Torque the Tire Arm Pivot Bolt to 7 Nm.

