

Tools Needed: 5mm Hex Key

1. Use the 5mm Hex Key to remove the M6 Screw and M8 Spherical Bearing Screw.
 2. Slide off the Piston Actuator.
 3. Slide off the Tire Arm Keeper and Tire Arm Connector Cap.
 4. Slide off the Silicone Washers.
 5. Repeat steps 1-4 in reverse to reassemble using medium strength threadlocker (Loctite 243) on each of the Screws.
1. NOTE: M8 Torque Spec = 28 Nm, M6 Torque Spec = 12 Nm

