

- 1. Open the Tire Arm.
- 2. Using the 7 mm Hex and 17 mm Wrenches, remove the Tire Arm Pivot Bolt. Take note of the location of the Arm Spacers and Washers.
- 3. Install the new Tire Arm Hardware by following the instructions in reverse. Torque the Tire Arm Pivot Bolt to 7 Nm.

