Küat

- 1 Open the tire arm. Using the 8mm Hex Key, remove the Pivot Arm Bolt connecting the tire arms to the tray.
- (1b) Remove the Arm to Tray Cap.
- (1c) The Tray Endcap and Bolt Cover can now be removed.
- 2 Install the new Tray Endcap and Tire Arm Pivot Hardware by following step 1 in reverse. Torque the Pivot Bolt to 16 Nm.

