

1. Dislodge the Latch Rod by removing the Cotter Pin.
2. Slide the Latch Rod out of the Bracket.
3. Install the new Latch Rod, Retaining Pin, and Cotter Pin by following the instructions in reverse.

