

Tools Needed: Flat Head Screwdriver

1. Open the Panel Door.
2. Release the Spring Clip on either end of the Gas Spring by depressing the Red Lever.
3. The Gas Spring can now be dislodged from the Ball Stud Brackets. Note: the Flat Head Screwdriver can be used to gently pry the ball and socket joint apart if needed.
4. Carefully cut the band on the new Gas Spring. Depress the Red Levers to release the Spring Clips.
5. Press the new Gas Spring onto the Ball Stud Brackets making sure the Gas Spring is oriented as shown.

