
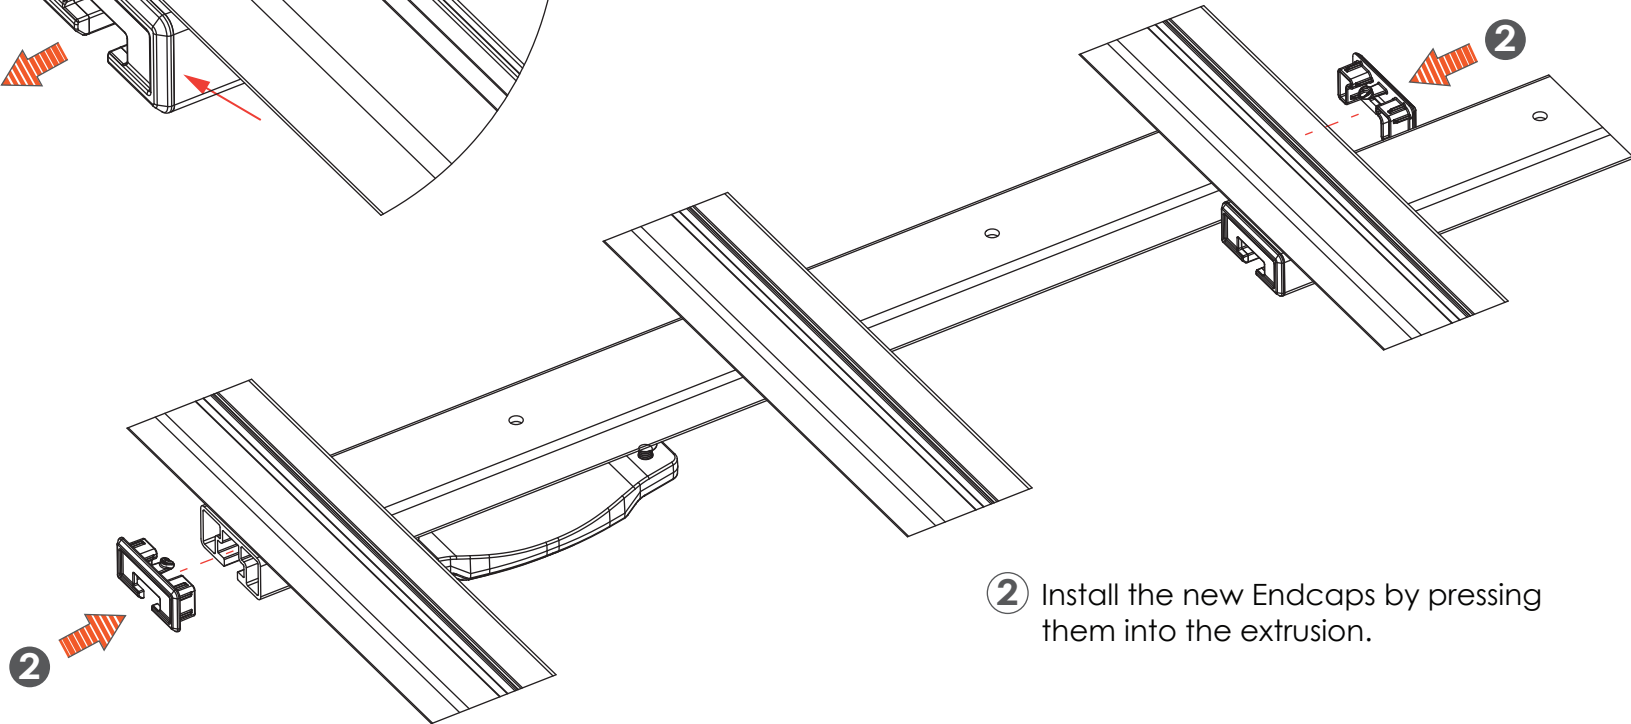


**Tools Needed:**

Flat Head Screwdriver

***kuat***<sup>®</sup>

- ① Using the Flat Head Screwdriver, gently pry the old Extrusion Endcaps free from the extrusion. Start on either side and work across the top.

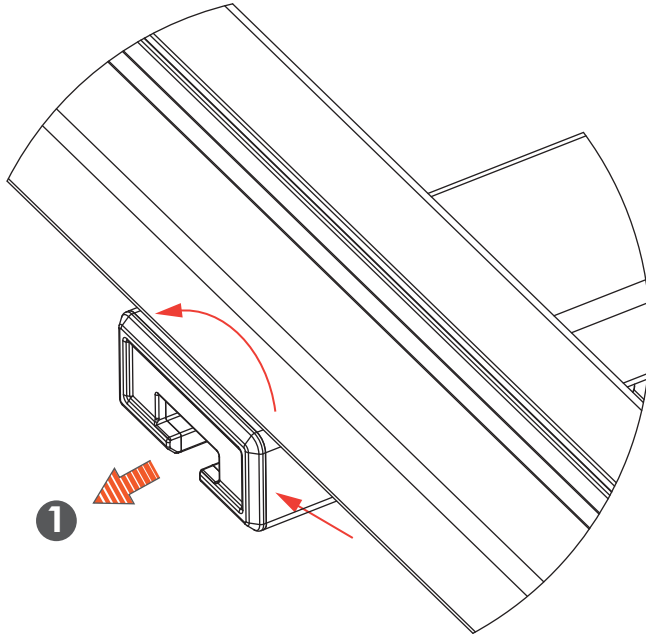

- ② Install the new Endcaps by pressing them into the extrusion.