


**Tools Needed:**


5mm Hex Key, 8mm Hex Key

***kuat***<sup>®</sup>

- ① Open the Pivot Latch.

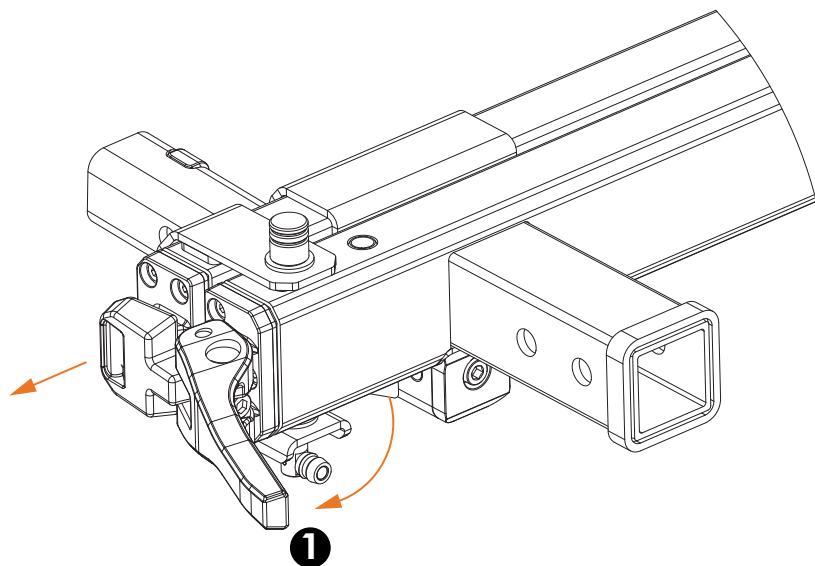

- ② Using the 5mm Hex Key, remove the seven M8 bolts. The Pivot Latch and Hook can now be removed.

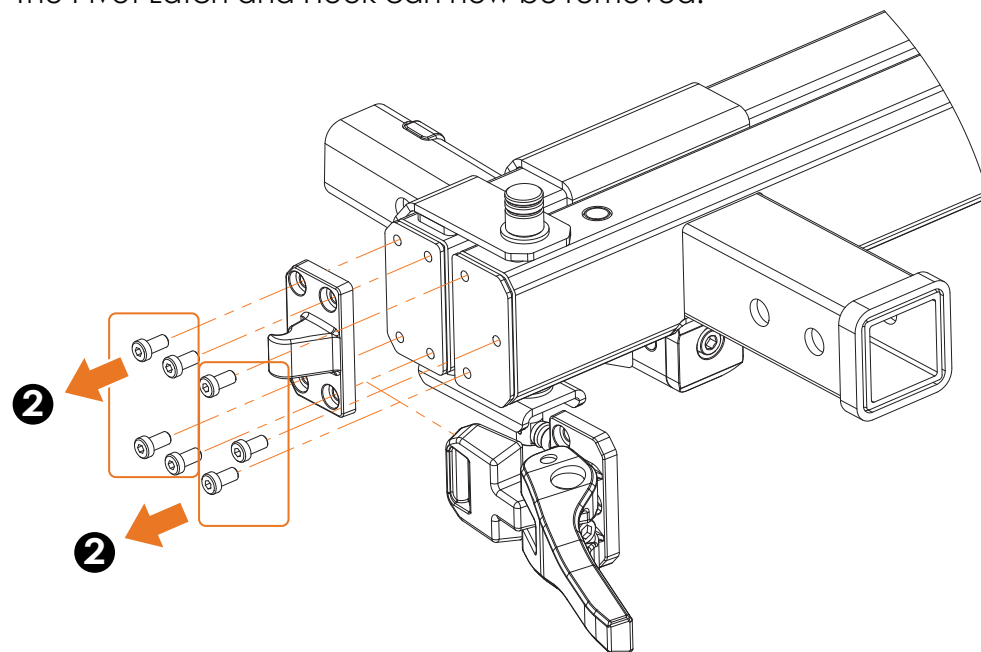

- ③ Install the new Pivot Latch and hook by following Step 2 in reverse. Torque the M8 bolts to 29 Nm.

- ④ Using the 8mm Hex Key, adjust the Latch Tension Bolt. Make sure the rack is closed and the Safety Pin is installed. Close the Pivot Latch and torque the Tension Bolt to 8 Nm.

