

HATCH CLEARANCE

Measure Distance **FIGURE 1**

- Measure from the center of the front crossbar to the edge of the vehicle's open rear hatch door.
- To get the most accurate measurement, measure across the top of the vehicle crossbars.
- If your vehicle measures greater than the number listed below, the VARIAL™ will fit your vehicle with no hatch interference.

MAXIMUM HATCH CLEARANCE >51 5/16"

ADJUSTMENT CHECK LIST:

- Loosen each of the VARIAL™ mounts on the inside of the box.
- With the mounts loose, open the vehicle hatch and adjust the box forward or backward accordingly so there is adequate space (at least 2 inches) between the door and the VARIAL™. **FIGURE 2**
- After adjustment, make sure the VARIAL™ is aligned straight with the vehicle and the clamps are secured around the roof bars.
- Fully re-tighten the VARIAL™ mounts.

OTHER ROOF MOUNTS

If your crossbars are adjustable, move the front bar forward as far as it can go, then adjust to the correct crossbar spread for the product.

FIGURE 1



FIGURE 2

