

Basic troubleshooting steps for Diode Dynamics Stage Series LED lights:

Issue: Light(s) not working/dim output/discolored

Possible Solutions:

1. Check for stable connections

- Make sure the wiring harness terminals are securely connected to the vehicle's battery terminal/ground connection
- Check for a solid connection of the wiring harness to the splitter harness
- Confirm the splitter harness outputs are securely plugged into each light
- Confirm the toggle switch is connected correctly to the wiring harness

2. Check for stable power delivery

- Connect the inoperable/malfunctioning light to a different output of the splitter harness (where a separate light is working correctly)
- Confirm that the relay of the wiring harness is plugged in completely
- Check for a blown fuse on the positive/red wire of the wiring harness

These steps should identify if there is a defective *light*, *splitter harness*, or *wiring harness*. If Diode Dynamics can confirm the part that needs to be replaced, they will require proof of purchase and a shipping address to issue a replacement.

Images of Main Components:



Light



Splitter harness



Wiring harness