

Putting the SD card back in its slot

lunii




1

Turn off the Fabulous Storyteller, then unscrew the four screws on the back of the unit with a Phillips head screwdriver.




2

Take off the top of the Storyteller as shown in the diagram.

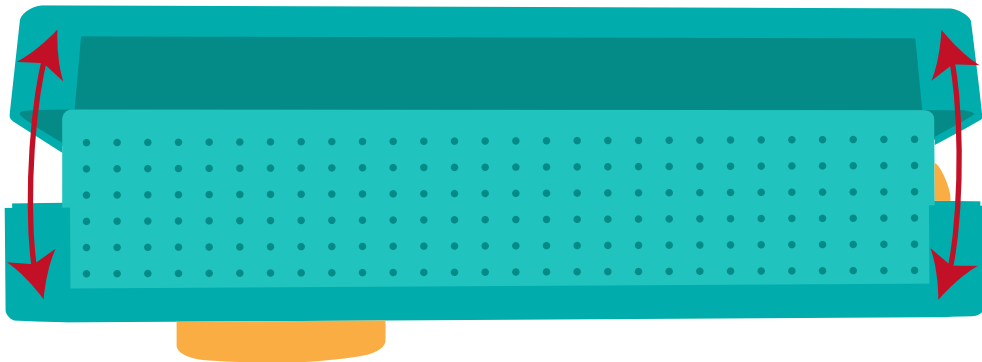


Putting the SD card back in its slot

lunii

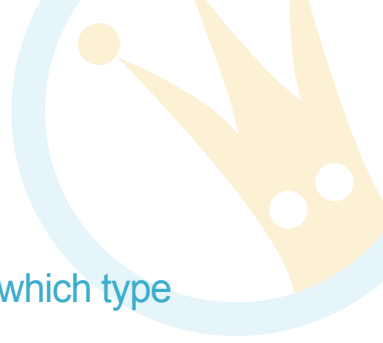


3

The Storyteller uses two types of SD card port check to see which type your model has.

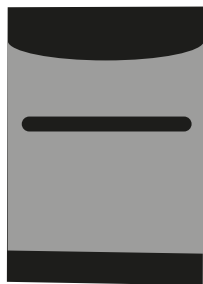


1

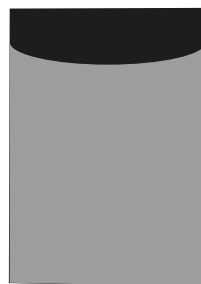

2

4

There may be some white paste covering the port you can scrape this off if you need to.

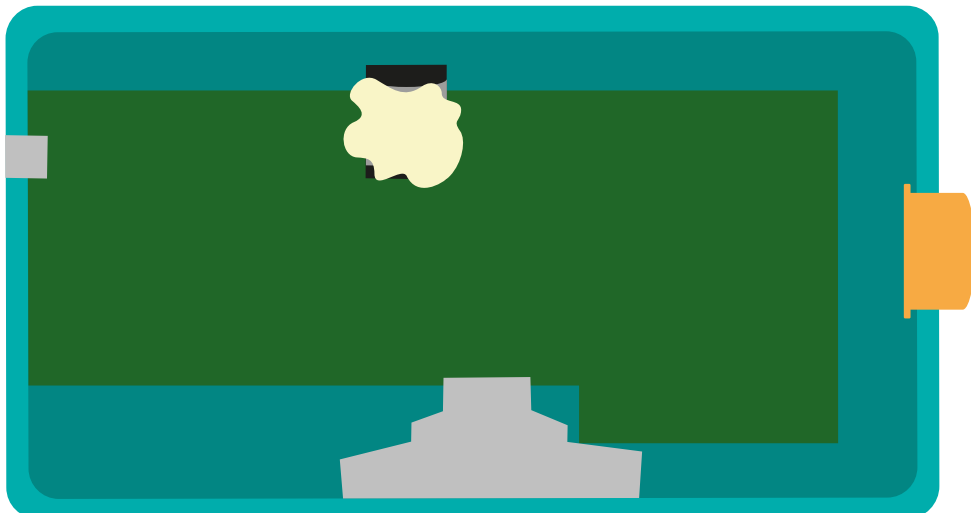


Putting the SD card back in its slot

lunii



5

If your unit has the first type of port, position the Storyteller as shown in the diagram and slide the gray tab in, towards the middle of the unit.

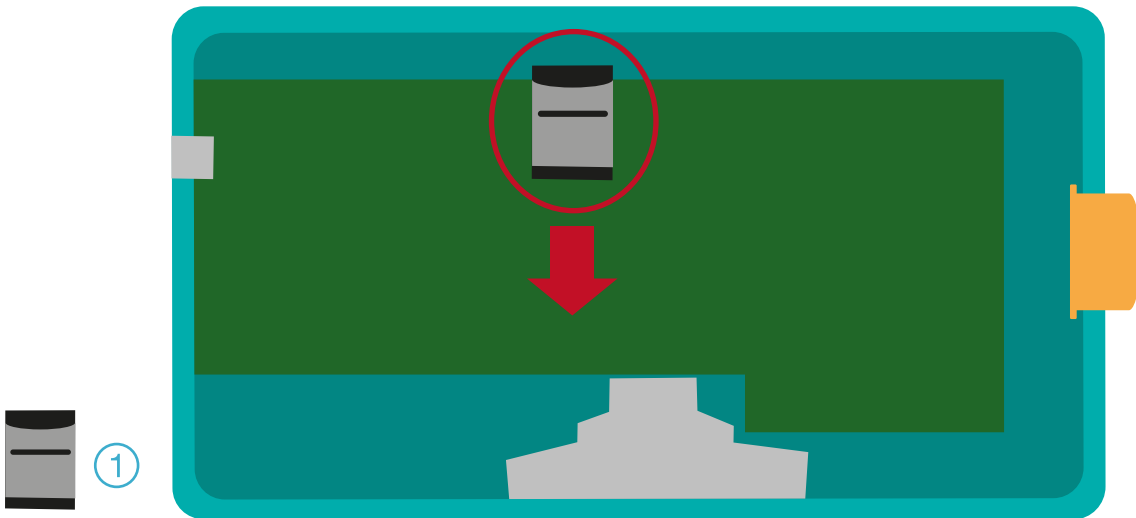

6

Lift up the gray tab. This will automatically release the SD card.



Putting the SD card back in its slot

lunii




7

Close the gray tab back, so that it covers the SD card.



8

Position the Storyteller as shown in the diagram, then slide the gray tab out to fix the SD card in place.

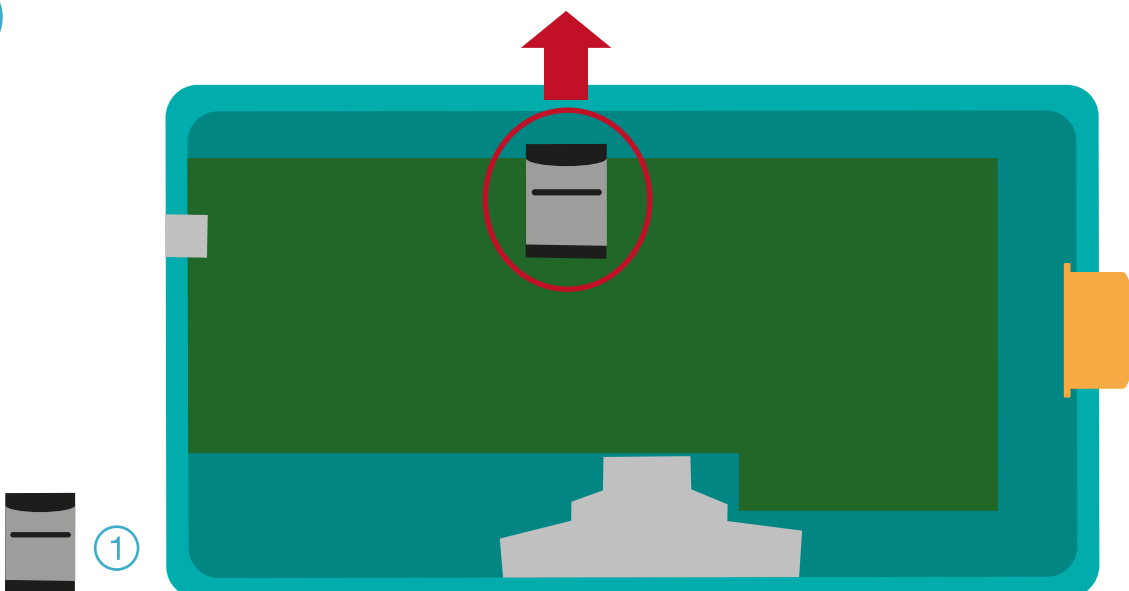


Putting the SD card back in its slot

lunii



9

If your Storyteller has the second type of port, press the SD card into the unit. This will make it pop out.

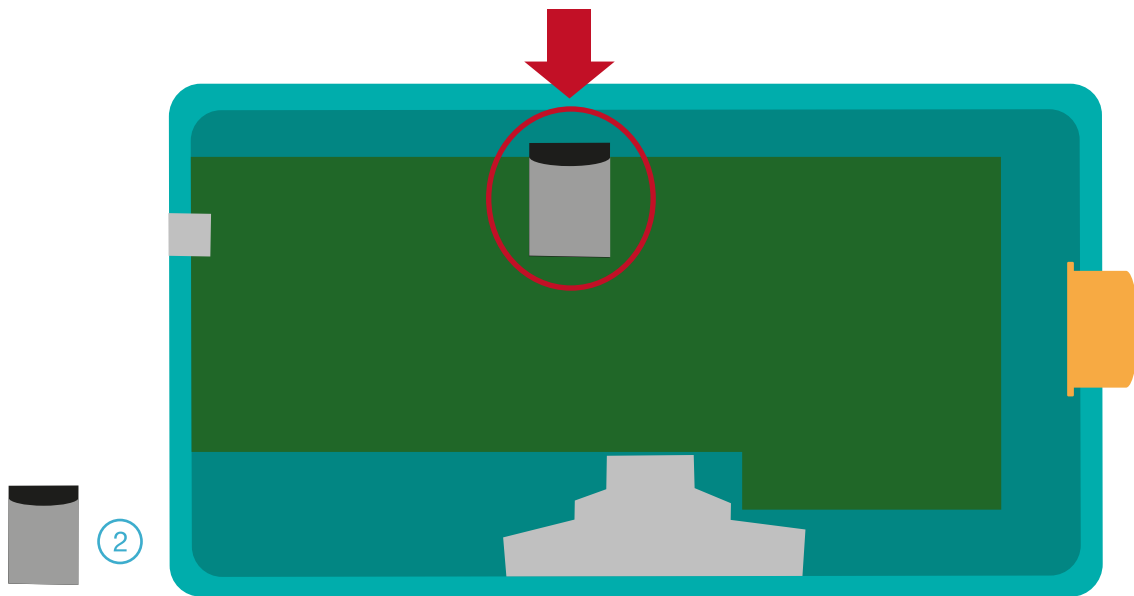

10

Remove the SD card and put it back in its slot.




Putting the SD card back in its slot

lunii




11

Press the SD card into the unit, clicking it into place.

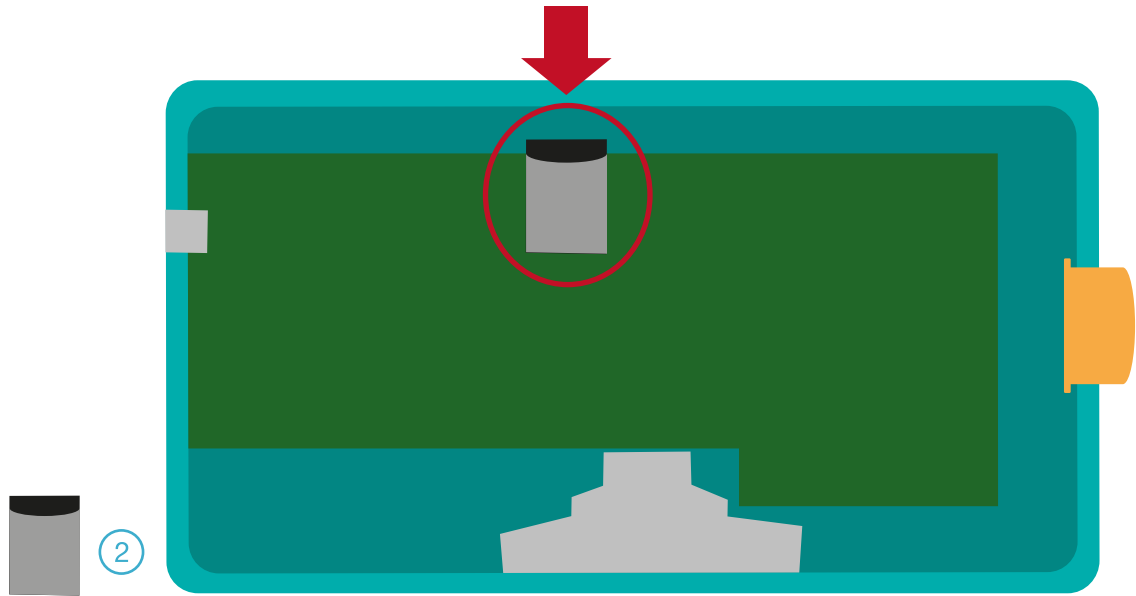

12

Close the Storyteller.

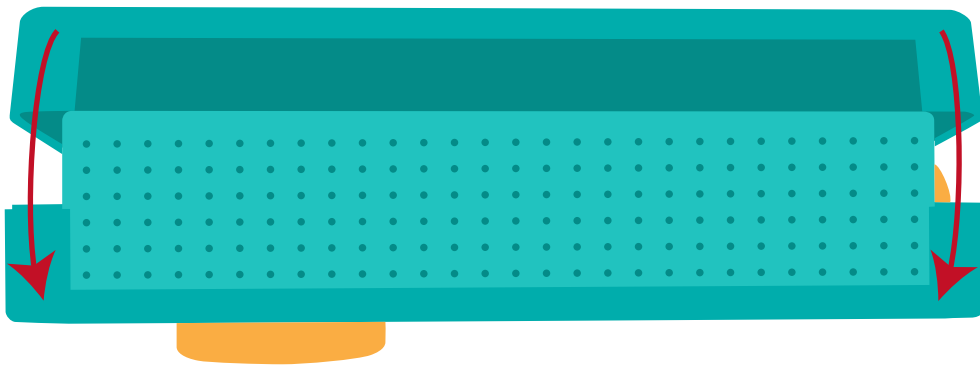

Putting the SD card back in its slot

lunii



13

Screw in the four screws on the back of the unit. Be careful not to screw them in too tightly to avoid damaging the threads.



14

Turn on the Storyteller.



If your Fabulous Storyteller still doesn't work after carrying out this procedure, please email us at help@lunii.com