

IR Codes for Universal Remote Control

LS50 Wireless II work with Universal programmable remote control provided that remote control manufacturers have implemented KEF IR command codes in their remote controls.

The following tables list the command codes required.

#	Functions	Function codes
	Code Format:	NEC
	Factory Code:	0x01
1	Power On/Off Toggle	0x40
2	Mute/ Unmute Toggle	0x20
3	Play/Pause	0x18
4	Forward	0x52
5	Next Source	0x58
6	Volume Up	0x60
7	Volume Down	0xA0
8	Backward	0xD2
9	Power ON	0x38
10	Power OFF	0x3A
11	Mute	0x48
12	Un-Mute	0x4A
13	Source: Wi-Fi	0x30
14	Source: Bluetooth	0x2A
15	Bluetooth Pairing	0x98
16	Source: AUX	0x02
17	Source: Optical	0x0A
18	Preset Volume (30%)	0x78
19	Source: HDMI	0x88 0x8A
20	Source: Coaxial	0xE0
21	Previous Source	0xD0