



Hähnel Industries Ltd.
Parnell Street
Bandon
Co. Cork

Tel: +353 23 41606
Fax: +353 23 44963

www.hahnel.ie

Cross Reference Guide

Referenzliste

Guide des References

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Agfa	DIGITALCAMERA	e PHOTO 780		AA Mignon 2700mAh
Agfa	DIGITALCAMERA	e PHOTO CL 18		AA Mignon 2700mAh
Agfa	DIGITALCAMERA	e PHOTO CL 20		AA Mignon 2700mAh
Agfa	DIGITALCAMERA	e PHOTO CL 34		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	C30		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	C40		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	C51		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	C62		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	DC1300		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	DC1500		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	DC2110		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	DC2300		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	DC3450		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	E30		AA Mignon 2700mAh
BenQ	DIGITALCAMERA	E43	02491-0015-00	HL-BQ1
BenQ	DIGITALCAMERA	E53	02491-0015-00	HL-BQ1
Canon	CAMCORDER	DC10	BP-208	HL-208
Canon	CAMCORDER	DC100	BP-208	HL-208
Canon	CAMCORDER	DC20	BP-208	HL-208
Canon	CAMCORDER	DC201	BP-208	HL-208
Canon	CAMCORDER	DC210		
Canon	CAMCORDER	DC22	BP-208	HL-208
Canon	CAMCORDER	DC220		AA Ni-MH Synergy Ready to Go
Canon	CAMCORDER	DC230	BP-208	HL-208
Canon	CAMCORDER	DC301	NB-2L14	HL-2L14
Canon	CAMCORDER	DC320	NB-2L14	HL-2L14
Canon	CAMCORDER	DC330	NB-2L14	HL-2L14
Canon	CAMCORDER	DC40	BP-208	HL-208
Canon	CAMCORDER	DC410	NB-2L/2LH	HL-2L
Canon	CAMCORDER	DC410	NB-2L14	HL-2L14
Canon	CAMCORDER	DC410	NB-2LH	HL-2LHP
Canon	CAMCORDER	DC420	NB-2L/2LH	HL-2L
Canon	CAMCORDER	DC420	NB-2L14	HL-2L14
Canon	CAMCORDER	DC420	NB-2LH	HL-2LHP
Canon	CAMCORDER	DC50	BP-208	HL-208
Canon	CAMCORDER	DC95	BP-208	HL-208
Canon	CAMCORDER	DV-M5	BP-308	HL-308
Canon	CAMCORDER	DVMV100	BP-608/617	HL-617
Canon	CAMCORDER	DVMV20	BP-608/617	HL-617
Canon	CAMCORDER	ELURA	BP-608/617	HL-617
Canon	CAMCORDER	ELURA 10		
Canon	CAMCORDER	ELURA 2		
Canon	CAMCORDER	ELURA 20MC		
Canon	CAMCORDER	ELURA 40MC	NB-2L14	HL-2L14
Canon	CAMCORDER	ELURA 80	NB-2L14	HL-2L14
Canon	CAMCORDER	ELURA 85	NB-2L14	HL-2L14
Canon	CAMCORDER	ELURA 90	NB-2L14	HL-2L14
Canon	CAMCORDER	ES300V	BP-915	HL-916
Canon	CAMCORDER	ES300V	Bp-945	HL-945
Canon	CAMCORDER	ES300V	BP-970	HL-970
Canon	CAMCORDER	ES4000	BP-915	HL-916
Canon	CAMCORDER	ES4000	Bp-945	HL-945
Canon	CAMCORDER	ES4000	BP-970	HL-970
Canon	CAMCORDER	ES410V	BP-915	HL-916
Canon	CAMCORDER	ES410V	Bp-945	HL-945
Canon	CAMCORDER	ES410V	BP-970	HL-970
Canon	CAMCORDER	ES420	BP-915	HL-916
Canon	CAMCORDER	ES420	Bp-945	HL-945
Canon	CAMCORDER	ES420	BP-970	HL-970
Canon	CAMCORDER	ES50	BP-915	HL-916
Canon	CAMCORDER	ES50	Bp-945	HL-945
Canon	CAMCORDER	ES50	BP-970	HL-970
Canon	CAMCORDER	ES5000	BP-915	HL-916
Canon	CAMCORDER	ES5000	Bp-945	HL-945
Canon	CAMCORDER	ES5000	BP-970	HL-970
Canon	CAMCORDER	ES520A	BP-915	HL-916
Canon	CAMCORDER	ES520A	Bp-945	HL-945
Canon	CAMCORDER	ES520A	BP-970	HL-970
Canon	CAMCORDER	ES60	BP-915	HL-916
Canon	CAMCORDER	ES60	Bp-945	HL-945
Canon	CAMCORDER	ES60	BP-970	HL-970
Canon	CAMCORDER	ES6000	BP-915	HL-916
Canon	CAMCORDER	ES6000	Bp-945	HL-945
Canon	CAMCORDER	ES6000	BP-970	HL-970
Canon	CAMCORDER	ES65	BP-915	HL-916
Canon	CAMCORDER	ES65	Bp-945	HL-945
Canon	CAMCORDER	ES65	BP-970	HL-970
Canon	CAMCORDER	ES7000V	BP-915	HL-916
Canon	CAMCORDER	ES7000V	Bp-945	HL-945
Canon	CAMCORDER	ES7000V	BP-970	HL-970

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Canon	CAMCORDER	ES700ES		
Canon	CAMCORDER	ES75	BP-915	HL-916
Canon	CAMCORDER	ES75	Bp-945	HL-945
Canon	CAMCORDER	ES75	BP-970	HL-970
Canon	CAMCORDER	ES8000V		
Canon	CAMCORDER	ES8100HI8	BP-915	HL-916
Canon	CAMCORDER	ES8100HI8	Bp-945	HL-945
Canon	CAMCORDER	ES8100HI8	BP-970	HL-970
Canon	CAMCORDER	ES8100V	BP-915	HL-916
Canon	CAMCORDER	ES8100V	Bp-945	HL-945
Canon	CAMCORDER	ES8100V	BP-970	HL-970
Canon	CAMCORDER	ES8200		
Canon	CAMCORDER	ES8200V	BP-915	HL-916
Canon	CAMCORDER	ES8200V	Bp-945	HL-945
Canon	CAMCORDER	ES8200V	BP-970	HL-970
Canon	CAMCORDER	ES8400	BP-915	HL-916
Canon	CAMCORDER	ES8400	Bp-945	HL-945
Canon	CAMCORDER	ES8400	BP-970	HL-970
Canon	CAMCORDER	ES8600	BP-915	HL-916
Canon	CAMCORDER	ES8600	Bp-945	HL-945
Canon	CAMCORDER	ES8600	BP-970	HL-970
Canon	CAMCORDER	FS200	N/A	N/A
Canon	CAMCORDER	FS21	N/A	N/A
Canon	CAMCORDER	FS22	N/A	N/A
Canon	CAMCORDER	FV40	BP-511	HL-511
Canon	CAMCORDER	FV40	BP-522	HL-522
Canon	CAMCORDER	FV400	BP-511	HL-511
Canon	CAMCORDER	FV400	BP-522	HL-522
Canon	CAMCORDER	G10	BP-915	HL-916
Canon	CAMCORDER	G10	Bp-945	HL-945
Canon	CAMCORDER	G10	BP-970	HL-970
Canon	CAMCORDER	G1000	BP-915	HL-916
Canon	CAMCORDER	G1000	Bp-945	HL-945
Canon	CAMCORDER	G1000	BP-970	HL-970
Canon	CAMCORDER	G10HI	BP-915	HL-916
Canon	CAMCORDER	G10HI	Bp-945	HL-945
Canon	CAMCORDER	G10HI	BP-970	HL-970
Canon	CAMCORDER	G15	BP-915	HL-916
Canon	CAMCORDER	G15	Bp-945	HL-945
Canon	CAMCORDER	G15	BP-970	HL-970
Canon	CAMCORDER	G1500	BP-915	HL-916
Canon	CAMCORDER	G1500	Bp-945	HL-945
Canon	CAMCORDER	G1500	BP-970	HL-970
Canon	CAMCORDER	G20	BP-915	HL-916
Canon	CAMCORDER	G20	Bp-945	HL-945
Canon	CAMCORDER	G20	BP-970	HL-970
Canon	CAMCORDER	G2000	BP-915	HL-916
Canon	CAMCORDER	G2000	Bp-945	HL-945
Canon	CAMCORDER	G2000	BP-970	HL-970
Canon	CAMCORDER	G30	BP-915	HL-916
Canon	CAMCORDER	G30	Bp-945	HL-945
Canon	CAMCORDER	G30	BP-970	HL-970
Canon	CAMCORDER	G35	BP-915	HL-916
Canon	CAMCORDER	G35	Bp-945	HL-945
Canon	CAMCORDER	G35	BP-970	HL-970
Canon	CAMCORDER	G45	BP-915	HL-916
Canon	CAMCORDER	G45	Bp-945	HL-945
Canon	CAMCORDER	G45	BP-970	HL-970
Canon	CAMCORDER	GL1	BP-915	HL-916
Canon	CAMCORDER	GL1	Bp-945	HL-945
Canon	CAMCORDER	GL1	BP-970	HL-970
Canon	CAMCORDER	GL2	BP-915	HL-916
Canon	CAMCORDER	GL2	Bp-945	HL-945
Canon	CAMCORDER	GL2	BP-970	HL-970
Canon	CAMCORDER	HF10		
Canon	CAMCORDER	HF10		
Canon	CAMCORDER	HF100		
Canon	CAMCORDER	HF11		
Canon	CAMCORDER	HF20	N/A	N/A
Canon	CAMCORDER	HF200	N/A	N/A
Canon	CAMCORDER	HF-S10	N/A	N/A
Canon	CAMCORDER	HF-S100	N/A	N/A
Canon	CAMCORDER	HG10	NB-2L14	HL-2L14
Canon	CAMCORDER	HG20		
Canon	CAMCORDER	HG21		
Canon	CAMCORDER	HR10		
Canon	CAMCORDER	HV10	BP-308	HL-308
Canon	CAMCORDER	HV-20	NB-2L14	HL-2L14
Canon	CAMCORDER	HV30	NB-2L/2LH	HL-2L
Canon	CAMCORDER	HV30	NB-2L14	HL-2L14

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Canon	CAMCORDER	HV30	NB-2L14	HL-2L14
Canon	CAMCORDER	HV30	BP-2L24	HL-2L24
Canon	CAMCORDER	HV30	NB-2LH	HL-2LHP
Canon	CAMCORDER	HV30 HDV	NB-2L14	HL-2L14
Canon	CAMCORDER	HV40	NB-2L/2LH	HL-2L
Canon	CAMCORDER	HV40	NB-2L14	HL-2L14
Canon	CAMCORDER	HV40	2L21	HL-2L21
Canon	CAMCORDER	HV40	BP-2L24	HL-2L24
Canon	CAMCORDER	HV40	NB-2LH	HL-2LHP
Canon	CAMCORDER	ICX1HI		
Canon	CAMCORDER	Ixy DV S1	BP-208	HL-208
Canon	CAMCORDER	MD101	NB-2L14	HL-2L14
Canon	CAMCORDER	MD110	NB-2L14	HL-2L14
Canon	CAMCORDER	MD205	NB-2L14	HL-2L14
Canon	CAMCORDER	MD235	NB-2L14	HL-2L14
Canon	CAMCORDER	MV1	BP-915	HL-916
Canon	CAMCORDER	MV1	Bp-945	HL-945
Canon	CAMCORDER	MV1	BP-970	HL-970
Canon	CAMCORDER	MV10	BP-915	HL-916
Canon	CAMCORDER	MV10	Bp-945	HL-945
Canon	CAMCORDER	MV10	BP-970	HL-970
Canon	CAMCORDER	MV100	BP-608/617	HL-617
Canon	CAMCORDER	MV20	BP-608/617	HL-617
Canon	CAMCORDER	MV200	BP-915	HL-916
Canon	CAMCORDER	MV3		
Canon	CAMCORDER	MV30	BP-511	HL-511
Canon	CAMCORDER	MV30	BP-522	HL-522
Canon	CAMCORDER	MV300	BP-511	HL-511
Canon	CAMCORDER	MV300	BP-522	HL-522
Canon	CAMCORDER	MV300i	BP-511	HL-511
Canon	CAMCORDER	MV300i	BP-522	HL-522
Canon	CAMCORDER	MV30i	BP-511	HL-511
Canon	CAMCORDER	MV30i	BP-522	HL-522
Canon	CAMCORDER	MV400	BP-511	HL-511
Canon	CAMCORDER	MV400	BP-522	HL-522
Canon	CAMCORDER	MV400i	BP-511	HL-511
Canon	CAMCORDER	MV400i	BP-522	HL-522
Canon	CAMCORDER	MV430	BP-511	HL-511
Canon	CAMCORDER	MV430	BP-522	HL-522
Canon	CAMCORDER	MV430i	BP-511	HL-511
Canon	CAMCORDER	MV430i	BP-522	HL-522
Canon	CAMCORDER	MV450	BP-511	HL-511
Canon	CAMCORDER	MV450	BP-522	HL-522
Canon	CAMCORDER	MV450i	BP-511	HL-511
Canon	CAMCORDER	MV450i	BP-522	HL-522
Canon	CAMCORDER	MV4i		
Canon	CAMCORDER	MV4i MC		
Canon	CAMCORDER	MV5	NB-2L14	HL-2L14
Canon	CAMCORDER	MV500	BP-511	HL-511
Canon	CAMCORDER	MV500	BP-522	HL-522
Canon	CAMCORDER	MV500i		
Canon	CAMCORDER	MV520		
Canon	CAMCORDER	MV530		
Canon	CAMCORDER	MV530i	BP-511	HL-511
Canon	CAMCORDER	MV530i	BP-522	HL-522
Canon	CAMCORDER	MV550	BP-511	HL-511
Canon	CAMCORDER	MV550	BP-522	HL-522
Canon	CAMCORDER	MV550i	BP-511	HL-511
Canon	CAMCORDER	MV550i	BP-522	HL-522
Canon	CAMCORDER	MV5i	NB-2L14	HL-2L14
Canon	CAMCORDER	MV5iMC	NB-2L14	HL-2L14
Canon	CAMCORDER	MV6	NB-2L14	HL-2L14
Canon	CAMCORDER	MV600	BP-511	HL-511
Canon	CAMCORDER	MV600	BP-522	HL-522
Canon	CAMCORDER	MV600i	BP-511	HL-511
Canon	CAMCORDER	MV600i	BP-522	HL-522
Canon	CAMCORDER	MV630	BP-511	HL-511
Canon	CAMCORDER	MV630	BP-522	HL-522
Canon	CAMCORDER	MV630i	BP-511	HL-511
Canon	CAMCORDER	MV630i	BP-522	HL-522
Canon	CAMCORDER	MV650	BP-511	HL-511
Canon	CAMCORDER	MV650	BP-522	HL-522
Canon	CAMCORDER	MV650i	BP-511	HL-511
Canon	CAMCORDER	MV650i	BP-522	HL-522
Canon	CAMCORDER	MV6i	NB-2L14	HL-2L14
Canon	CAMCORDER	MV6iMC	NB-2L14	HL-2L14
Canon	CAMCORDER	MV700	BP-511	HL-511
Canon	CAMCORDER	MV700	BP-522	HL-522
Canon	CAMCORDER	MV700i	BP-511	HL-511
Canon	CAMCORDER	MV700i	BP-522	HL-522

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Canon	CAMCORDER	MV730	BP-511	HL-511
Canon	CAMCORDER	MV730	BP-522	HL-522
Canon	CAMCORDER	MV730i	BP-511	HL-511
Canon	CAMCORDER	MV730i	BP-522	HL-522
Canon	CAMCORDER	MV750	BP-511	HL-511
Canon	CAMCORDER	MV750	BP-522	HL-522
Canon	CAMCORDER	MV750i	BP-511	HL-511
Canon	CAMCORDER	MV750i	BP-522	HL-522
Canon	CAMCORDER	MV800	NB-2L14	HL-2L14
Canon	CAMCORDER	MV830	NB-2L14	HL-2L14
Canon	CAMCORDER	MV850	NB-2L14	HL-2L14
Canon	CAMCORDER	MV880X	NB-2L14	HL-2L14
Canon	CAMCORDER	MV890	NB-2L14	HL-2L14
Canon	CAMCORDER	MV900	NB-2L14	HL-2L14
Canon	CAMCORDER	MV901	NB-2L14	HL-2L14
Canon	CAMCORDER	MV930	NB-2L14	HL-2L14
Canon	CAMCORDER	MV950	NB-2L14	HL-2L14
Canon	CAMCORDER	MV960	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX1		
Canon	CAMCORDER	MVX10		
Canon	CAMCORDER	MVX100	BP-511	HL-511
Canon	CAMCORDER	MVX100	BP-522	HL-522
Canon	CAMCORDER	MVX100i	BP-511	HL-511
Canon	CAMCORDER	MVX100i	BP-522	HL-522
Canon	CAMCORDER	MVX150	BP-511	HL-511
Canon	CAMCORDER	MVX150	BP-522	HL-522
Canon	CAMCORDER	MVX150i	BP-511	HL-511
Canon	CAMCORDER	MVX150i	BP-522	HL-522
Canon	CAMCORDER	MVX20	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX200	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX250	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX25i	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX2i	BP-511	HL-511
Canon	CAMCORDER	MVX2i	BP-522	HL-522
Canon	CAMCORDER	MVX30	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX300	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX330	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX35	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX350	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX3i	BP-511	HL-511
Canon	CAMCORDER	MVX3i	BP-522	HL-522
Canon	CAMCORDER	MVX40	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX400	BP-208	HL-208
Canon	CAMCORDER	MVX45	NB-2L14	HL-2L14
Canon	CAMCORDER	MVX450	BP-208	HL-208
Canon	CAMCORDER	MVX460	BP-208	HL-208
Canon	CAMCORDER	MVX4i	BP-308	HL-308
Canon	CAMCORDER	MVXLi	BP-511	HL-511
Canon	CAMCORDER	MVXLi	BP-522	HL-522
Canon	CAMCORDER	OPTURA	BP-511	HL-511
Canon	CAMCORDER	OPTURA	BP-522	HL-522
Canon	CAMCORDER	Optura 100MC	BP-511	HL-511
Canon	CAMCORDER	Optura 100MC	BP-522	HL-522
Canon	CAMCORDER	Optura 200MC	BP-511	HL-511
Canon	CAMCORDER	Optura 200MC	BP-522	HL-522
Canon	CAMCORDER	OPTURA 500	NB-2L14	HL-2L14
Canon	CAMCORDER	OPTURA 600	NB-2L14	HL-2L14
Canon	CAMCORDER	OPTURA 600	BP-308	HL-308
Canon	CAMCORDER	Optura Pi	BP-511	HL-511
Canon	CAMCORDER	Optura Pi	BP-522	HL-522
Canon	CAMCORDER	OPTURA S1	BP-208	HL-208
Canon	CAMCORDER	UCV100	BP-915	HL-916
Canon	CAMCORDER	UCV100	Bp-945	HL-945
Canon	CAMCORDER	UCV100	BP-970	HL-970
Canon	CAMCORDER	UCV10HI	BP-915	HL-916
Canon	CAMCORDER	UCV10HI	Bp-945	HL-945
Canon	CAMCORDER	UCV10HI	BP-970	HL-970
Canon	CAMCORDER	UCV200	BP-915	HL-916
Canon	CAMCORDER	UCV200	Bp-945	HL-945
Canon	CAMCORDER	UCV200	BP-970	HL-970
Canon	CAMCORDER	UCV20HI	BP-915	HL-916
Canon	CAMCORDER	UCV20HI	Bp-945	HL-945
Canon	CAMCORDER	UCV20HI	BP-970	HL-970
Canon	CAMCORDER	UCV30HI	BP-915	HL-916
Canon	CAMCORDER	UCV30HI	Bp-945	HL-945
Canon	CAMCORDER	UCV30HI	BP-970	HL-970
Canon	CAMCORDER	UCX2	BP-915	HL-916
Canon	CAMCORDER	UCX2	Bp-945	HL-945
Canon	CAMCORDER	UCX2	BP-970	HL-970
Canon	CAMCORDER	UCX2HI	BP-915	HL-916

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Canon	CAMCORDER	UCX2HI	Bp-945	HL-945
Canon	CAMCORDER	UCX2HI	BP-970	HL-970
Canon	CAMCORDER	UCX30HI	BP-915	HL-916
Canon	CAMCORDER	UCX30HI	Bp-945	HL-945
Canon	CAMCORDER	UCX30HI	BP-970	HL-970
Canon	CAMCORDER	UCX3HI	BP-915	HL-916
Canon	CAMCORDER	UCX3HI	Bp-945	HL-945
Canon	CAMCORDER	UCX3HI	BP-970	HL-970
Canon	CAMCORDER	UCX40HI	BP-915	HL-916
Canon	CAMCORDER	UCX40HI	Bp-945	HL-945
Canon	CAMCORDER	UCX40HI	BP-970	HL-970
Canon	CAMCORDER	UCX45HI	BP-915	HL-916
Canon	CAMCORDER	UCX45HI	Bp-945	HL-945
Canon	CAMCORDER	UCX45HI	BP-970	HL-970
Canon	CAMCORDER	UCX50HI		
Canon	CAMCORDER	UCX55HI	BP-915	HL-916
Canon	CAMCORDER	UCX55HI	Bp-945	HL-945
Canon	CAMCORDER	UCX55HI	BP-970	HL-970
Canon	CAMCORDER	ULTURA	BP-915	HL-916
Canon	CAMCORDER	ULTURA	Bp-945	HL-945
Canon	CAMCORDER	ULTURA	BP-970	HL-970
Canon	CAMCORDER	UV-X20		
Canon	CAMCORDER	V20	BP-915	HL-916
Canon	CAMCORDER	V20	Bp-945	HL-945
Canon	CAMCORDER	V20	BP-970	HL-970
Canon	CAMCORDER	V200	BP-915	HL-916
Canon	CAMCORDER	V200	Bp-945	HL-945
Canon	CAMCORDER	V200	BP-970	HL-970
Canon	CAMCORDER	V30	BP-915	HL-916
Canon	CAMCORDER	V30	Bp-945	HL-945
Canon	CAMCORDER	V30	BP-970	HL-970
Canon	CAMCORDER	V300	BP-915	HL-916
Canon	CAMCORDER	V300	Bp-945	HL-945
Canon	CAMCORDER	V300	BP-970	HL-970
Canon	CAMCORDER	V40	BP-915	HL-916
Canon	CAMCORDER	V40	Bp-945	HL-945
Canon	CAMCORDER	V40	BP-970	HL-970
Canon	CAMCORDER	V400	BP-915	HL-916
Canon	CAMCORDER	V400	Bp-945	HL-945
Canon	CAMCORDER	V400	BP-970	HL-970
Canon	CAMCORDER	V40HI	BP-915	HL-916
Canon	CAMCORDER	V40HI	Bp-945	HL-945
Canon	CAMCORDER	V40HI	BP-970	HL-970
Canon	CAMCORDER	V420	BP-915	HL-916
Canon	CAMCORDER	V420	Bp-945	HL-945
Canon	CAMCORDER	V420	BP-970	HL-970
Canon	CAMCORDER	V50	BP-915	HL-916
Canon	CAMCORDER	V50	Bp-945	HL-945
Canon	CAMCORDER	V50	BP-970	HL-970
Canon	CAMCORDER	V500	BP-915	HL-916
Canon	CAMCORDER	V500	Bp-945	HL-945
Canon	CAMCORDER	V500	BP-970	HL-970
Canon	CAMCORDER	V520	BP-915	HL-916
Canon	CAMCORDER	V520	Bp-945	HL-945
Canon	CAMCORDER	V520	BP-970	HL-970
Canon	CAMCORDER	V60	BP-915	HL-916
Canon	CAMCORDER	V60	Bp-945	HL-945
Canon	CAMCORDER	V60	BP-970	HL-970
Canon	CAMCORDER	V65	BP-915	HL-916
Canon	CAMCORDER	V65	Bp-945	HL-945
Canon	CAMCORDER	V65	BP-970	HL-970
Canon	CAMCORDER	V75	BP-915	HL-916
Canon	CAMCORDER	V75	Bp-945	HL-945
Canon	CAMCORDER	V75	BP-970	HL-970
Canon	CAMCORDER	VISTURA	BP-915	HL-916
Canon	CAMCORDER	VISTURA	Bp-945	HL-945
Canon	CAMCORDER	VISTURA	BP-970	HL-970
Canon	CAMCORDER	X1 Hi	BP-915	HL-916
Canon	CAMCORDER	X1 Hi	Bp-945	HL-945
Canon	CAMCORDER	X1 Hi	BP-970	HL-970
Canon	CAMCORDER	X150i	BP-511	HL-511
Canon	CAMCORDER	X150i	BP-522	HL-522
Canon	CAMCORDER	X2 Hi	BP-915	HL-916
Canon	CAMCORDER	X2 Hi	Bp-945	HL-945
Canon	CAMCORDER	X2 Hi	BP-970	HL-970
Canon	CAMCORDER	X30 Hi	BP-915	HL-916
Canon	CAMCORDER	X30 Hi	Bp-945	HL-945
Canon	CAMCORDER	X30 Hi	BP-970	HL-970
Canon	CAMCORDER	X40 Hi	BP-915	HL-916
Canon	CAMCORDER	X40 Hi	Bp-945	HL-945

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Canon	CAMCORDER	X40 Hi	BP-970	HL-970
Canon	CAMCORDER	X45 Hi	BP-915	HL-916
Canon	CAMCORDER	X45 Hi	Bp-945	HL-945
Canon	CAMCORDER	X45 Hi	BP-970	HL-970
Canon	CAMCORDER	X50 Hi	BP-915	HL-916
Canon	CAMCORDER	X50 Hi	Bp-945	HL-945
Canon	CAMCORDER	X50 Hi	BP-970	HL-970
Canon	CAMCORDER	X55 Hi		
Canon	CAMCORDER	XH-A1 Pro	BP-970	HL-970
Canon	CAMCORDER	XHA1 PRO	Bp-945	HL-945
Canon	CAMCORDER	XHA1 PRO	BP-970	HL-970
Canon	CAMCORDER	XH-G1 Pro	BP-970	HL-970
Canon	CAMCORDER	XHG1 PRO	Bp-945	HL-945
Canon	CAMCORDER	XHG1 PRO	BP-970	HL-970
Canon	CAMCORDER	XH-H1 Pro	BP-970	HL-970
Canon	CAMCORDER	XL1	BP-915	HL-916
Canon	CAMCORDER	XL1	Bp-945	HL-945
Canon	CAMCORDER	XL1	BP-970	HL-970
Canon	CAMCORDER	XL1S	BP-915	HL-916
Canon	CAMCORDER	XL1S	Bp-945	HL-945
Canon	CAMCORDER	XL1S	BP-970	HL-970
Canon	CAMCORDER	XL2	BP-915	HL-916
Canon	CAMCORDER	XL2	Bp-945	HL-945
Canon	CAMCORDER	XL2	BP-970	HL-970
Canon	CAMCORDER	XLH1 / XLH1A / XLH1S PRO	Bp-945	HL-945
Canon	CAMCORDER	XLH1 / XLH1A / XLH1S PRO	BP-970	HL-970
Canon	CAMCORDER	XLH1 PRO HDV	BP-915	HL-916
Canon	CAMCORDER	XLH1 PRO HDV	Bp-945	HL-945
Canon	CAMCORDER	XLH1 PRO HDV	BP-970	HL-970
Canon	CAMCORDER	XLM2	BP-915	HL-916
Canon	CAMCORDER	XLM2	Bp-945	HL-945
Canon	CAMCORDER	XLM2	BP-970	HL-970
Canon	CAMCORDER	XM1	BP-915	HL-916
Canon	CAMCORDER	XM1	Bp-945	HL-945
Canon	CAMCORDER	XM1	BP-970	HL-970
Canon	CAMCORDER	XM2	BP-915	HL-916
Canon	CAMCORDER	XM2	Bp-945	HL-945
Canon	CAMCORDER	XM2	BP-970	HL-970
Canon	CAMCORDER	ZR	BP-608/617	HL-617
Canon	CAMCORDER	ZR10	BP-608/617	HL-617
Canon	CAMCORDER	ZR100	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR100	BP-608/617	HL-617
Canon	CAMCORDER	ZR20	BP-511	HL-511
Canon	CAMCORDER	ZR20	BP-522	HL-522
Canon	CAMCORDER	ZR200	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR25mc	BP-511	HL-511
Canon	CAMCORDER	ZR25mc	BP-522	HL-522
Canon	CAMCORDER	ZR300	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR30mc	BP-511	HL-511
Canon	CAMCORDER	ZR30mc	BP-522	HL-522
Canon	CAMCORDER	ZR40	BP-511	HL-511
Canon	CAMCORDER	ZR40	BP-522	HL-522
Canon	CAMCORDER	ZR400	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR45	BP-511	HL-511
Canon	CAMCORDER	ZR45	BP-522	HL-522
Canon	CAMCORDER	ZR50	BP-511	HL-511
Canon	CAMCORDER	ZR50	BP-522	HL-522
Canon	CAMCORDER	ZR500	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR50MC	BP-511	HL-511
Canon	CAMCORDER	ZR50MC	BP-522	HL-522
Canon	CAMCORDER	ZR600	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR60MC	BP-511	HL-511
Canon	CAMCORDER	ZR60MC	BP-522	HL-522
Canon	CAMCORDER	ZR65MC		
Canon	CAMCORDER	ZR700	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR70MC		
Canon	CAMCORDER	ZR80	BP-511	HL-511
Canon	CAMCORDER	ZR80	BP-522	HL-522
Canon	CAMCORDER	ZR800	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR830	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR85	BP-511	HL-511
Canon	CAMCORDER	ZR85	BP-522	HL-522
Canon	CAMCORDER	ZR850	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR90	BP-511	HL-511
Canon	CAMCORDER	ZR90	BP-522	HL-522
Canon	CAMCORDER	ZR900	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR930	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR950	NB-2L14	HL-2L14
Canon	CAMCORDER	ZR960	NB-2L/2LH	HL-2L
Canon	CAMCORDER	ZR960	NB-2L14	HL-2L14

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Canon	CAMCORDER	ZR960	NB-2LH	HL-2LHP
Canon	CAMCORDER	ZRCV11	BP-608/617	HL-617
Canon	DIGITALCAMERA	A10		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A100		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A1000 IS		
Canon	DIGITALCAMERA	A20		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A200		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A2000 IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A30		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A300		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A310		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A40		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A40		HL-PL68
Canon	DIGITALCAMERA	A400		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A410		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A420		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A430		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A450		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A460		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A470		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A480		AA Mignon 2350mAh
Canon	DIGITALCAMERA	A480		AA Mignon 2500mAh
Canon	DIGITALCAMERA	A480		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A480		AA Ni-MH Synergy Ready to Go
Canon	DIGITALCAMERA	A5	NB-5H	HN-5H
Canon	DIGITALCAMERA	A50		
Canon	DIGITALCAMERA	A510		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A520		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A530		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A540		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A550		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A560		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A570		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A580		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A590 IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A60		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A610		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A620		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A630		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A640		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A650 IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A70		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A700		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A710IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A720 IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A75		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A80		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A85		AA Mignon 2700mAh
Canon	DIGITALCAMERA	A95		AA Mignon 2700mAh
Canon	DIGITALCAMERA	EOS 1000D SLR	LP-E5	HL-E5
Canon	DIGITALCAMERA	EOS 10DS	BP-511	HL-511
Canon	DIGITALCAMERA	EOS 1D SLR	NP-E3	HN-E3
Canon	DIGITALCAMERA	EOS 1D Mark II	NP-E3	HN-E3
Canon	DIGITALCAMERA	EOS 1DS	NP-E3	HN-E3
Canon	DIGITALCAMERA	EOS 1DS Mark II	NP-E3	HN-E3
Canon	DIGITALCAMERA	EOS 20D	BP-511	HL-511
Canon	DIGITALCAMERA	EOS 300D	BP-511	HL-511
Canon	DIGITALCAMERA	EOS 30D	BP-511	HL-511
Canon	DIGITALCAMERA	EOS 350D	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	EOS 350D GRIP	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	EOS 400D	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	EOS 40D	BP-511	HL-511
Canon	DIGITALCAMERA	EOS 450D SLR	LP-E5	HL-E5
Canon	DIGITALCAMERA	EOS 50D SLR	BP-511	HL-511
Canon	DIGITALCAMERA	EOS 5D	BP-511	HL-511
Canon	DIGITALCAMERA	EOS 5D MARK II		
Canon	DIGITALCAMERA	EOS D10	BP-511	HL-511
Canon	DIGITALCAMERA	EOS D30	BP-511	HL-511
Canon	DIGITALCAMERA	EOS D60	BP-511	HL-511
Canon	DIGITALCAMERA	EOS-1D Mark II N	NP-E3	HN-E3
Canon	DIGITALCAMERA	EOS-1Ds MARK III SLR		
Canon	DIGITALCAMERA	G1	BP-511	HL-511
Canon	DIGITALCAMERA	G2	BP-511	HL-511
Canon	DIGITALCAMERA	G3	BP-511	HL-511
Canon	DIGITALCAMERA	G3	NP-60	HL-F60
Canon	DIGITALCAMERA	G5	BP-511	HL-511
Canon	DIGITALCAMERA	G6	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	G6	BP-511	HL-511
Canon	DIGITALCAMERA	G9	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	Ixus	NB-1LH	HL-1LHP

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Canon	DIGITALCAMERA	Ixus 30	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	Ixus 300	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	Ixus 330	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	Ixus 40	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	Ixus 400	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	Ixus 430	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	Ixus 50	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	Ixus 500	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	IXUS 55	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	Ixus 60	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	Ixus 65	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	IXUS 70	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	Ixus 700	NB-3L	HL-3L
Canon	DIGITALCAMERA	IXUS 75	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	IXUS 750	NB-3L	HL-3L
Canon	DIGITALCAMERA	IXUS 80 IS	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	Ixus 800 IS	NB-5L	HL-5L
Canon	DIGITALCAMERA	IXUS 85	NB-6L	HL-6L
Canon	DIGITALCAMERA	Ixus 850	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	IXUS 90	NB-5L	HL-5L
Canon	DIGITALCAMERA	Ixus 900	NB-5L	HL-5L
Canon	DIGITALCAMERA	IXUS 970	NB-5L	HL-5L
Canon	DIGITALCAMERA	Ixus i	NB-3L	HL-3L
Canon	DIGITALCAMERA	Ixus i	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	Ixus i5	NB-3L	HL-3L
Canon	DIGITALCAMERA	IXUS I7	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	Ixus II	NB-3L	HL-3L
Canon	DIGITALCAMERA	Ixus IIs	NB-3L	HL-3L
Canon	DIGITALCAMERA	Ixus V	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	Ixus V2	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	Ixus V3	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	IXUS WIRELESS	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	P90	BP-511	HL-511
Canon	DIGITALCAMERA	PowerShot G7	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	Pro 1	BP-511	HL-511
Canon	DIGITALCAMERA	PRO 70		AA Mignon 2700mAh
Canon	DIGITALCAMERA	Pro 90IS	BP-511	HL-511
Canon	DIGITALCAMERA	Rebel XS	LP-E5	HL-E5
Canon	DIGITALCAMERA	REBEL Xsi	LP-E5	HL-E5
Canon	DIGITALCAMERA	Rebel XT	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	Rebel XT GRIP		
Canon	DIGITALCAMERA	Rebel XT GRIP	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	Rebel Xti (400D)	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	Rebel Xti SLR	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	S1 IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	S10		
Canon	DIGITALCAMERA	S100	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	S110	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	S2 IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	S20		
Canon	DIGITALCAMERA	S200	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	S230	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	S3 IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	S30	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	S300	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	S330	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	S40	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	S400	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	S410	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	S45	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	S5 IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	S50	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	S500	NB-1LH	HL-1LHP
Canon	DIGITALCAMERA	S520		
Canon	DIGITALCAMERA	S60	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	S70	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	S80	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	SD10	NB-3L	HL-3L
Canon	DIGITALCAMERA	SD100	NB-3L	HL-3L
Canon	DIGITALCAMERA	SD1000	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD110	NB-3L	HL-3L
Canon	DIGITALCAMERA	SD1100 IS	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD20	NB-3L	HL-3L
Canon	DIGITALCAMERA	SD200	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD30	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD300	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD40	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD400	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD430 Wireless	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD450	NB-4L	HL-4LHP

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Canon	DIGITALCAMERA	SD500	NB-3L	HL-3L
Canon	DIGITALCAMERA	SD550	NB-3L	HL-3L
Canon	DIGITALCAMERA	SD600	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD630	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD700	NB-5L	HL-5L
Canon	DIGITALCAMERA	SD750	NB-4L	HL-4LHP
Canon	DIGITALCAMERA	SD770	NB-6L	HL-6L
Canon	DIGITALCAMERA	SD790	NB-5L	HL-5L
Canon	DIGITALCAMERA	SD800 IS	NB-2LH	HL-2LHP
Canon	DIGITALCAMERA	SD850IS	NB-5L	HL-5L
Canon	DIGITALCAMERA	SD860 IS	NB-5L	HL-5L
Canon	DIGITALCAMERA	SD870 IS	NB-5L	HL-5L
Canon	DIGITALCAMERA	SD890 IS	NB-5L	HL-5L
Canon	DIGITALCAMERA	SD900	NB-5L	HL-5L
Canon	DIGITALCAMERA	SD950 IS	NB-5L	HL-5L
Canon	DIGITALCAMERA	SD960 IS	NB-5L	HL-5L
Canon	DIGITALCAMERA	SX100 IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	SX110 IS		AA Mignon 2700mAh
Canon	DIGITALCAMERA	TX1	NB-4L	HL-4LHP
Casio	DIGITALCAMERA	EX-1050	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-750	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-A270	N/A	N/A
Casio	DIGITALCAMERA	EX-FC100	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-FS10	NP-CA60	HL-CA60
Casio	DIGITALCAMERA	EX-M1	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-M2	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-M20U	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-P505	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-P600	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-P700	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-S1	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-S10	NP-CA60	HL-CA60
Casio	DIGITALCAMERA	EX-S100	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-S12	NP-CA60	HL-CA60
Casio	DIGITALCAMERA	EX-S2	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-S20U	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-S3	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-S5	N/A	N/A
Casio	DIGITALCAMERA	EX-S500	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-S600	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-S600D	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-S770	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-S880	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-V7		HL-CA50
Casio	DIGITALCAMERA	EX-V8		HL-CA50
Casio	DIGITALCAMERA	EX-Z10		AA Mignon 2700mAh
Casio	DIGITALCAMERA	EX-Z100	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z1000	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z1080	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z110		AA Mignon 2700mAh
Casio	DIGITALCAMERA	EX-Z120		AA Mignon 2700mAh
Casio	DIGITALCAMERA	EX-Z1200SR	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z150		HL-F70
Casio	DIGITALCAMERA	EX-Z200	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z250	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z3	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-Z300		HL-F70
Casio	DIGITALCAMERA	EX-Z4	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-Z40	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z400	N/A	N/A
Casio	DIGITALCAMERA	EX-Z4U	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-Z50	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z500	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z55	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z57	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z60	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-Z600	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z70	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-Z700	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z75	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-Z750	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z77	NP-20	HL-CA20
Casio	DIGITALCAMERA	EX-Z80	NP-CA60	HL-CA60
Casio	DIGITALCAMERA	EX-Z85	NP-CA60	HL-CA60
Casio	DIGITALCAMERA	EX-Z850	NP-40	HL-CA40
Casio	DIGITALCAMERA	EX-Z9	NP-CA60	HL-CA60
Casio	DIGITALCAMERA	GV-20 G-BROS		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-2300		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-2400		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-2800		AA Mignon 2700mAh

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Casio	DIGITALCAMERA	QV-2900		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-3000		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-3500		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-4000		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-5700		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-R3	NP-30	HL-CA30
Casio	DIGITALCAMERA	QV-R4	NP-30	HL-CA30
Casio	DIGITALCAMERA	QV-R40		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-R51		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-R62		AA Mignon 2700mAh
Casio	DIGITALCAMERA	QV-S20U	NP-20	HL-CA20
Centon	DIGITALCAMERA	DC4s		
Centon	DIGITALCAMERA	DC5	NP-60	HL-F60
Concord	DIGITALCAMERA	5345z		AA Mignon 2700mAh
Concord	DIGITALCAMERA	EYE-Q 2100 AF		AA Mignon 2700mAh
Concord	DIGITALCAMERA	EYE-Q 3100 AF		AA Mignon 2700mAh
Concord	DIGITALCAMERA	EYE-Q 3120 AF		AA Mignon 2700mAh
Contax	DIGITALCAMERA	I4R		
Contax	DIGITALCAMERA	N1		AA Mignon 2700mAh
Contax	DIGITALCAMERA	TVS DIGITAL		
Contax	DIGITALCAMERA	U4R	BP-1100	HL-1100
Creative Labs	CAMCORDER	DiVi CAM 316		AA Mignon 2700mAh
D'Zign	DIGITALCAMERA	DZ 338		AA Mignon 2700mAh
Epson	DIGITALCAMERA	PHOTO PC 3000Z		AA Mignon 2700mAh
Epson	DIGITALCAMERA	PHOTO PC 3100Z		AA Mignon 2700mAh
Epson	DIGITALCAMERA	PHOTO PC 650		AA Mignon 2700mAh
Epson	DIGITALCAMERA	PHOTO PC 850Z		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	@XIA IX-10		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	@XIA IX-100		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	DS-260	NP-100	HL-F100
Fujifilm	DIGITALCAMERA	DS-7		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	DX-10		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	DX-5		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	DX-7		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	DX-8		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	F100fd		HL-F50
Fujifilm	DIGITALCAMERA	Finepix 1300		
Fujifilm	DIGITALCAMERA	Finepix 1300	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	Finepix 1400		
Fujifilm	DIGITALCAMERA	Finepix 1400	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	Finepix 205s		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix 2300		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix 2400		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix 2600		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix 2650		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix 2800		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix 30i		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix 3800		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix 401i	NP-60	HL-F60
Fujifilm	DIGITALCAMERA	Finepix 402	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	Finepix 40i		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix 4700		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix 4800	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	Finepix 4900	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	Finepix 50i	NP-60	HL-F60
Fujifilm	DIGITALCAMERA	Finepix 6800	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	Finepix 6900	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	FinePix A100		AA Mignon 2350mAh
Fujifilm	DIGITALCAMERA	FinePix A100		AA Mignon 2500mAh
Fujifilm	DIGITALCAMERA	FinePix A100		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	FinePix A100		AA Ni-MH Synergy Ready to Go
Fujifilm	DIGITALCAMERA	Finepix A101		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A120		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	FinePix A150		AA Mignon 2350mAh
Fujifilm	DIGITALCAMERA	FinePix A150		AA Mignon 2500mAh
Fujifilm	DIGITALCAMERA	FinePix A150		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	FinePix A150		AA Ni-MH Synergy Ready to Go
Fujifilm	DIGITALCAMERA	Finepix A201		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A202		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A203		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A204		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A205		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A210		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A303		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A310		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A330		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A340		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A345		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A350		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A400		AA Mignon 2700mAh

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Fujifilm	DIGITALCAMERA	Finepix A500		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A600		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A610		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A800		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A820		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix A900		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	FinePix A920		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix E500		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix E510		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix E550		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix E900		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix F10	NP-120	HL-F120
Fujifilm	DIGITALCAMERA	Finepix F11	NP-120	HL-F120
Fujifilm	DIGITALCAMERA	Finepix F20		HL-F70
Fujifilm	DIGITALCAMERA	FINEPIX F2000HD		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	FinePix F200EXR		HL-F50
Fujifilm	DIGITALCAMERA	Finepix F30	NP-95	HL-F95
Fujifilm	DIGITALCAMERA	Finepix F31	NP-95	HL-F95
Fujifilm	DIGITALCAMERA	FinePix F40 fd		HL-F70
Fujifilm	DIGITALCAMERA	Finepix F410	NP-60	HL-F60
Fujifilm	DIGITALCAMERA	Finepix F420		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix F440		
Fujifilm	DIGITALCAMERA	Finepix F450		
Fujifilm	DIGITALCAMERA	Finepix F455	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	Finepix F470	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	FinePix F480	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	FinePix F50FD		HL-F50
Fujifilm	DIGITALCAMERA	Finepix F601	NP-60	HL-F60
Fujifilm	DIGITALCAMERA	FINEPIX F60fd		HL-F50
Fujifilm	DIGITALCAMERA	Finepix F610	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	Finepix F650	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	Finepix F700	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	Finepix F710	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	Finepix F810	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	Finepix F811	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	FinePix IS Pro		HL-F150
Fujifilm	DIGITALCAMERA	FinePix IS-1		
Fujifilm	DIGITALCAMERA	FINEPIX J100	NP-45	HL-F45
Fujifilm	DIGITALCAMERA	FINEPIX J110W	NP-45	HL-F45
Fujifilm	DIGITALCAMERA	FINEPIX J120	NP-45	HL-F45
Fujifilm	DIGITALCAMERA	FINEPIX J150W	NP-45	HL-F45
Fujifilm	DIGITALCAMERA	Finepix M603	NP-60	HL-F60
Fujifilm	DIGITALCAMERA	Finepix S1 PRO		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S2 PRO		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S20 PRO		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S3 PRO		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S3 Pro UVIR		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S3000		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S304		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S3100		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S3500		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	FinePix S5 Pro		HL-F150
Fujifilm	DIGITALCAMERA	Finepix S5000		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S5100		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S5200		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S5500		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S5600		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S5700		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S602		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S6500fd		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S700		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S7000		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	FinePix S8000fd		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	FinePix S8100fd		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S9000 Z		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S9100		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S9500		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix S9600		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	Finepix V10	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	Finepix Z1	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	FinePix Z100FD	NP-45	HL-F45
Fujifilm	DIGITALCAMERA	FinePix Z10FD	NP-45	HL-F45
Fujifilm	DIGITALCAMERA	Finepix Z2	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	FinePix Z3 Zoom	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	FinePix Z5fd Zoom	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	HD-1		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	J10	NP-40	HL-F40
Fujifilm	DIGITALCAMERA	J50	NP-45	HL-F45
Fujifilm	DIGITALCAMERA	MX-1200		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	MX-1400		AA Mignon 2700mAh

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Fujifilm	DIGITALCAMERA	MX-1500		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	MX-1700	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	MX-2700	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	MX-2900	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	MX-500		
Fujifilm	DIGITALCAMERA	MX-500	NP-100	HL-F100
Fujifilm	DIGITALCAMERA	MX-600	NP-100	HL-F100
Fujifilm	DIGITALCAMERA	MX-600Z	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	MX-700	NP-100	HL-F100
Fujifilm	DIGITALCAMERA	MX-700Z	NP-80	HL-F80
Fujifilm	DIGITALCAMERA	NEXIA Q1		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	S1000fd		AA Mignon 2700mAh
Fujifilm	DIGITALCAMERA	S100FS SLR	NP-140	HL-F140
Fujifilm	DIGITALCAMERA	Z100	NP-45	HL-F45
Fujifilm	DIGITALCAMERA	Z20fd	NP-45	HL-F45
Gateway	DIGITALCAMERA	DC-T20		AA Mignon 2700mAh
Gateway	DIGITALCAMERA	DC-T50		AA Mignon 2700mAh
GE General Imaging	DIGITALCAMERA	A730		AA Mignon 2700mAh
GE General Imaging	DIGITALCAMERA	A735		AA Mignon 2700mAh
GE General Imaging	DIGITALCAMERA	A830		AA Mignon 2700mAh
GE General Imaging	DIGITALCAMERA	A835		AA Mignon 2700mAh
GE General Imaging	DIGITALCAMERA	GB40	KLIC-7003 and GE GB40	HL-7003
GE General Imaging	DIGITALCAMERA	X3		AA Mignon 2700mAh
Goodmans	DIGITALCAMERA	3116		AA Mignon 2700mAh
Grundig	CAMCORDER	DLC 1		HL-D08/D120
Grundig	CAMCORDER	DLC 10		HL-D08/D120
Grundig	CAMCORDER	DLC 20		HL-D08/D120
Grundig	CAMCORDER	LC 900C		HL-V14/610
Grundig	CAMCORDER	VM-E330E	VW-VBD1/CGA-B202	HL-VBD1
Grundig	CAMCORDER	VM-E535LE	VW-VBD1/CGA-B202	HL-VBD1
Grundig	CAMCORDER	VM-E635LE	VW-VBD1/CGA-B202	HL-VBD1
Grundig	CAMCORDER	VM-E835	VW-VBD1/CGA-B202	HL-VBD1
Grundig	CAMCORDER	VM-H630E	VW-VBD1/CGA-B202	HL-VBD1
Grundig	CAMCORDER	VM-H80/E	VW-VBD1/CGA-B202	HL-VBD1
Grundig	CAMCORDER	VM-H835	VW-VBD1/CGA-B202	HL-VBD1
Grundig	CAMCORDER	VM-H835LE	VW-VBD1/CGA-B202	HL-VBD1
Grundig	CAMCORDER	VM-H90	VW-VBD1/CGA-B202	HL-VBD1
Hewlett Packard	DIGITALCAMERA	120		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	215		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	315		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	318		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	320		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	433		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	435		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	612		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	618		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	620		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	635		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	715		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	720		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	735		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	812		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	850		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	912		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	935		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	945		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	C20		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	C200		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	C315		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	C500		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	C618		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	C912		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	E317		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	E327		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	E337		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M22		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M23		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M307	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	M407	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	M417		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M425		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M437		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M447		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M517		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M525		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M527		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M537		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M547		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M637		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	M737		AA Mignon 2700mAh

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Hewlett Packard	DIGITALCAMERA	Mz67		AA Mignon 2700mAh
Hewlett Packard	DIGITALCAMERA	R507	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R607	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R607 BMW Williams.F1	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R707	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R717	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R725	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R727	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R742		HL-HP40
Hewlett Packard	DIGITALCAMERA	R817	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R818	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R827	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R837	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R847	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R927	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R937	R07/CP1	HL-R07
Hewlett Packard	DIGITALCAMERA	R967	R07/CP1	HL-R07
Hitachi	CAMCORDER	DZ-BD10HA		
Hitachi	CAMCORDER	DZ-BD9HA		
Hitachi	CAMCORDER	DZ-BX35	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Hitachi	CAMCORDER	DZ-BX35A	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-GX3100A	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-GX3200A	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-GX3300A	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-MV100	DZ-BP16	HL-BP16
Hitachi	CAMCORDER	DZ-MV200	DZ-BP16	HL-BP16
Hitachi	CAMCORDER	DZ-MV208	DZ-BP16	HL-BP16
Hitachi	CAMCORDER	DZ-MV230	DZ-BP16	HL-BP16
Hitachi	CAMCORDER	DZ-MV270 DVD	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-MV350 DVD	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-MV380 DVD	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-MV550A	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-MV580A	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-MV730A	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-MV750A	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	DZ-MV780A	DZ-BP14S	HL-BP14
Hitachi	CAMCORDER	VMD-865L	VM-BPL13	HL-BPL13
Hitachi	CAMCORDER	VMD-875L	VM-BPL13	HL-BPL13
Hitachi	CAMCORDER	VMD-975L	VM-BPL13	HL-BPL13
Hitachi	CAMCORDER	VM-E540E	VM-BPL13	HL-BPL13
Hitachi	CAMCORDER	VM-H650E	VM-BPL13	HL-BPL13
Hitachi	DIGITALCAMERA	DS5370	Li-40B / Li-42B	HL-42B / 40B
Jendigital	DIGITALCAMERA	JD 4100 z3		AA Mignon 2700mAh
Jenoptik	DIGITALCAMERA	JD 1300 z3		AA Mignon 2700mAh
Jenoptik	DIGITALCAMERA	JD 1500 z3		AA Mignon 2700mAh
Jenoptik	DIGITALCAMERA	JD 2300 z3		AA Mignon 2700mAh
Jenoptik	DIGITALCAMERA	JD 3300 z3		AA Mignon 2700mAh
Jenoptik	DIGITALCAMERA	JD 800i		AA Mignon 2700mAh
JVC	CAMCORDER	D20	BN-V408	HL-408
JVC	CAMCORDER	D200	BN-V408	HL-408
JVC	CAMCORDER	D220	BN-V408	HL-408
JVC	CAMCORDER	D23	BN-V408	HL-408
JVC	CAMCORDER	D230	BN-V408	HL-408
JVC	CAMCORDER	D231	BN-V408	HL-408
JVC	CAMCORDER	D240	BN-VF707	HL-707M
JVC	CAMCORDER	D245	BN-VF707	HL-707M
JVC	CAMCORDER	D250	BN-VF707	HL-707M
JVC	CAMCORDER	D260	BN-VF707	HL-707M
JVC	CAMCORDER	D27	BN-V408	HL-408
JVC	CAMCORDER	D270	BN-VF707	HL-707M
JVC	CAMCORDER	D290	BN-VF707	HL-707M
JVC	CAMCORDER	D295	BN-VF707	HL-707M
JVC	CAMCORDER	D30	BN-V408	HL-408
JVC	CAMCORDER	D33	BN-V408	HL-408
JVC	CAMCORDER	D340	BN-VF707	HL-707M
JVC	CAMCORDER	D350	BN-VF707	HL-707M
JVC	CAMCORDER	D370	BN-VF707	HL-707M
JVC	CAMCORDER	D395	BN-VF707	HL-707M
JVC	CAMCORDER	D396	BN-VF707	HL-707M
JVC	CAMCORDER	D425	BN-VF707	HL-707M
JVC	CAMCORDER	D43	BN-V408	HL-408
JVC	CAMCORDER	D470	BN-VF707	HL-707M
JVC	CAMCORDER	D50	BN-V408	HL-408
JVC	CAMCORDER	D53	BN-V408	HL-408
JVC	CAMCORDER	D60	BN-V408	HL-408
JVC	CAMCORDER	D650	BN-VF707	HL-707M
JVC	CAMCORDER	D70	BN-V408	HL-408
JVC	CAMCORDER	D72	BN-V408	HL-408
JVC	CAMCORDER	D720	BN-VF808U	HL-808U
JVC	CAMCORDER	D720	BN-VF808U	HL-808U

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
JVC	CAMCORDER	D720	BN-VF815U	HL-815U
JVC	CAMCORDER	D720	BN-VF815U	HL-815U
JVC	CAMCORDER	D720	BN-VF823U	HL-823U
JVC	CAMCORDER	D720	BN-VF823U	HL-823U
JVC	CAMCORDER	D725	BN-VF808U	HL-808U
JVC	CAMCORDER	D725	BN-VF815U	HL-815U
JVC	CAMCORDER	D725	BN-VF823U	HL-823U
JVC	CAMCORDER	D726	BN-VF808U	HL-808U
JVC	CAMCORDER	D726	BN-VF815U	HL-815U
JVC	CAMCORDER	D726	BN-VF823U	HL-823U
JVC	CAMCORDER	D728	BN-VF808U	HL-808U
JVC	CAMCORDER	D728	BN-VF815U	HL-815U
JVC	CAMCORDER	D728	BN-VF823U	HL-823U
JVC	CAMCORDER	D73	BN-V408	HL-408
JVC	CAMCORDER	D740	BN-VF808U	HL-808U
JVC	CAMCORDER	D740	BN-VF815U	HL-815U
JVC	CAMCORDER	D740	BN-VF823U	HL-823U
JVC	CAMCORDER	D745	BN-VF808U	HL-808U
JVC	CAMCORDER	D745	BN-VF815U	HL-815U
JVC	CAMCORDER	D745	BN-VF823U	HL-823U
JVC	CAMCORDER	D746	BN-VF808U	HL-808U
JVC	CAMCORDER	D746	BN-VF815U	HL-815U
JVC	CAMCORDER	D746	BN-VF823U	HL-823U
JVC	CAMCORDER	D750	BN-VF808U	HL-808U
JVC	CAMCORDER	D750	BN-VF815U	HL-815U
JVC	CAMCORDER	D750	BN-VF823U	HL-823U
JVC	CAMCORDER	D760	BN-VF808U	HL-808U
JVC	CAMCORDER	D760	BN-VF815U	HL-815U
JVC	CAMCORDER	D760	BN-VF823U	HL-823U
JVC	CAMCORDER	D770	BN-VF808U	HL-808U
JVC	CAMCORDER	D770	BN-VF815U	HL-815U
JVC	CAMCORDER	D770	BN-VF823U	HL-823U
JVC	CAMCORDER	D771	BN-VF808U	HL-808U
JVC	CAMCORDER	D771	BN-VF815U	HL-815U
JVC	CAMCORDER	D771	BN-VF823U	HL-823U
JVC	CAMCORDER	D775	BN-VF808U	HL-808U
JVC	CAMCORDER	D775	BN-VF815U	HL-815U
JVC	CAMCORDER	D775	BN-VF823U	HL-823U
JVC	CAMCORDER	D790	BN-VF808U	HL-808U
JVC	CAMCORDER	D790	BN-VF815U	HL-815U
JVC	CAMCORDER	D790	BN-VF823U	HL-823U
JVC	CAMCORDER	D796	BN-VF808U	HL-808U
JVC	CAMCORDER	D796	BN-VF815U	HL-815U
JVC	CAMCORDER	D796	BN-VF823U	HL-823U
JVC	CAMCORDER	D93	BN-V408	HL-408
JVC	CAMCORDER	DF420	BN-VF707	HL-707M
JVC	CAMCORDER	DF430	BN-VF707	HL-707M
JVC	CAMCORDER	DF450	BN-VF707	HL-707M
JVC	CAMCORDER	DF535	BN-VF707	HL-707M
JVC	CAMCORDER	DF540	BN-VF707	HL-707M
JVC	CAMCORDER	DF550	BN-VF707	HL-707M
JVC	CAMCORDER	DF565	BN-VF707	HL-707M
JVC	CAMCORDER	DF570	BN-VF707	HL-707M
JVC	CAMCORDER	DV1		
JVC	CAMCORDER	DV14		
JVC	CAMCORDER	DV1800	BN-V408	HL-408
JVC	CAMCORDER	DV1U		
JVC	CAMCORDER	DV1W		
JVC	CAMCORDER	DV2		
JVC	CAMCORDER	DV2000	BN-V408	HL-408
JVC	CAMCORDER	DV2000U	BN-V408	HL-408
JVC	CAMCORDER	DV3		
JVC	CAMCORDER	DV300	BN-V408	HL-408
JVC	CAMCORDER	DV3000	BN-V408	HL-408
JVC	CAMCORDER	DV3U		
JVC	CAMCORDER	DV4000	BN-V408	HL-408
JVC	CAMCORDER	DV5U		
JVC	CAMCORDER	DV700	BN-V408	HL-408
JVC	CAMCORDER	DV808		
JVC	CAMCORDER	DVF1		
JVC	CAMCORDER	DVF10EK		
JVC	CAMCORDER	DVF11		
JVC	CAMCORDER	DVF11U		
JVC	CAMCORDER	DVF21		
JVC	CAMCORDER	DVF21U		
JVC	CAMCORDER	DVF31		
JVC	CAMCORDER	DVF31U		
JVC	CAMCORDER	DVJ70		
JVC	CAMCORDER	DVL100	BN-V408	HL-408
JVC	CAMCORDER	DVL105	BN-V408	HL-408

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
JVC	CAMCORDER	DVL107	BN-V408	HL-408
JVC	CAMCORDER	DVL108	BN-V408	HL-408
JVC	CAMCORDER	DVL109	BN-V408	HL-408
JVC	CAMCORDER	DVL120	BN-V408	HL-408
JVC	CAMCORDER	DVL140	BN-V408	HL-408
JVC	CAMCORDER	DVL150	BN-V408	HL-408
JVC	CAMCORDER	DVL155	BN-V408	HL-408
JVC	CAMCORDER	DVL157	BN-V408	HL-408
JVC	CAMCORDER	DVL160	BN-V408	HL-408
JVC	CAMCORDER	DVL167	BN-V408	HL-408
JVC	CAMCORDER	DVL1800	BN-V408	HL-408
JVC	CAMCORDER	DVL1800EK	BN-V408	HL-408
JVC	CAMCORDER	DVL20		
JVC	CAMCORDER	DVL200	BN-V408	HL-408
JVC	CAMCORDER	DVL205	BN-V408	HL-408
JVC	CAMCORDER	DVL210	BN-V408	HL-408
JVC	CAMCORDER	DVL25		
JVC	CAMCORDER	DVL257	BN-V408	HL-408
JVC	CAMCORDER	DVL30		
JVC	CAMCORDER	DVL300	BN-V408	HL-408
JVC	CAMCORDER	DVL305	BN-V408	HL-408
JVC	CAMCORDER	DVL307	BN-V408	HL-408
JVC	CAMCORDER	DVL308	BN-V408	HL-408
JVC	CAMCORDER	DVL309	BN-V408	HL-408
JVC	CAMCORDER	DVL310	BN-V408	HL-408
JVC	CAMCORDER	DVL310U	BN-V408	HL-408
JVC	CAMCORDER	DVL313	BN-V408	HL-408
JVC	CAMCORDER	DVL315	BN-V408	HL-408
JVC	CAMCORDER	DVL320	BN-V408	HL-408
JVC	CAMCORDER	DVL33		
JVC	CAMCORDER	DVL35		
JVC	CAMCORDER	DVL355	BN-V408	HL-408
JVC	CAMCORDER	DVL357	BN-V408	HL-408
JVC	CAMCORDER	DVL365	BN-V408	HL-408
JVC	CAMCORDER	DVL367	BN-V408	HL-408
JVC	CAMCORDER	DVL38		
JVC	CAMCORDER	DVL40		
JVC	CAMCORDER	DVL400	BN-V408	HL-408
JVC	CAMCORDER	DVL45		
JVC	CAMCORDER	DVL450	BN-V408	HL-408
JVC	CAMCORDER	DVL48		
JVC	CAMCORDER	DVL500	BN-V408	HL-408
JVC	CAMCORDER	DVL505	BN-V408	HL-408
JVC	CAMCORDER	DVL505U	BN-V408	HL-408
JVC	CAMCORDER	DVL507	BN-V408	HL-408
JVC	CAMCORDER	DVL510	BN-V408	HL-408
JVC	CAMCORDER	DVL510U	BN-V408	HL-408
JVC	CAMCORDER	DVL520	BN-V408	HL-408
JVC	CAMCORDER	DVL555	BN-V408	HL-408
JVC	CAMCORDER	DVL557	BN-V408	HL-408
JVC	CAMCORDER	DVL600	BN-V408	HL-408
JVC	CAMCORDER	DVL610	BN-V408	HL-408
JVC	CAMCORDER	DVL707	BN-V408	HL-408
JVC	CAMCORDER	DVL710	BN-V408	HL-408
JVC	CAMCORDER	DVL720	BN-V408	HL-408
JVC	CAMCORDER	DVL725	BN-V408	HL-408
JVC	CAMCORDER	DVL767	BN-V408	HL-408
JVC	CAMCORDER	DVL800	BN-V408	HL-408
JVC	CAMCORDER	DVL805	BN-V408	HL-408
JVC	CAMCORDER	DVL810	BN-V408	HL-408
JVC	CAMCORDER	DVL815	BN-V408	HL-408
JVC	CAMCORDER	DVL817	BN-V408	HL-408
JVC	CAMCORDER	DVL820	BN-V408	HL-408
JVC	CAMCORDER	DVL867	BN-V408	HL-408
JVC	CAMCORDER	DVL9000		
JVC	CAMCORDER	DVL910	BN-V408	HL-408
JVC	CAMCORDER	DVL915	BN-V408	HL-408
JVC	CAMCORDER	DVL915U	BN-V408	HL-408
JVC	CAMCORDER	DVL920	BN-V408	HL-408
JVC	CAMCORDER	DVL9200		
JVC	CAMCORDER	DVL9300		
JVC	CAMCORDER	DVL9500		
JVC	CAMCORDER	DVL9500		
JVC	CAMCORDER	DVL9500U		
JVC	CAMCORDER	DVL9600		
JVC	CAMCORDER	DVL9700		
JVC	CAMCORDER	DVL9800		
JVC	CAMCORDER	DVM3		
JVC	CAMCORDER	DVM5		
JVC	CAMCORDER	DVM50	BN-V507	HL-507

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
JVC	CAMCORDER	DVM50U	BN-V507	HL-507
JVC	CAMCORDER	DVM55	BN-V507	HL-507
JVC	CAMCORDER	DVM70	BN-V507	HL-507
JVC	CAMCORDER	DVM75	BN-V507	HL-507
JVC	CAMCORDER	DVM75U	BN-V507	HL-507
JVC	CAMCORDER	DVM76		HL-306 slim
JVC	CAMCORDER	DVM76U		HL-306 slim
JVC	CAMCORDER	DVM80	BN-V507	HL-507
JVC	CAMCORDER	DVM828		
JVC	CAMCORDER	DVM90	BN-V507	HL-507
JVC	CAMCORDER	DVM96		HL-306 slim
JVC	CAMCORDER	DVM96U		HL-306 slim
JVC	CAMCORDER	DVMS		
JVC	CAMCORDER	DVMSU		
JVC	CAMCORDER	DVP1		
JVC	CAMCORDER	DVP3		
JVC	CAMCORDER	DVP5		
JVC	CAMCORDER	DVP7		
JVC	CAMCORDER	DVP9		
JVC	CAMCORDER	DVX10	BN-V507	HL-507
JVC	CAMCORDER	DVX307		
JVC	CAMCORDER	DVX4	BN-V507	HL-507
JVC	CAMCORDER	DVX40	BN-V507	HL-507
JVC	CAMCORDER	DVX400EG		HL-306 slim
JVC	CAMCORDER	DVX407		HL-306 slim
JVC	CAMCORDER	DVX407EG		HL-306 slim
JVC	CAMCORDER	DVX40A	BN-V507	HL-507
JVC	CAMCORDER	DVX44	BN-V507	HL-507
JVC	CAMCORDER	DVX507		HL-306 slim
JVC	CAMCORDER	DVX507EG		HL-306 slim
JVC	CAMCORDER	DVX7	BN-V507	HL-507
JVC	CAMCORDER	DVX70	BN-V507	HL-507
JVC	CAMCORDER	DVX707		HL-306 slim
JVC	CAMCORDER	DVX707EG		HL-306 slim
JVC	CAMCORDER	DVX77	BN-V507	HL-507
JVC	CAMCORDER	DVX8	BN-V507	HL-507
JVC	CAMCORDER	DVX80	BN-V507	HL-507
JVC	CAMCORDER	DVX88	BN-V507	HL-507
JVC	CAMCORDER	DVX9	BN-V507	HL-507
JVC	CAMCORDER	DVX90	BN-V507	HL-507
JVC	CAMCORDER	DX25		
JVC	CAMCORDER	DX28		
JVC	CAMCORDER	DX300		
JVC	CAMCORDER	DX307		
JVC	CAMCORDER	DX37		
JVC	CAMCORDER	DX48		
JVC	CAMCORDER	DX57		
JVC	CAMCORDER	DX67		
JVC	CAMCORDER	DX75		
JVC	CAMCORDER	DX77		
JVC	CAMCORDER	DX95		
JVC	CAMCORDER	DX97		
JVC	CAMCORDER	DZ7	BN-V408	HL-408
JVC	CAMCORDER	GVHT1U		
JVC	CAMCORDER	GY-HD100	BN-V408	HL-408
JVC	CAMCORDER	GY-HD110E	BN-V408	HL-408
JVC	CAMCORDER	GZ-HD10	BN-VF808U	HL-808U
JVC	CAMCORDER	GZ-HD10	BN-VF815U	HL-815U
JVC	CAMCORDER	GZ-HD10	BN-VF823U	HL-823U
JVC	CAMCORDER	GZ-HD30	BN-VF808U	HL-808U
JVC	CAMCORDER	GZ-HD30	BN-VF815U	HL-815U
JVC	CAMCORDER	GZ-HD30	BN-VF823U	HL-823U
JVC	CAMCORDER	GZ-HD300		
JVC	CAMCORDER	GZ-HD320		
JVC	CAMCORDER	GZ-HD40	BN-VF808U	HL-808U
JVC	CAMCORDER	GZ-HD40	BN-VF815U	HL-815U
JVC	CAMCORDER	GZ-HD40	BN-VF823U	HL-823U
JVC	CAMCORDER	GZ-HM200		
JVC	CAMCORDER	GZ-MG330 / MG330A	BN-VF808U	HL-808U
JVC	CAMCORDER	GZ-MG335W	BN-VF808U	HL-808U
JVC	CAMCORDER	GZ-MG335W	BN-VF815U	HL-815U
JVC	CAMCORDER	GZ-MG335W	BN-VF823U	HL-823U
JVC	CAMCORDER	GZ-MG365	BN-VF808U	HL-808U
JVC	CAMCORDER	GZ-MG365	BN-VF815U	HL-815U
JVC	CAMCORDER	GZ-MG365	BN-VF823U	HL-823U
JVC	CAMCORDER	GZ-MG630		
JVC	CAMCORDER	GZ-MG670		
JVC	CAMCORDER	GZ-MG680		
JVC	CAMCORDER	GZ-MG730	BN-VF808U	HL-808U
JVC	CAMCORDER	GZ-MG730	BN-VF815U	HL-815U

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
JVC	CAMCORDER	GZ-MG730	BN-VF823U	HL-823U
JVC	CAMCORDER	GZ-MS100	BN-VF808U	HL-808U
JVC	CAMCORDER	GZ-MS120		
JVC	CAMCORDER	GZ-MS130		
JVC	CAMCORDER	HD7	BN-VF808U	HL-808U
JVC	CAMCORDER	HD7	BN-VF815U	HL-815U
JVC	CAMCORDER	HD7	BN-VF823U	HL-823U
JVC	CAMCORDER	M50	BN-V507	HL-507
JVC	CAMCORDER	M70	BN-V507	HL-507
JVC	CAMCORDER	MC100	BN-VM200U	HL-VM200
JVC	CAMCORDER	MC200	BN-VM200U	HL-VM200
JVC	CAMCORDER	MC500	BN-VM200U	HL-VM200
JVC	CAMCORDER	MG130	BN-VF808U	HL-808U
JVC	CAMCORDER	MG130	BN-VF815U	HL-815U
JVC	CAMCORDER	MG130	BN-VF823U	HL-823U
JVC	CAMCORDER	MG135	BN-VF808U	HL-808U
JVC	CAMCORDER	MG135	BN-VF815U	HL-815U
JVC	CAMCORDER	MG135	BN-VF823U	HL-823U
JVC	CAMCORDER	MG150	BN-VF808U	HL-808U
JVC	CAMCORDER	MG150	BN-VF815U	HL-815U
JVC	CAMCORDER	MG150	BN-VF823U	HL-823U
JVC	CAMCORDER	MG155	BN-VF808U	HL-808U
JVC	CAMCORDER	MG155	BN-VF815U	HL-815U
JVC	CAMCORDER	MG155	BN-VF823U	HL-823U
JVC	CAMCORDER	MG175	BN-VF808U	HL-808U
JVC	CAMCORDER	MG175	BN-VF815U	HL-815U
JVC	CAMCORDER	MG175	BN-VF823U	HL-823U
JVC	CAMCORDER	MG20	BN-VF707	HL-707M
JVC	CAMCORDER	MG21	BN-VF707	HL-707M
JVC	CAMCORDER	MG255	BN-VF808U	HL-808U
JVC	CAMCORDER	MG255	BN-VF815U	HL-815U
JVC	CAMCORDER	MG255	BN-VF823U	HL-823U
JVC	CAMCORDER	MG27	BN-VF707	HL-707M
JVC	CAMCORDER	MG275	BN-VF808U	HL-808U
JVC	CAMCORDER	MG275	BN-VF815U	HL-815U
JVC	CAMCORDER	MG275	BN-VF823U	HL-823U
JVC	CAMCORDER	MG30	BN-VF707	HL-707M
JVC	CAMCORDER	MG36	BN-VF707	HL-707M
JVC	CAMCORDER	MG37	BN-VF707	HL-707M
JVC	CAMCORDER	MG40	BN-VF707	HL-707M
JVC	CAMCORDER	MG50	BN-VF707	HL-707M
JVC	CAMCORDER	MG505	BN-VF707	HL-707M
JVC	CAMCORDER	MG555	BN-VF808U	HL-808U
JVC	CAMCORDER	MG555	BN-VF815U	HL-815U
JVC	CAMCORDER	MG555	BN-VF823U	HL-823U
JVC	CAMCORDER	MG57	BN-VF707	HL-707M
JVC	CAMCORDER	MG575	BN-VF808U	HL-808U
JVC	CAMCORDER	MG575	BN-VF815U	HL-815U
JVC	CAMCORDER	MG575	BN-VF823U	HL-823U
JVC	CAMCORDER	MG60	BN-VF707	HL-707M
JVC	CAMCORDER	MG67	BN-VF707	HL-707M
JVC	CAMCORDER	MG70	BN-VF707	HL-707M
JVC	CAMCORDER	MG77	BN-VF707	HL-707M
JVC	CAMCORDER	X5	BN-VF707	HL-707M
JVC	DIGITALCAMERA	GC- S5	NP-100	HL-F100
JVC	DIGITALCAMERA	GC-X1		
JVC	DIGITALCAMERA	GC-X3		
Kodak	CAMCORDER	Zi6		
Kodak	DIGITALCAMERA	C300		AA Ni-MH Synergy Ready to Go
Kodak	DIGITALCAMERA	C310		AA Ni-MH Synergy Ready to Go
Kodak	DIGITALCAMERA	C330		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C340		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C360		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C433		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C513		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C530		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C533		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C613		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C643		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C653		
Kodak	DIGITALCAMERA	C663		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C743		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	C875	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	CD50		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX4200		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX4210		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX4230		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX4300		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX4310		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX6200		AA Ni-MH Synergy Ready to Go

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Kodak	DIGITALCAMERA	CX6230		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX6330		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX6490		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX7220		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX7300		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX7310		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX7330		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX7430		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX7440	Klic 5001	HL-5001
Kodak	DIGITALCAMERA	CX7525		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX7530		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	CX7590	Klic 5001	HL-5001
Kodak	DIGITALCAMERA	DC120		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC200		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC210		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC210 PLUS		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC215		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC220		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC240		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC260		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC280		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC290		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC3200		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC3400		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC3500		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC3600		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC3700		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC3800		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC3900		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC4800	NP-80	HL-F80
Kodak	DIGITALCAMERA	DC4800 EZ	NP-80	HL-F80
Kodak	DIGITALCAMERA	DC4900		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DC5000		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DCS PRO 14n		
Kodak	DIGITALCAMERA	DX3215		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX3500		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX3600		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX3700		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX3900		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX4200		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX4230		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX4330		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX4530		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX4900		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX6230		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX6300		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX6340		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX6440		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	DX6490	Klic 5001	HL-5001
Kodak	DIGITALCAMERA	DX7440	Klic 5001	HL-5001
Kodak	DIGITALCAMERA	DX7590	Klic 5001	HL-5001
Kodak	DIGITALCAMERA	DX7630	Klic 5001	HL-5001
Kodak	DIGITALCAMERA	EasyShare one	Klic 5000	HL-5000
Kodak	DIGITALCAMERA	LS-420	Klic 5000	HL-5000
Kodak	DIGITALCAMERA	LS-443	Klic 5000	HL-5000
Kodak	DIGITALCAMERA	LS-633	Klic 5000	HL-5000
Kodak	DIGITALCAMERA	LS-743	Klic 5000	HL-5000
Kodak	DIGITALCAMERA	LS-753	Klic 5000	HL-5000
Kodak	DIGITALCAMERA	LS-755		
Kodak	DIGITALCAMERA	M1033		HL-7004
Kodak	DIGITALCAMERA	M320	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	M340	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	M380	KLIC-7003 and GE GB40	HL-7003
Kodak	DIGITALCAMERA	M753	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	M763	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	M853	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	M863	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	M873		HL-7006
Kodak	DIGITALCAMERA	M883		HL-7006
Kodak	DIGITALCAMERA	M893 IS	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	P850	Klic 5001	HL-5001
Kodak	DIGITALCAMERA	P880	Klic 5001	HL-5001
Kodak	DIGITALCAMERA	V1003	KLIC-7003 and GE GB40	HL-7003
Kodak	DIGITALCAMERA	V1073		HL-7004
Kodak	DIGITALCAMERA	V1233		HL-7004
Kodak	DIGITALCAMERA	V1253		HL-7004
Kodak	DIGITALCAMERA	V1273		HL-7004
Kodak	DIGITALCAMERA	V530	Klic 7002	HL-7002
Kodak	DIGITALCAMERA	V550	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	V570	Klic 7001	HL-7001

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Kodak	DIGITALCAMERA	V603	Klic 7002	HL-7002
Kodak	DIGITALCAMERA	V610	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	V705	Klic 7001	HL-7001
Kodak	DIGITALCAMERA	V803	KLIC-7003 and GE GB40	HL-7003
Kodak	DIGITALCAMERA	Z1012		
Kodak	DIGITALCAMERA	Z1012	N/A	N/A
Kodak	DIGITALCAMERA	Z1015	N/A	N/A
Kodak	DIGITALCAMERA	Z1085		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	Z1275		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	Z1285		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	Z1485	N/A	N/A
Kodak	DIGITALCAMERA	Z1485	N/A	N/A
Kodak	DIGITALCAMERA	Z612		
Kodak	DIGITALCAMERA	Z650		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	Z700		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	Z710		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	Z712	N/A	N/A
Kodak	DIGITALCAMERA	Z730	Klic 5000	HL-5000
Kodak	DIGITALCAMERA	Z740		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	Z7590	Klic 5000	HL-5000
Kodak	DIGITALCAMERA	Z760	Klic 5000	HL-5000
Kodak	DIGITALCAMERA	Z812	N/A	N/A
Kodak	DIGITALCAMERA	Z8612		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	Z980		AA Mignon 2350mAh
Kodak	DIGITALCAMERA	Z980		AA Mignon 2500mAh
Kodak	DIGITALCAMERA	Z980		AA Mignon 2700mAh
Kodak	DIGITALCAMERA	Z980		AA Ni-MH Synergy Ready to Go
Kodak	DIGITALCAMERA	ZX1	N/A	N/A
Konica Minolta	DIGITALCAMERA	C2		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage 2330		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage 5		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage 7		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage 7 (hi)		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage 7 (l)		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage A1	NP-400	HL-KM400
Konica Minolta	DIGITALCAMERA	Dimage A2	NP-400	HL-KM400
Konica Minolta	DIGITALCAMERA	Dimage A200	NP-800	HL-KM800
Konica Minolta	DIGITALCAMERA	Dimage E201		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage E203		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage E223		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage E323		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage E40	NP-900	HL-KM900
Konica Minolta	DIGITALCAMERA	Dimage E50	NP-900	HL-KM900
Konica Minolta	DIGITALCAMERA	Dimage F100		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage F200		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage F300		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage G400	DR-LB4	HL-B4/P500
Konica Minolta	DIGITALCAMERA	Dimage G500	DR-LB4	HL-B4/P500
Konica Minolta	DIGITALCAMERA	Dimage G530	DR-LB4	HL-B4/P500
Konica Minolta	DIGITALCAMERA	Dimage G600	DR-LB4	HL-B4/P500
Konica Minolta	DIGITALCAMERA	Dimage S304		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage S404		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage S414		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage X	NP-200	HL-KM200
Konica Minolta	DIGITALCAMERA	Dimage X1	NP-1	HL-KMP1
Konica Minolta	DIGITALCAMERA	Dimage X20		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage X21		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage X31		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage X50	NP-700	HL-KM700
Konica Minolta	DIGITALCAMERA	Dimage X60	NP-700	HL-KM700
Konica Minolta	DIGITALCAMERA	Dimage Xg	NP-200	HL-KM200
Konica Minolta	DIGITALCAMERA	Dimage Xi	NP-200	HL-KM200
Konica Minolta	DIGITALCAMERA	Dimage Xt	NP-200	HL-KM200
Konica Minolta	DIGITALCAMERA	Dimage Z1		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage Z10		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage Z2		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage Z20		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage Z3		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage Z5		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dimage Z6		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	Dynax 5D	NP-400	HL-KM400
Konica Minolta	DIGITALCAMERA	Dynax 7D	NP-400	HL-KM400
Konica Minolta	DIGITALCAMERA	e-mini		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	e-mini u		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	KD-100		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	KD-200Z		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	KD-20M		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	KD-220Z		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	KD-25		AA Mignon 2700mAh
Konica Minolta	DIGITALCAMERA	KD-3000Z		AA Mignon 2700mAh

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Konica Minolta	DIGITALCAMERA	KD-300Z	BP-1000	HL-900
Konica Minolta	DIGITALCAMERA	KD-310Z	DR-LB4	HL-B4/P500
Konica Minolta	DIGITALCAMERA	KD-400Z	DR-LB4	HL-B4/P500
Konica Minolta	DIGITALCAMERA	KD-410Z	DR-LB4	HL-B4/P500
Konica Minolta	DIGITALCAMERA	KD-420Z	DR-LB4	HL-B4/P500
Konica Minolta	DIGITALCAMERA	KD-500Z	DR-LB4	HL-B4/P500
Konica Minolta	DIGITALCAMERA	KD-510Z	DR-LB4	HL-B4/P500
Konica Minolta	DIGITALCAMERA	Maxxum 5D	NP-400	HL-KM400
Konica Minolta	DIGITALCAMERA	Maxxum 7 D	NP-400	HL-KM400
Konica Minolta	DIGITALCAMERA	Maxxum 7 SLR	NP-400	HL-KM400
Konica Minolta	DIGITALCAMERA	RD-3000		AA Mignon 2700mAh
Kyocera	DIGITALCAMERA	Finecam EZ4033		
Kyocera	DIGITALCAMERA	Finecam EZ5030		AA Mignon 2700mAh
Kyocera	DIGITALCAMERA	Finecam L3V		AA Mignon 2700mAh
Kyocera	DIGITALCAMERA	Finecam L4V		AA Mignon 2700mAh
Kyocera	DIGITALCAMERA	Finecam M410R		AA Mignon 2700mAh
Kyocera	DIGITALCAMERA	Finecam S3	BP-1000	HL-900
Kyocera	DIGITALCAMERA	Finecam S3L	BP-1000	HL-900
Kyocera	DIGITALCAMERA	Finecam S3R	BP-1000	HL-900
Kyocera	DIGITALCAMERA	Finecam S3X	BP-1000	HL-900
Kyocera	DIGITALCAMERA	Finecam S4	BP-1000	HL-900
Kyocera	DIGITALCAMERA	Finecam S5	BP-1000	HL-900
Kyocera	DIGITALCAMERA	Finecam S5R	BP-1000	HL-900
Kyocera	DIGITALCAMERA	Finecam SL300R		
Kyocera	DIGITALCAMERA	Finecam SL400		AA Mignon 2700mAh
Kyocera	DIGITALCAMERA	SL300		
Kyocera	DIGITALCAMERA	SL400		
Kyocera	DIGITALCAMERA	U4R	BP-1100	HL-1100
Leica	DIGITALCAMERA	C-LUX2		
Leica	DIGITALCAMERA	DIGILUX 4.3		AA Mignon 2700mAh
Leica	DIGITALCAMERA	DIGLUX	NP-100	HL-F100
Leica	DIGITALCAMERA	DIGLUX 1	BP-DC1	HL-DC3 / LC1
Leica	DIGITALCAMERA	DIGLUX 2	BP-DC1	HL-DC3 / LC1
Leica	DIGITALCAMERA	DIGLUX 3	BP-DC1	HL-DC3 / LC1
Leica	DIGITALCAMERA	DIGLUX 4.3	BP-DC1	HL-DC3 / LC1
Leica	DIGITALCAMERA	DIGLUX ZOOM	NP-80	HL-F80
Leica	DIGITALCAMERA	D-LUX	BP-DC2	HL-DC2
Leica	DIGITALCAMERA	D-LUX 2	BP-DC2	HL-DC2
Leica	DIGITALCAMERA	D-LUX 3	BP-DC4	HL-DC4
Leica	DIGITALCAMERA	LC20K		AA Mignon 2700mAh
Leica	DIGITALCAMERA	LC20S		AA Mignon 2700mAh
Leica	DIGITALCAMERA	V-LUX 1	BP-DC5	HL-DC5
Maginon	DIGITALCAMERA	DC-500		AA Mignon 2700mAh
Maginon	DIGITALCAMERA	Performic S5		
Maginon	DIGITALCAMERA	Slimline X4		
Maginon	DIGITALCAMERA	Slimline X5		
Medion / Traveler / Nytech /	DIGITALCAMERA	02491001500	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	02491-0015-00	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	02491-0026-00	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	02491-0037-00	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	02491-0037-01	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	02491-0037-04	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	02491-0048-00	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	BATS4	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	DM-6133	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	DM6331	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	LP-200702	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	MD85700	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	NP900	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	NP-900	NP-900	HL-KM900
Medion / Traveler / Nytech /	DIGITALCAMERA	VG0376120700006	NP-900	HL-KM900
Microtek	DIGITALCAMERA	TAKE IT S3		AA Mignon 2700mAh
Minox	DIGITALCAMERA	DC 2111		AA Mignon 2700mAh
Minox	DIGITALCAMERA	DC 4211		
Minox	DIGITALCAMERA	DC 5222		
Nikon	DIGITALCAMERA	Coolpix 2000		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 2100		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 2200		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 2500	EN-EL2	HL-EL2
Nikon	DIGITALCAMERA	Coolpix 3100		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 3200		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 3500	EN-EL2	HL-EL2
Nikon	DIGITALCAMERA	Coolpix 3700	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix 4100		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 4200	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix 4300	EN-EL1	HL-EL1
Nikon	DIGITALCAMERA	Coolpix 4500	EN-EL1	HL-EL1
Nikon	DIGITALCAMERA	Coolpix 4600		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 4800	EN-EL1	HL-EL1
Nikon	DIGITALCAMERA	Coolpix 5000	EN-EL1	HL-EL1

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Nikon	DIGITALCAMERA	Coolpix 5200	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix 5400	EN-EL1	HL-EL1
Nikon	DIGITALCAMERA	Coolpix 5600		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 5700	EN-EL1	HL-EL1
Nikon	DIGITALCAMERA	Coolpix 5900	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix 7600		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 775	EN-EL1	HL-EL1
Nikon	DIGITALCAMERA	Coolpix 7900	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix 800		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 8400	EN-EL7	HL-EL7
Nikon	DIGITALCAMERA	Coolpix 8700	EN-EL1	HL-EL1
Nikon	DIGITALCAMERA	Coolpix 880	EN-EL1	HL-EL1
Nikon	DIGITALCAMERA	Coolpix 8800	EN-EL7	HL-EL7
Nikon	DIGITALCAMERA	Coolpix 885	EN-EL1	HL-EL1
Nikon	DIGITALCAMERA	Coolpix 950		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 990		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix 995	EN-EL1	HL-EL1
Nikon	DIGITALCAMERA	Coolpix L1		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix L10		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	COOLPIX L100		AA Mignon 2350mAh
Nikon	DIGITALCAMERA	COOLPIX L100		AA Mignon 2500mAh
Nikon	DIGITALCAMERA	COOLPIX L100		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	COOLPIX L100		AA Ni-MH Synergy Ready to Go
Nikon	DIGITALCAMERA	Coolpix L11		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix L12		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix L14		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix L15		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	COOLPIX L16		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	COOLPIX L18		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	COOLPIX L19		AA Mignon 2350mAh
Nikon	DIGITALCAMERA	COOLPIX L19		AA Mignon 2500mAh
Nikon	DIGITALCAMERA	COOLPIX L19		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	COOLPIX L19		AA Ni-MH Synergy Ready to Go
Nikon	DIGITALCAMERA	Coolpix L2		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	COOLPIX L20		AA Mignon 2350mAh
Nikon	DIGITALCAMERA	COOLPIX L20		AA Mignon 2500mAh
Nikon	DIGITALCAMERA	COOLPIX L20		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	COOLPIX L20		AA Ni-MH Synergy Ready to Go
Nikon	DIGITALCAMERA	Coolpix L3		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix L4		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix L5		AA Ni-MH Synergy Ready to Go
Nikon	DIGITALCAMERA	Coolpix L6		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix P1	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix P2	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix P3	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix P4	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix P50		HL-EL10
Nikon	DIGITALCAMERA	Coolpix P5000	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix P5100	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	COOLPIX P60		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	COOLPIX P6000	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix P80 (18x)	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	COOLPIX P90	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix S1 Ebony	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S1 Ivory	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S1 Silver	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S10	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	Coolpix S2	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S200		HL-EL10
Nikon	DIGITALCAMERA	COOLPIX S210		HL-EL10
Nikon	DIGITALCAMERA	COOLPIX S220		HL-EL10
Nikon	DIGITALCAMERA	COOLPIX S230		HL-EL10
Nikon	DIGITALCAMERA	Coolpix S3	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S4		AA Mignon 2700mAh
Nikon	DIGITALCAMERA	Coolpix S5	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S50	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S500		HL-EL10
Nikon	DIGITALCAMERA	Coolpix S50c	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S51	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S510		HL-EL10
Nikon	DIGITALCAMERA	Coolpix S51c	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S52	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	COOLPIX S520		HL-EL10
Nikon	DIGITALCAMERA	Coolpix S52c	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	COOLPIX S550	EN-EL11	HL-EL11
Nikon	DIGITALCAMERA	COOLPIX S560	EN-EL12	HL-EL12
Nikon	DIGITALCAMERA	Coolpix S6	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	COOLPIX S60	EN-EL12	HL-EL12
Nikon	DIGITALCAMERA	COOLPIX S600		HL-EL10
Nikon	DIGITALCAMERA	COOLPIX S610	EN-EL12	HL-EL12

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Nikon	DIGITALCAMERA	COOLPIX S610C	EN-EL12	HL-EL12
Nikon	DIGITALCAMERA	COOLPIX S620	EN-EL12	HL-EL12
Nikon	DIGITALCAMERA	COOLPIX S630	EN-EL12	HL-EL12
Nikon	DIGITALCAMERA	Coolpix S700		HL-EL10
Nikon	DIGITALCAMERA	COOLPIX S710	EN-EL12	HL-EL12
Nikon	DIGITALCAMERA	Coolpix S7c	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix S9	EN-EL8	HL-EL8
Nikon	DIGITALCAMERA	Coolpix SQ	EN-EL2	HL-EL2
Nikon	DIGITALCAMERA	Coolwalker MSV-01		
Nikon	DIGITALCAMERA	D1 SLR		
Nikon	DIGITALCAMERA	D100 SLR		
Nikon	DIGITALCAMERA	D200 SLR		HL-EL3e
Nikon	DIGITALCAMERA	D2H SLR		
Nikon	DIGITALCAMERA	D2HS SLR		
Nikon	DIGITALCAMERA	D2X SLR		
Nikon	DIGITALCAMERA	D2Xs SLR		
Nikon	DIGITALCAMERA	D3 SLR		
Nikon	DIGITALCAMERA	D300 SLR		HL-EL3e
Nikon	DIGITALCAMERA	D40		HL-EL9
Nikon	DIGITALCAMERA	D40x		HL-EL9
Nikon	DIGITALCAMERA	D50 SLR		
Nikon	DIGITALCAMERA	D60 SLR		HL-EL9
Nikon	DIGITALCAMERA	D70 SLR		
Nikon	DIGITALCAMERA	D700 SLR		HL-EL3e
Nikon	DIGITALCAMERA	D70s SLR		
Nikon	DIGITALCAMERA	D70s Grip SLR		
Nikon	DIGITALCAMERA	D80		HL-EL3e
Nikon	DIGITALCAMERA	D90 SLR		HL-EL3e
Nikon	DIGITALCAMERA	DI SLR		AA Ni-MH Synergy Ready to Go
Nikon	DIGITALCAMERA	DI (H) SLR		AA Ni-MH Synergy Ready to Go
Nikon	DIGITALCAMERA	DI (X) SLR		AA Ni-MH Synergy Ready to Go
Nikon	DIGITALCAMERA	F6 Film SLR		
Nikon	DIGITALCAMERA	P5100	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	P5110	EN-EL5	HL-EL5
Nikon	DIGITALCAMERA	P80	EN-EL5	HL-EL5
nv10	DIGITALCAMERA	CR-5330		AA Mignon 2700mAh
nv10	DIGITALCAMERA	CR-5530		AA Mignon 2700mAh
nv10	DIGITALCAMERA	CR-6330		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	AZ-1	Li-20B	HL-20B
Olympus	DIGITALCAMERA	AZ-2	Li-20B	HL-20B
Olympus	DIGITALCAMERA	C-1		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-100		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-120		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-150		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-160		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-170		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-180		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-2		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-200		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-2020		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-2040		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-21		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-2100		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-211		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-220		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-250		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-2500		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-3000		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-3020		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-3030		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-3040		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-310		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-315		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-350		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-360		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-370		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-40		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-400		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-4040		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-460		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-470	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	C-480		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-480Z		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-50	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	C-500		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-5000 Zoom	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	C-500Z		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-5050		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-5060	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	C-55		AA Mignon 2700mAh

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Olympus	DIGITALCAMERA	C-550		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-5500		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-60	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	C-70	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	C-700		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-7000	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	C-7070	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	C-720		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-725		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-730		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-740		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-750		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-760	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	C-765 Ultra	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	C-770 Ultra	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	C-800		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-8080	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	C-820		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-830		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-840		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-860		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-960		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	C-990		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-100		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-150		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-230		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-360		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-380		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-390		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-395		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-40		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-425		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-490		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-510		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-520		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-535		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-540		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-545		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-550		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-560		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-575		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-580		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-595		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	D-630	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	E-1 (SLR)	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	E-10		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	E-100		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	E-20		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	E-3 SLR	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	E-30 SLR	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	E-300	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	E-300 Evolt SLR	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	E-330 EVOLT SLR	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	E-400 EVOLT SLR	PS-BLS1	HL-S1
Olympus	DIGITALCAMERA	E-410 EVOLT SLR	PS-BLS1	HL-S1
Olympus	DIGITALCAMERA	E-410 SLR	PS-BLS1	HL-S1
Olympus	DIGITALCAMERA	E420 SLR	PS-BLS1	HL-S1
Olympus	DIGITALCAMERA	E-500 Evolt SLR	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	E-510 SLR	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	E-520 SLR	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	E-550 EVOLT SLR	PS-BLM1	HL-M1
Olympus	DIGITALCAMERA	E-550 EVOLT SLR	PS-BLS1	HL-S1
Olympus	DIGITALCAMERA	FE-100		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-110		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-115		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-120		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-130		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-140		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-150	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-160	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-170		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-180		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-190	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-20	Li-50B	HL-50B
Olympus	DIGITALCAMERA	FE-200	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	FE-210		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-230	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-240	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-250	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-270		AA Mignon 2700mAh

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Olympus	DIGITALCAMERA	FE-280	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-290	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-300	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-3000	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-3010	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-310		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-340	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-350	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-360	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-370		
Olympus	DIGITALCAMERA	FE-45		AA Mignon 2350mAh
Olympus	DIGITALCAMERA	FE-45		AA Mignon 2500mAh
Olympus	DIGITALCAMERA	FE-45		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	FE-45		AA Ni-MH Synergy Ready to Go
Olympus	DIGITALCAMERA	FE-500	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	FE-5000	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-5010	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	FE-5500	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Ferrari 2004	Li-20B	HL-20B
Olympus	DIGITALCAMERA	IR-300	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 1000	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	mju 1010	Li-50B	HL-50B
Olympus	DIGITALCAMERA	mju 1020	Li-50B	HL-50B
Olympus	DIGITALCAMERA	mju 1030	Li-50B	HL-50B
Olympus	DIGITALCAMERA	mju 1040	Li-50B	HL-50B
Olympus	DIGITALCAMERA	mju 1050SW		
Olympus	DIGITALCAMERA	mju 1060	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	MJU 1200	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 20	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Mju 300	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Mju 400	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Mju 410	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Mju 500	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Mju 550WP	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 600	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Mju 700	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 720SW	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 725 SW	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 730	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 740	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 750	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 770	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 780	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	MJU 790	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju 800	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Mju 810	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	MJU 820	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	MJU 830	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	mju 840	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	mju 850	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju Ferrari u	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Mju Mini Digital S	Li-30B	HL-30B
Olympus	DIGITALCAMERA	Mju-7000	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Mju-9000	Li-50B	HL-50B
Olympus	DIGITALCAMERA	SP-310		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	SP-320		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	SP-350		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	SP-500		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	SP-510 UZ		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	SP-550 UZ		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	SP-560 UZ		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	SP-565 UZ	Li-50B	HL-50B
Olympus	DIGITALCAMERA	SP-570 UZ		AA Ni-MH Synergy Ready to Go
Olympus	DIGITALCAMERA	SP-590UZ	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	SP-700	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	SP-S60 UZ		AA Mignon 2700mAh
Olympus	DIGITALCAMERA	Stylus 1000	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Stylus 1010	Li-50B	HL-50B
Olympus	DIGITALCAMERA	Stylus 1030SW	Li-50B	HL-50B
Olympus	DIGITALCAMERA	Stylus 1040	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus 1050SW	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	STYLUS 1200	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus 300	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Stylus 400	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Stylus 410	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Stylus 500	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Stylus 550WP	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus 600	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	Stylus 710	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus 725 SW	Li-40B / Li-42B	HL-42B / 40B

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Olympus	DIGITALCAMERA	Stylus 730	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus 740	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus 750	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus 760	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus 770 SW	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	STYLUS 780	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	STYLUS 790 SW	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	STYLUS 820	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	STYLUS 830	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus 840	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus 850SW	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	Stylus Tough 6000	Li-50B	HL-50B
Olympus	DIGITALCAMERA	Stylus Tough 8000	Li-50B	HL-50B
Olympus	DIGITALCAMERA	Stylus Verve S	Li-30B	HL-30B
Olympus	DIGITALCAMERA	u(MJU)-40	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	U(MJU:)-Mini	Li-30B	HL-30B
Olympus	DIGITALCAMERA	u-1010	Li-50B	HL-50B
Olympus	DIGITALCAMERA	u-1030SW	Li-50B	HL-50B
Olympus	DIGITALCAMERA	u-1040	Li-50B	HL-50B
Olympus	DIGITALCAMERA	u-1050SW	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	u-550WP	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	u-7000	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	U770 SW	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	u-840	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	u-850SW	Li-40B / Li-42B	HL-42B / 40B
Olympus	DIGITALCAMERA	u-9000	Li-50B	HL-50B
Olympus	DIGITALCAMERA	X-2	Li-10B/12B	HL-12B
Olympus	DIGITALCAMERA	X-3	Li-10B/12B	HL-12B
Olympus/Polaroid	DIGITALCAMERA	CAMEDIA C-211 ZOOM		AA Mignon 2700mAh
Panasonic	CAMCORDER	AG-BP15P	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	AG-BP25	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	AG-DC15		HL-D08/D120
Panasonic	CAMCORDER	AG-DV1DC		HL-D08/D120
Panasonic	CAMCORDER	AG-DVC15		HL-D08/D120
Panasonic	CAMCORDER	AG-DVC60		HL-D08/D120
Panasonic	CAMCORDER	AG-DVX100 PRO		HL-D08/D120
Panasonic	CAMCORDER	AG-EZ1	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	AG-EZ80	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	AG-HVX200		HL-D08/D120
Panasonic	CAMCORDER	DZ-MV200A		HL-D08/D120
Panasonic	CAMCORDER	DZ-MV200E		HL-D08/D120
Panasonic	CAMCORDER	DZ-MV208E		HL-D08/D120
Panasonic	CAMCORDER	DZ-MV230A		HL-D08/D120
Panasonic	CAMCORDER	DZ-MV230E		HL-D08/D120
Panasonic	CAMCORDER	DZ-MV250		HL-D08/D120
Panasonic	CAMCORDER	DZ-MV270A		HL-D08/D120
Panasonic	CAMCORDER	DZ-MV270E		HL-D08/D120
Panasonic	CAMCORDER	GA-EZ20	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	GR-DVL9000U	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	GR-DVM1U	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	GR-DVM801	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	GR-VBM1	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	HDC-DX1		
Panasonic	CAMCORDER	HDC-HS100		
Panasonic	CAMCORDER	HDC-HS20	N/A	N/A
Panasonic	CAMCORDER	HDC-HS300		
Panasonic	CAMCORDER	HDC-HS9		
Panasonic	CAMCORDER	HDC-SD100		
Panasonic	CAMCORDER	HDC-SD20	N/A	N/A
Panasonic	CAMCORDER	HDC-SD9		
Panasonic	CAMCORDER	HDC-SX5EB-S		
Panasonic	CAMCORDER	HDC-TM20	N/A	N/A
Panasonic	CAMCORDER	HS200		
Panasonic	CAMCORDER	NV-DA1		HL-D08/D120
Panasonic	CAMCORDER	NV-DA1B		HL-D08/D120
Panasonic	CAMCORDER	NV-DA1EN	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DE3	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DJ1	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DJ100	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DS1	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DS11		HL-D08/D120
Panasonic	CAMCORDER	NV-DS12B		HL-D08/D120
Panasonic	CAMCORDER	NV-DS15		HL-D08/D120
Panasonic	CAMCORDER	NV-DS150		HL-D08/D120
Panasonic	CAMCORDER	NV-DS150B		HL-D08/D120
Panasonic	CAMCORDER	NV-DS17	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DS25		HL-D08/D120
Panasonic	CAMCORDER	NV-DS27		HL-D08/D120
Panasonic	CAMCORDER	NV-DS28		HL-D08/D120
Panasonic	CAMCORDER	NV-DS29		HL-D08/D120

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Panasonic	CAMCORDER	NV-DS3		HL-D08/D120
Panasonic	CAMCORDER	NV-DS30		HL-D08/D120
Panasonic	CAMCORDER	NV-DS33		HL-D08/D120
Panasonic	CAMCORDER	NV-DS35		HL-D08/D120
Panasonic	CAMCORDER	NV-DS37		HL-D08/D120
Panasonic	CAMCORDER	NV-DS38		HL-D08/D120
Panasonic	CAMCORDER	NV-DS5	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DS50		HL-D08/D120
Panasonic	CAMCORDER	NV-DS55		HL-D08/D120
Panasonic	CAMCORDER	NV-DS5EG	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DS60B		HL-D08/D120
Panasonic	CAMCORDER	NV-DS65B		HL-D08/D120
Panasonic	CAMCORDER	NV-DS77		HL-D08/D120
Panasonic	CAMCORDER	NV-DS77B		HL-D08/D120
Panasonic	CAMCORDER	NV-DS8		HL-D08/D120
Panasonic	CAMCORDER	NV-DS89		HL-D08/D120
Panasonic	CAMCORDER	NV-DS99		HL-D08/D120
Panasonic	CAMCORDER	NV-DS990		HL-D08/D120
Panasonic	CAMCORDER	NV-DX1	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DX100E	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DX110E	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-DX1E	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	NV-EX1		HL-D08/D120
Panasonic	CAMCORDER	NV-EX1B		HL-D08/D120
Panasonic	CAMCORDER	NV-EX21		HL-D08/D120
Panasonic	CAMCORDER	NV-EX3		HL-D08/D120
Panasonic	CAMCORDER	NV-GS1		HL-D08/D120
Panasonic	CAMCORDER	NV-GS10B	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS11		HL-D08/D120
Panasonic	CAMCORDER	NV-GS12		HL-D08/D120
Panasonic	CAMCORDER	NV-GS120	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS14		HL-D08/D120
Panasonic	CAMCORDER	NV-GS15		HL-D08/D120
Panasonic	CAMCORDER	NV-GS150	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS17	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS180	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS19	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS20		HL-D08/D120
Panasonic	CAMCORDER	NV-GS200	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS21	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS21B	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS22	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS230	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS250	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS27	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS280	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS29	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS3		HL-D08/D120
Panasonic	CAMCORDER	NV-GS300	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS30B	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS320	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS320 MINI DV	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS33	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS330	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS330	CGA-DU14	HL-U14
Panasonic	CAMCORDER	NV-GS330	CGA-DU21	HL-U21
Panasonic	CAMCORDER	NV-GS330	CGA-DU21	HL-U21HP
Panasonic	CAMCORDER	NV-GS35	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS36	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS37	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS39	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS4		HL-D08/D120
Panasonic	CAMCORDER	NV-GS400	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS40B	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS5		HL-D08/D120
Panasonic	CAMCORDER	NV-GS500	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS500 ??????	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS50B	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS55	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS59	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS60	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS65	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS70B	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS75	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS80	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS83	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS85	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GS9		HL-D08/D120
Panasonic	CAMCORDER	NV-GS90 MINI DV	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	NV-GX7		HL-D08/D120

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Panasonic	CAMCORDER	NV-MG3		HL-D08/D120
Panasonic	CAMCORDER	NV-MX1		HL-D08/D120
Panasonic	CAMCORDER	NV-MX1000		HL-D08/D120
Panasonic	CAMCORDER	NV-MX2		HL-D08/D120
Panasonic	CAMCORDER	NV-MX2000		HL-D08/D120
Panasonic	CAMCORDER	NV-MX2500		HL-D08/D120
Panasonic	CAMCORDER	NV-MX300		HL-D08/D120
Panasonic	CAMCORDER	NV-MX3000		HL-D08/D120
Panasonic	CAMCORDER	NV-MX350		HL-D08/D120
Panasonic	CAMCORDER	NV-MX5		HL-D08/D120
Panasonic	CAMCORDER	NV-MX500		HL-D08/D120
Panasonic	CAMCORDER	NV-MX5000		HL-D08/D120
Panasonic	CAMCORDER	NV-MX7		HL-D08/D120
Panasonic	CAMCORDER	NV-MX8		HL-D08/D120
Panasonic	CAMCORDER	NV-RS7		HL-V14/610
Panasonic	CAMCORDER	NV-RX14		HL-V14/610
Panasonic	CAMCORDER	NV-RX17		HL-V14/610
Panasonic	CAMCORDER	NV-RX18		HL-V14/610
Panasonic	CAMCORDER	NV-RX22		HL-D08/D120
Panasonic	CAMCORDER	NV-RX24		HL-V14/610
Panasonic	CAMCORDER	NV-RX27		HL-V14/610
Panasonic	CAMCORDER	NV-RX33		HL-D08/D120
Panasonic	CAMCORDER	NV-RX49		HL-V14/610
Panasonic	CAMCORDER	NV-RX57		HL-V14/610
Panasonic	CAMCORDER	NV-RX64		HL-V14/610
Panasonic	CAMCORDER	NV-RX66		HL-D08/D120
Panasonic	CAMCORDER	NV-RX67		HL-V14/610
Panasonic	CAMCORDER	NV-RZ1		HL-V14/610
Panasonic	CAMCORDER	NV-RZ10		HL-V14/610
Panasonic	CAMCORDER	NV-RZ15		HL-V14/610
Panasonic	CAMCORDER	NV-RZ1B		HL-V14/610
Panasonic	CAMCORDER	NV-RZ2		HL-V14/610
Panasonic	CAMCORDER	NV-VS4		HL-V14/610
Panasonic	CAMCORDER	NV-VS40		HL-V14/610
Panasonic	CAMCORDER	NV-VS50		HL-V14/610
Panasonic	CAMCORDER	NV-VS7		HL-V14/610
Panasonic	CAMCORDER	NV-VX24		HL-V14/610
Panasonic	CAMCORDER	NV-VX27		HL-V14/610
Panasonic	CAMCORDER	NV-VX44		HL-V14/610
Panasonic	CAMCORDER	NV-VX47		HL-V14/610
Panasonic	CAMCORDER	NV-VX54		HL-V14/610
Panasonic	CAMCORDER	NV-VX57		HL-V14/610
Panasonic	CAMCORDER	NV-VZ1		HL-V14/610
Panasonic	CAMCORDER	NV-VZ10		HL-V14/610
Panasonic	CAMCORDER	NV-VZ15		HL-V14/610
Panasonic	CAMCORDER	NV-VZ17		HL-V14/610
Panasonic	CAMCORDER	NV-Z1EN		HL-V14/610
Panasonic	CAMCORDER	PV-BP8		HL-D08/D120
Panasonic	CAMCORDER	PV-DBP5	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	PV-DBP8		HL-D08/D120
Panasonic	CAMCORDER	PV-DC102		HL-D08/D120
Panasonic	CAMCORDER	PV-DC103		HL-D08/D120
Panasonic	CAMCORDER	PV-DC152		HL-D08/D120
Panasonic	CAMCORDER	PV-DC202		HL-D08/D120
Panasonic	CAMCORDER	PV-DC203		HL-D08/D120
Panasonic	CAMCORDER	PV-DC252		HL-D08/D120
Panasonic	CAMCORDER	PV-DC352		HL-D08/D120
Panasonic	CAMCORDER	PV-DC402		HL-D08/D120
Panasonic	CAMCORDER	PV-DC52		HL-D08/D120
Panasonic	CAMCORDER	PV-DC53		HL-D08/D120
Panasonic	CAMCORDER	PV-DC602		HL-D08/D120
Panasonic	CAMCORDER	PV-DC702		HL-D08/D120
Panasonic	CAMCORDER	PV-DC73		HL-D08/D120
Panasonic	CAMCORDER	PV-DC852		HL-D08/D120
Panasonic	CAMCORDER	PV-DC901		HL-D08/D120
Panasonic	CAMCORDER	PV-DC952		HL-D08/D120
Panasonic	CAMCORDER	PV-DC953		HL-D08/D120
Panasonic	CAMCORDER	PV-DV100		HL-D08/D120
Panasonic	CAMCORDER	PV-DV1000	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	PV-DV100K		HL-D08/D120
Panasonic	CAMCORDER	PV-DV101		HL-D08/D120
Panasonic	CAMCORDER	PV-DV102		HL-D08/D120
Panasonic	CAMCORDER	PV-DV103		HL-D08/D120
Panasonic	CAMCORDER	PV-DV200		HL-D08/D120
Panasonic	CAMCORDER	PV-DV200K		HL-D08/D120
Panasonic	CAMCORDER	PV-DV201		HL-D08/D120
Panasonic	CAMCORDER	PV-DV202		HL-D08/D120
Panasonic	CAMCORDER	PV-DV203		HL-D08/D120
Panasonic	CAMCORDER	PV-DV351		HL-D08/D120
Panasonic	CAMCORDER	PV-DV400		HL-D08/D120

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Panasonic	CAMCORDER	PV-DV400K		HL-D08/D120
Panasonic	CAMCORDER	PV-DV401		HL-D08/D120
Panasonic	CAMCORDER	PV-DV402		HL-D08/D120
Panasonic	CAMCORDER	PV-DV51		HL-D08/D120
Panasonic	CAMCORDER	PV-DV52		HL-D08/D120
Panasonic	CAMCORDER	PV-DV53		HL-D08/D120
Panasonic	CAMCORDER	PV-DV600		HL-D08/D120
Panasonic	CAMCORDER	PV-DV600K		HL-D08/D120
Panasonic	CAMCORDER	PV-DV601		HL-D08/D120
Panasonic	CAMCORDER	PV-DV602		HL-D08/D120
Panasonic	CAMCORDER	PV-DV700	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	PV-DV701		HL-D08/D120
Panasonic	CAMCORDER	PV-DV702		HL-D08/D120
Panasonic	CAMCORDER	PV-DV710		HL-D08/D120
Panasonic	CAMCORDER	PV-DV73		HL-D08/D120
Panasonic	CAMCORDER	PV-DV800		HL-D08/D120
Panasonic	CAMCORDER	PV-DV800K		HL-D08/D120
Panasonic	CAMCORDER	PV-DV851		HL-D08/D120
Panasonic	CAMCORDER	PV-DV852		HL-D08/D120
Panasonic	CAMCORDER	PV-DV900		HL-D08/D120
Panasonic	CAMCORDER	PV-DV901		HL-D08/D120
Panasonic	CAMCORDER	PV-DV951		HL-D08/D120
Panasonic	CAMCORDER	PV-DV952		HL-D08/D120
Panasonic	CAMCORDER	PV-DV953		HL-D08/D120
Panasonic	CAMCORDER	PV-DVP8A		HL-D08/D120
Panasonic	CAMCORDER	PV-GS12	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS120	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS14	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS15	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS200	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS320	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS33	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS400	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS50	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS55	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS70	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-GS9	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	PV-V1000	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	PV-VM202		HL-D08/D120
Panasonic	CAMCORDER	S10P1		
Panasonic	CAMCORDER	S7		
Panasonic	CAMCORDER	SD200		
Panasonic	CAMCORDER	SDR-80S		
Panasonic	CAMCORDER	SDR-90S		
Panasonic	CAMCORDER	SDR-H18	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	SDR-H20	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	SDR-H20	CGA-DU14	HL-U14
Panasonic	CAMCORDER	SDR-H20	CGA-DU21	HL-U21
Panasonic	CAMCORDER	SDR-H20	CGA-DU21	HL-U21HP
Panasonic	CAMCORDER	SDR-H200	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	SDR-H250	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	SDR-H250	CGA-DU14	HL-U14
Panasonic	CAMCORDER	SDR-H250	CGA-DU21	HL-U21
Panasonic	CAMCORDER	SDR-H250	CGA-DU21	HL-U21HP
Panasonic	CAMCORDER	SDR-H280		
Panasonic	CAMCORDER	SDR-H280 ?????	CGA-DU07 CGA-DU06 or VWVBG1	HL-U07
Panasonic	CAMCORDER	SDR-H40		
Panasonic	CAMCORDER	SDR-H60		
Panasonic	CAMCORDER	SDR-H80		
Panasonic	CAMCORDER	SDR-H90		
Panasonic	CAMCORDER	SDR-S10	CGA-S008 / DMW-BCE10	HL-008 / E10
Panasonic	CAMCORDER	SDR-S100	CGA-S303	HL-303
Panasonic	CAMCORDER	SDR-S10EB-K	CGA-S008 / DMW-BCE10	HL-008 / E10
Panasonic	CAMCORDER	SDR-S15		
Panasonic	CAMCORDER	SDR-S150		
Panasonic	CAMCORDER	SDR-S26		
Panasonic	CAMCORDER	SDR-S7		
Panasonic	CAMCORDER	SDR-S7		
Panasonic	CAMCORDER	SDR-S9		
Panasonic	CAMCORDER	SDR-S9		
Panasonic	CAMCORDER	SDR-SW20		
Panasonic	CAMCORDER	SDR-SW20		
Panasonic	CAMCORDER	SDR-SW21		
Panasonic	CAMCORDER	SV-AS10 SD +		
Panasonic	CAMCORDER	SV-AV10 +	CGA-S302	HL-302
Panasonic	CAMCORDER	SV-AV100 +	CGA-S302	HL-302
Panasonic	CAMCORDER	SV-AV10A +	CGA-S302	HL-302
Panasonic	CAMCORDER	SV-AV10D +	CGA-S302	HL-302
Panasonic	CAMCORDER	SV-AV10S +	CGA-S302	HL-302
Panasonic	CAMCORDER	SV-AV20 +	CGA-S302	HL-302

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Panasonic	CAMCORDER	SV-AV20A +	CGA-S302	HL-302
Panasonic	CAMCORDER	SV-AV25 +	CGA-S302	HL-302
Panasonic	CAMCORDER	SV-AV30 +	CGA-S302	HL-302
Panasonic	CAMCORDER	SV-AV50 +		
Panasonic	CAMCORDER	SW20	NP-FC10/FC11	HL-IC10
Panasonic	CAMCORDER	TM300		
Panasonic	CAMCORDER	VDR-D100	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-D150	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-D160	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-D200	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-D210	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-D220	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-D250	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-D300	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-D310	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-D400	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-D50		
Panasonic	CAMCORDER	VDR-M10		HL-D08/D120
Panasonic	CAMCORDER	VDR-M20		HL-D08/D120
Panasonic	CAMCORDER	VDR-M30 DVD	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-M50 DVD	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-M53	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-M54	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-M55	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-M70 DVD	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-M75	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VDR-M95	CGA-DU07 CGA-DU06 or VVVBG1	HL-U07
Panasonic	CAMCORDER	VM-E340A	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	VM-E530A	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	VM-E535LA	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	VM-E540LA	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	VM-E545LS	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	VM-E555LA	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	VM-E635LA	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	VM-E645LA	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	VM-E755LA	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	VM-E855LA	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	CAMCORDER	VMH-835LA	VW-VBD1/CGA-B202	HL-VBD1
Panasonic	DIGITALCAMERA	DMC -LC40K		HL-603/602
Panasonic	DIGITALCAMERA	DMC -LC40S		HL-603/602
Panasonic	DIGITALCAMERA	DMC-F1B	CGA-S001	HL-001
Panasonic	DIGITALCAMERA	DMC-F1EA	CGA-S001	HL-001
Panasonic	DIGITALCAMERA	DMC-F1EK	CGA-S001	HL-001
Panasonic	DIGITALCAMERA	DMC-F1ER	CGA-S001	HL-001
Panasonic	DIGITALCAMERA	DMC-F1ES	CGA-S001	HL-001
Panasonic	DIGITALCAMERA	DMC-F1K	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-F1S	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-F7		
Panasonic	DIGITALCAMERA	DMC-FS15	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-FS20	CGA-S008 / DMW-BCE10	HL-008 / E10
Panasonic	DIGITALCAMERA	DMC-FS25	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-FS5	CGA-S008 / DMW-BCE10	HL-008 / E10
Panasonic	DIGITALCAMERA	DMC-FS6	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-FS7	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-FT1	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-FX01	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-FX07	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-FX1	CGA-S001	HL-001
Panasonic	DIGITALCAMERA	DMC-FX10	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-FX100	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-FX12	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-FX150	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-FX2	CGA-S004	HL-004
Panasonic	DIGITALCAMERA	DMC-FX3	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-FX30	CGA-S008 / DMW-BCE10	HL-008 / E10
Panasonic	DIGITALCAMERA	DMC-FX33	CGA-S008 / DMW-BCE10	HL-008 / E10
Panasonic	DIGITALCAMERA	DMC-FX35	CGA-S008 / DMW-BCE10	HL-008 / E10
Panasonic	DIGITALCAMERA	DMC-FX37		
Panasonic	DIGITALCAMERA	DMC-FX40	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-FX48	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-FX5	CGA-S001	HL-001
Panasonic	DIGITALCAMERA	DMC-FX50	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-FX500	CGA-S008 / DMW-BCE10	HL-008 / E10
Panasonic	DIGITALCAMERA	DMC-FX520	CGA-S008 / DMW-BCE10	HL-008 / E10
Panasonic	DIGITALCAMERA	DMC-FX55	CGA-S008 / DMW-BCE10	HL-008 / E10
Panasonic	DIGITALCAMERA	DMC-FX550	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-FX580	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-FX7	CGA-S004	HL-004
Panasonic	DIGITALCAMERA	DMC-FX8	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-FX9	CGA-S005	HL-005

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Panasonic	DIGITALCAMERA	DMC-FZ10K	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-FZ10S	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-FZ15K	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-FZ18	CGA-S006	HL-006
Panasonic	DIGITALCAMERA	DMC-FZ1B	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-FZ1K	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-FZ2	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-FZ20	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-FZ28	CGA-S006	HL-006
Panasonic	DIGITALCAMERA	DMC-FZ3	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-FZ30	CGA-S006	HL-006
Panasonic	DIGITALCAMERA	DMC-FZ4	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-FZ5	CGA-S002	HL-002
Panasonic	DIGITALCAMERA	DMC-FZ50	CGA-S006	HL-006
Panasonic	DIGITALCAMERA	DMC-FZ7	CGA-S006	HL-006
Panasonic	DIGITALCAMERA	DMC-FZ8	CGA-S006	HL-006
Panasonic	DIGITALCAMERA	DMC-G1	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-L1 SLR		HL-603/602
Panasonic	DIGITALCAMERA	DMC-L1 SLR		HL-603/602
Panasonic	DIGITALCAMERA	DMC-LC1		HL-603/602
Panasonic	DIGITALCAMERA	DMC-LC20		
Panasonic	DIGITALCAMERA	DMC-LC20		HL-603/602
Panasonic	DIGITALCAMERA	DMC-LC33		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LC40		HL-603/602
Panasonic	DIGITALCAMERA	DMC-LC43		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LC5		HL-603/602
Panasonic	DIGITALCAMERA	DMC-LC50		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LC5K		HL-603/602
Panasonic	DIGITALCAMERA	DMC-LC70		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LC80		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LS1		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LS2		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LS60		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LS70		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LS75		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LS80		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LS85		AA Mignon 2350mAh
Panasonic	DIGITALCAMERA	DMC-LS85		AA Mignon 2500mAh
Panasonic	DIGITALCAMERA	DMC-LS85		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LS85		AA Ni-MH Synergy Ready to Go
Panasonic	DIGITALCAMERA	DMC-LX1	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-LX2	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-LX3	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	DMC-LZ1		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LZ10		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LZ2		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LZ3		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LZ5		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LZ6		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LZ7		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-LZ8		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	DMC-TS1	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-TZ1	CGA-S007	HL-007
Panasonic	DIGITALCAMERA	DMC-TZ2	CGA-S007	HL-007
Panasonic	DIGITALCAMERA	DMC-TZ3	CGA-S007	HL-007
Panasonic	DIGITALCAMERA	DMC-TZ4	CGA-S007	HL-007
Panasonic	DIGITALCAMERA	DMC-TZ5	CGA-S007	HL-007
Panasonic	DIGITALCAMERA	DMC-TZ6	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-TZ7	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-ZS1	N/A	N/A
Panasonic	DIGITALCAMERA	DMC-ZS3	N/A	N/A
Panasonic	DIGITALCAMERA	DMX-FX540	N/A	N/A
Panasonic	DIGITALCAMERA	FX7	CGA-S004	HL-004
Panasonic	DIGITALCAMERA	FX8	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	LX1	CGA-S005	HL-005
Panasonic	DIGITALCAMERA	NV-DCF1		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	NV-DCF2E		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	NV-DCF5E		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	NV-DCF7E		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	PV-DC2090		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	PV-DC2590		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	PV-DC3000		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	PV-DC3010		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	PV-SD4090		AA Mignon 2700mAh
Panasonic	DIGITALCAMERA	PV-SD5000		AA Mignon 2700mAh
Pentacoon	DIGITALCAMERA	DC21		AA Mignon 2700mAh
Pentacoon	DIGITALCAMERA	EXACTA DC2100		AA Mignon 2700mAh
Pentacoon	DIGITALCAMERA	Luxmedia 5202		AA Mignon 2700mAh
Pentacoon	DIGITALCAMERA	Luxmedia 5203		AA Mignon 2700mAh
Pentacoon	DIGITALCAMERA	PRAKTIKA DCZ 3.2		AA Mignon 2700mAh

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Pentacoon	DIGITALCAMERA	PRAKTIKA QD 900 LCD		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	*ist D		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	*ist DS		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	*istD L2		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	*istD S2		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	A40		
Pentax	DIGITALCAMERA	A40		HL-PL68
Pentax	DIGITALCAMERA	DigiBino DB200		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	E1-100		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	E1-200		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	E1-2000		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	K100D SLR		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	K100D SUPER SLR		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	K10D SLR	D-L150	HL-PL50
Pentax	DIGITALCAMERA	K110D SLR		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	K200D SLR		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	K20D SLR	D-L150	HL-PL50
Pentax	DIGITALCAMERA	M30		HL-PL68
Pentax	DIGITALCAMERA	OPTIO 230		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO 30		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO 330	D-L12	HL-PL12
Pentax	DIGITALCAMERA	OPTIO 330RS	D-L12	HL-PL12
Pentax	DIGITALCAMERA	OPTIO 33L		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO 33LF		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO 33WR		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO 430	D-L12	HL-PL12
Pentax	DIGITALCAMERA	OPTIO 430RS	D-L12	HL-PL12
Pentax	DIGITALCAMERA	OPTIO 43WR		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO 450	D-L17	HL-PL17
Pentax	DIGITALCAMERA	OPTIO 50L		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO 550	D-L17	HL-PL17
Pentax	DIGITALCAMERA	OPTIO 555	D-L17	HL-PL17
Pentax	DIGITALCAMERA	OPTIO 750Z	D-L17	HL-PL17
Pentax	DIGITALCAMERA	OPTIO A10	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO A20	D-L18	HL-PL18
Pentax	DIGITALCAMERA	Optio A30	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO E10		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO E20		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	Optio E30		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	Optio E40		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO E50		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO E60		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO E70		AA Mignon 2350mAh
Pentax	DIGITALCAMERA	OPTIO E70		AA Mignon 2500mAh
Pentax	DIGITALCAMERA	OPTIO E70		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO E70		AA Ni-MH Synergy Ready to Go
Pentax	DIGITALCAMERA	Optio M10		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	Optio M20		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	Optio M30		HL-PL63
Pentax	DIGITALCAMERA	Optio M40		HL-PL63
Pentax	DIGITALCAMERA	OPTIO M50	D-Li78	HL-PL78
Pentax	DIGITALCAMERA	OPTIO M60	D-Li78	HL-PL78
Pentax	DIGITALCAMERA	OPTIO Mx	D-L17	HL-PL17
Pentax	DIGITALCAMERA	OPTIO P70	N/A	N/A
Pentax	DIGITALCAMERA	OPTIO S	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO S10		HL-PL68
Pentax	DIGITALCAMERA	OPTIO S12		HL-PL68
Pentax	DIGITALCAMERA	OPTIO S30		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO S4	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO S40		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO S4i	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO S50		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO S5i	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO S5N	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO S5z	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO S6	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO S60		AA Mignon 2700mAh
Pentax	DIGITALCAMERA	OPTIO S7	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO SV	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO Svi	D-L18	HL-PL18
Pentax	DIGITALCAMERA	Optio T10	D-L18	HL-PL18
Pentax	DIGITALCAMERA	Optio T30		HL-PL63
Pentax	DIGITALCAMERA	Optio V10		HL-PL63
Pentax	DIGITALCAMERA	Optio V20	D-Li78	HL-PL78
Pentax	DIGITALCAMERA	Optio W10	D-L18	HL-PL18
Pentax	DIGITALCAMERA	Optio W20	D-L18	HL-PL18
Pentax	DIGITALCAMERA	Optio W30		HL-PL63
Pentax	DIGITALCAMERA	Optio W30		HL-PL68
Pentax	DIGITALCAMERA	OPTIO WP	D-L18	HL-PL18
Pentax	DIGITALCAMERA	OPTIO Wpi	D-L18	HL-PL18

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Pentax	DIGITALCAMERA	OPTIO X	D-L18	HL-PL18
Polaroid	DIGITALCAMERA	DS5370	Li-40B / Li-42B	HL-42B / 40B
Polaroid	DIGITALCAMERA	PDC-2300Z		AA Mignon 2700mAh
Premier	DIGITALCAMERA	DC 2300		AA Mignon 2700mAh
Premier	DIGITALCAMERA	DC 3310		AA Mignon 2700mAh
Premier	DIGITALCAMERA	DC 4331		
Ricoh	DIGITALCAMERA	Caplio 300G		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	Caplio 400G		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	Caplio GX	NP-120	HL-F120
Ricoh	DIGITALCAMERA	Caplio GX8		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	Caplio Pro G3		
Ricoh	DIGITALCAMERA	Caplio R1		
Ricoh	DIGITALCAMERA	Caplio R3	CGA-S005	HL-005
Ricoh	DIGITALCAMERA	Caplio R4	CGA-S005	HL-005
Ricoh	DIGITALCAMERA	Caplio R5	CGA-S005	HL-005
Ricoh	DIGITALCAMERA	Caplio R6	DB-70	HL-DB70
Ricoh	DIGITALCAMERA	Caplio R7	DB-70	HL-DB70
Ricoh	DIGITALCAMERA	Caplio R8	DB-70	HL-DB70
Ricoh	DIGITALCAMERA	Caplio RX		
Ricoh	DIGITALCAMERA	Caplio RZ1		
Ricoh	DIGITALCAMERA	G3		AA Ni-MH Synergy Ready to Go
Ricoh	DIGITALCAMERA	G3M		AA Ni-MH Synergy Ready to Go
Ricoh	DIGITALCAMERA	G3S		AA Ni-MH Synergy Ready to Go
Ricoh	DIGITALCAMERA	G4		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	GR Digital		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	GX-200		
Ricoh	DIGITALCAMERA	PR1	NP-80	HL-F80
Ricoh	DIGITALCAMERA	R10		
Ricoh	DIGITALCAMERA	RDC 7	NP-80	HL-F80
Ricoh	DIGITALCAMERA	RDC-2		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RDC-300		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RDC-300Z		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RDC-4200		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RDC-4300		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RDC-5000		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RDC-5300		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RDC-6000	NP-80	HL-F80
Ricoh	DIGITALCAMERA	RDC-i500	NP-80	HL-F80
Ricoh	DIGITALCAMERA	RR1	NP-80	HL-F80
Ricoh	DIGITALCAMERA	RR120		AA Ni-MH Synergy Ready to Go
Ricoh	DIGITALCAMERA	RR211		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RR230		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RR30	NP-60	HL-F60
Ricoh	DIGITALCAMERA	RR330		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RR530		AA Mignon 2700mAh
Ricoh	DIGITALCAMERA	RR660		AA Mignon 2700mAh
Rollei	DIGITALCAMERA	d33 COM		AA Mignon 2700mAh
Rollei	DIGITALCAMERA	d330		AA Mignon 2700mAh
Rollei	DIGITALCAMERA	d41 COM		AA Mignon 2700mAh
Rollei	DIGITALCAMERA	d530		AA Mignon 2700mAh
Rollei	DIGITALCAMERA	d7 COM		AA Mignon 2700mAh
Rollei	DIGITALCAMERA	Prego DP4200	4200/5200	HL-R5200
Rollei	DIGITALCAMERA	Prego DP5200	4200/5200	HL-R5200
Samsung	CAMCORDER	HMX-		
Samsung	CAMCORDER	HMX-H100	IA-BP85ST	HL-S85ST
Samsung	CAMCORDER	HMX-H104	IA-BP85ST	HL-S85ST
Samsung	CAMCORDER	HMX-H105	IA-BP85ST	HL-S85ST
Samsung	CAMCORDER	HMX-H106	IA-BP85ST	HL-S85ST
Samsung	CAMCORDER	HMX-R10	N/A	N/A
Samsung	CAMCORDER	SC-351	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-352	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-352i	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-353i	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-354	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-355	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-357	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D103	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D107	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D20	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D21	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D23	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D24	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D263	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D27	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D29	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D303	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D31	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D33	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D34	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D352	SB-LSM80	HL-SM80

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Samsung	CAMCORDER	SC-D353	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D355	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D362	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D363	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D364	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D365	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D366	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D39	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D453	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D455	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D457	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D5000 DUOCAM		
Samsung	CAMCORDER	SC-D5000i DUOCAM		
Samsung	CAMCORDER	SC-D530	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D590	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D6040	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D6550	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D903	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D93	SB-L110	HL-110S
Samsung	CAMCORDER	SC-D953	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D955	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D963	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-D99	SB-L110	HL-110S
Samsung	CAMCORDER	SC-DC164	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-DC165	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-DC563	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-DC564	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-DC565	SB-LSM80	HL-SM80
Samsung	CAMCORDER	SC-HMX20		
Samsung	CAMCORDER	SC-HMX20C	IA-BP85ST	HL-S85ST
Samsung	CAMCORDER	SC-L750	SB-L160/110A	HL-160S
Samsung	CAMCORDER	SC-L810	SB-L160/110A	HL-160S
Samsung	CAMCORDER	SC-L860	SB-L160/110A	HL-160S
Samsung	CAMCORDER	SC-L870	SB-L160/110A	HL-160S
Samsung	CAMCORDER	SC-L901	SB-L160/110A	HL-160S
Samsung	CAMCORDER	SC-L906	SB-L160/110A	HL-160S
Samsung	CAMCORDER	SC-MM10		
Samsung	CAMCORDER	SC-MM11		
Samsung	CAMCORDER	SC-MM12		
Samsung	CAMCORDER	SC-MX20	IA-BP85ST	HL-S85ST
Samsung	CAMCORDER	SC-W80	SB-L160/110A	HL-160S
Samsung	CAMCORDER	SC-W87	SB-L160/110A	HL-160S
Samsung	CAMCORDER	SC-X105L		AA Mignon 2700mAh
Samsung	CAMCORDER	SMX-F34	IA-BP85ST	HL-S85ST
Samsung	CAMCORDER	VP361	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP362	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP363	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP364	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP366	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP461	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP463	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP467	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP651	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP653	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP655	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP963	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP965	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D10	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D130	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D161	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D190	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D20	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D21	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D23	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D230	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D24	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D250	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D26	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D270	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D30	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D31	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D33	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D34	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D351	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D352i	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D353i	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D354	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D355	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D371	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D372WH	SB-LSM160	HL-SM160

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Samsung	CAMCORDER	VP-D372WH	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D375W	SB-LSM160	HL-SM160
Samsung	CAMCORDER	VP-D375W	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D381	IS-BP80W	HL-S80W
Samsung	CAMCORDER	VP-D382	IS-BP80W	HL-S80W
Samsung	CAMCORDER	VP-D384	IS-BP80W	HL-S80W
Samsung	CAMCORDER	VP-D385	IS-BP80W	HL-S80W
Samsung	CAMCORDER	VP-D39	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D451	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D452	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D453i	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D454	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D455	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D5000 DUOCAM		
Samsung	CAMCORDER	VP-D530	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D55	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D552	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D557	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D590	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D60	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D65	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D650	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D651	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D653	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D655	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D67	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D70	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D73	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D75	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D77	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D80	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D87	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D905	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D93	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D953	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D955	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D957	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D959	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D964W	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-D97	SB-L110	HL-110S
Samsung	CAMCORDER	VP-D99	SB-L110	HL-110S
Samsung	CAMCORDER	VP-DC161	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-DC163	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-DC165	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-DC563	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-DC565	SB-LSM80	HL-SM80
Samsung	CAMCORDER	VP-DX100	IS-BP80W	HL-S80W
Samsung	CAMCORDER	VP-L500	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L520	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L530	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L600	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L610	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L630	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L700	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L710	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L750	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L770	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L800	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L850	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-L860	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-M50	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-M51	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-M52	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-M53	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-MX20	IA-BP85ST	HL-S85ST
Samsung	CAMCORDER	VP-SD20	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-W60	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-W61	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-W70	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-W71	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-W75	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-W76	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-W80	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-W800U	SB-L160/110A	HL-160S
Samsung	CAMCORDER	VP-W87	SB-L160/110A	HL-160S
Samsung	DIGITALCAMERA	Cybermax		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Cybermax PLUS		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 101		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 130		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 200		AA Ni-MH Synergy Ready to Go

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Samsung	DIGITALCAMERA	Digimax 201		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 210AF		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 210SE		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 230		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 240		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 330		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 340		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 350SE		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 35MP3		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 410		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 420		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 50 DUO		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax 800		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax A400		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax A402		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax A5		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax A50		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax A502		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax A503		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax A55W		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax A6		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax A7		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax D202		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax D250		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax D301		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax D370		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax D401		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax D430		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax D530		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax i5	SLB-0737	HL-S0737
Samsung	DIGITALCAMERA	Digimax i6 PMP	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	Digimax i60	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	Digimax i85		HL-S1137D
Samsung	DIGITALCAMERA	Digimax L50	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	Digimax L55W	SLB-1237	HL-S1237
Samsung	DIGITALCAMERA	Digimax L60	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	Digimax L73	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	Digimax L80	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	Digimax L85	SLB-1237	HL-S1237
Samsung	DIGITALCAMERA	Digimax S500		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax S600		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax S750		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax S800		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax U-CA3	SLB-1137	HL-S1137
Samsung	DIGITALCAMERA	Digimax U-CA4	SLB-1137	HL-S1137
Samsung	DIGITALCAMERA	Digimax U-CA401	SLB-1137	HL-S1137
Samsung	DIGITALCAMERA	Digimax U-CA5	SLB-1137	HL-S1137
Samsung	DIGITALCAMERA	Digimax U-CA505	SLB-1137	HL-S1137
Samsung	DIGITALCAMERA	Digimax V3		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax V4		AA Ni-MH Synergy Ready to Go
Samsung	DIGITALCAMERA	Digimax V4000		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax V5		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax V50		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax V6		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax V600	SLB-1137	HL-S1137
Samsung	DIGITALCAMERA	Digimax V70		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	Digimax V700	SLB-1137	HL-S1137
Samsung	DIGITALCAMERA	ES10		AA Mignon 2350mAh
Samsung	DIGITALCAMERA	ES10		AA Mignon 2500mAh
Samsung	DIGITALCAMERA	ES10		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	ES10		AA Ni-MH Synergy Ready to Go
Samsung	DIGITALCAMERA	ES15		AA Mignon 2350mAh
Samsung	DIGITALCAMERA	ES15		AA Mignon 2500mAh
Samsung	DIGITALCAMERA	ES15		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	ES15		AA Ni-MH Synergy Ready to Go
Samsung	DIGITALCAMERA	ES55		HL-S10A
Samsung	DIGITALCAMERA	GX-10 (SLR)	SLB-1674	HL-S1674
Samsung	DIGITALCAMERA	GX-1L SLR		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	GX-1S SLR		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	GX-20 SLR	SLB-1674	HL-S1674
Samsung	DIGITALCAMERA	HZ10W		HL-S10A
Samsung	DIGITALCAMERA	i100		HL-S1137D
Samsung	DIGITALCAMERA	i7		HL-S1137C
Samsung	DIGITALCAMERA	i70	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	i8		HL-S0937
Samsung	DIGITALCAMERA	i8		HL-S0937
Samsung	DIGITALCAMERA	i80		HL-S1137D
Samsung	DIGITALCAMERA	i85		HL-S1137D
Samsung	DIGITALCAMERA	i85		HL-S1137D
Samsung	DIGITALCAMERA	IT100		HL-S10A

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Samsung	DIGITALCAMERA	L100		HL-S10A
Samsung	DIGITALCAMERA	L100		HL-S10A
Samsung	DIGITALCAMERA	L110		HL-S10A
Samsung	DIGITALCAMERA	L110		HL-S10A
Samsung	DIGITALCAMERA	L201		HL-S0837B
Samsung	DIGITALCAMERA	L210		HL-S10A
Samsung	DIGITALCAMERA	L210		HL-S10A
Samsung	DIGITALCAMERA	L310W		HL-S10A
Samsung	DIGITALCAMERA	L70		HL-S0837B
Samsung	DIGITALCAMERA	L700	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	L73	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	L730		HL-S0937
Samsung	DIGITALCAMERA	L74 WIDE		HL-S1137D
Samsung	DIGITALCAMERA	L77	SLB-0637	HL-S0637
Samsung	DIGITALCAMERA	L830		HL-S0937
Samsung	DIGITALCAMERA	L83T		HL-S0837B
Samsung	DIGITALCAMERA	L83T		HL-S0837B
Samsung	DIGITALCAMERA	NV10		HL-S0837B
Samsung	DIGITALCAMERA	NV100HD		HL-S1137D
Samsung	DIGITALCAMERA	NV11		HL-S1137D
Samsung	DIGITALCAMERA	NV15		HL-S0837B
Samsung	DIGITALCAMERA	NV15		HL-S0837B
Samsung	DIGITALCAMERA	NV20		HL-S0837B
Samsung	DIGITALCAMERA	NV20		HL-S0837B
Samsung	DIGITALCAMERA	NV24HD		HL-S1137D
Samsung	DIGITALCAMERA	NV3	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	NV30		HL-S1137D
Samsung	DIGITALCAMERA	NV30		HL-S1137D
Samsung	DIGITALCAMERA	NV4		HL-S0937
Samsung	DIGITALCAMERA	NV40		HL-S1137D
Samsung	DIGITALCAMERA	NV7 OPS	SLB-0837	HL-S0837
Samsung	DIGITALCAMERA	NV8		HL-S0837B
Samsung	DIGITALCAMERA	NV8		HL-S0837B
Samsung	DIGITALCAMERA	NV9		HL-S10A
Samsung	DIGITALCAMERA	PL10		HL-S0937
Samsung	DIGITALCAMERA	PL50		HL-S10A
Samsung	DIGITALCAMERA	PL60		HL-S10A
Samsung	DIGITALCAMERA	PL65		HL-S10A
Samsung	DIGITALCAMERA	PRO 815		
Samsung	DIGITALCAMERA	S1030		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	S1050		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	S1070		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	S1830		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	S630		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	S730		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	S760		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	S85		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	S850		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	S860		AA Mignon 2700mAh
Samsung	DIGITALCAMERA	SL102		HL-S10A
Samsung	DIGITALCAMERA	SL420		HL-S10A
Samsung	DIGITALCAMERA	ST10		HL-S0937
Samsung	DIGITALCAMERA	ST100		HL-S0937
Samsung	DIGITALCAMERA	ST50	N/A	N/A
Samsung	DIGITALCAMERA	TL100		HL-S10A
Samsung	DIGITALCAMERA	WB100	N/A	N/A
Samsung	DIGITALCAMERA	WM500	N/A	N/A
Samsung	DIGITALCAMERA	WM550		HL-S10A
Sanyo	CAMCORDER	DMX-HD800		
Sanyo	DIGITALCAMERA	IDC-1000Z		
Sanyo	DIGITALCAMERA	VPC-AZ3 EX	Li-10B/12B	HL-12B
Sanyo	DIGITALCAMERA	VPC-AZI EX		AA Mignon 2700mAh
Sanyo	DIGITALCAMERA	VPC-E6U		HL-L20
Sanyo	DIGITALCAMERA	VPC-MZ1EX		AA Mignon 2700mAh
Sanyo	DIGITALCAMERA	VPC-MZ3	Li-10B/12B	HL-12B
Sanyo	DIGITALCAMERA	VPC-MZ3 EX	Li-10B/12B	HL-12B
Sanyo	DIGITALCAMERA	VPC-SX 550 EX		AA Mignon 2700mAh
Sanyo	DIGITALCAMERA	VPC-SX 560 E		AA Mignon 2700mAh
Sanyo	DIGITALCAMERA	VPC-X350	Li-10B/12B	HL-12B
Sanyo	DIGITALCAMERA	Xacti C1		HL-L20
Sanyo	DIGITALCAMERA	Xacti DMX-C1		HL-L20
Sanyo	DIGITALCAMERA	Xacti DMX-J4		HL-L20
Sanyo	DIGITALCAMERA	Xacti DSC-S3		AA Mignon 2700mAh
Sanyo	DIGITALCAMERA	Xacti DSC-S4		AA Mignon 2700mAh
Sanyo	DIGITALCAMERA	Xacti E6		HL-L20
Sanyo	DIGITALCAMERA	Xacti VPC-J1	Li-10B/12B	HL-12B
Sanyo	DIGITALCAMERA	Xacti VPC-J1 EX	Li-10B/12B	HL-12B
Sanyo	DIGITALCAMERA	Xacti VPC-J2 EX	Li-10B/12B	HL-12B
Sanyo	DIGITALCAMERA	Xacti VPC-J2BK EX	Li-10B/12B	HL-12B
Sanyo	DIGITALCAMERA	Xacti VPC-J4		HL-L20

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Sanyo	DIGITALCAMERA	Xacti VPC-S1		AA Mignon 2700mAh
Sanyo	DIGITALCAMERA	Xacti VPC-S3		AA Mignon 2700mAh
Sharp	CAMCORDER	VL-A111H	BT-H22	HN-H22
Sharp	CAMCORDER	VL-AH10	BT-H22	HN-H22
Sharp	CAMCORDER	VL-AH131	BT-H22	HN-H22
Sharp	CAMCORDER	VL-AH30	BT-H22	HN-H22
Sharp	CAMCORDER	VL-AH50	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E37	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E47	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E66	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E71	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E720H	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E73	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E78	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E83	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E89	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E96	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E97	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E98	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E980	BT-H22	HN-H22
Sharp	CAMCORDER	VL-E990	BT-H22	HN-H22
Sharp	CAMCORDER	VL-H420	BT-H22	HN-H22
Sharp	CAMCORDER	VL-H94		
Sharp	CAMCORDER	VL-H950	BT-H22	HN-H22
Sharp	CAMCORDER	VL-H96		
Sharp	CAMCORDER	VL-ME10		
Sharp	CAMCORDER	VL-ME100		
Sharp	CAMCORDER	VL-NZ10		
Sharp	CAMCORDER	VL-NZ100		
Sharp	CAMCORDER	VL-NZ8		
Sharp	CAMCORDER	VL-PD3		
Sharp	CAMCORDER	VL-PD6		
Sharp	CAMCORDER	VL-SD20		
Sharp	CAMCORDER	VL-SD450		
Sharp	CAMCORDER	VL-SD650		
Sharp	CAMCORDER	VL-SW50	BT-H22	HN-H22
Sharp	CAMCORDER	VL-WD250		
Sharp	CAMCORDER	VL-Z10H		
Sharp	CAMCORDER	VL-Z1H		
Sharp	CAMCORDER	VL-Z3H		
Sharp	CAMCORDER	VL-Z3S		
Sharp	CAMCORDER	VL-Z5H		
Sharp	CAMCORDER	VL-Z700		
Sharp	CAMCORDER	VL-Z7H		
Sharp	CAMCORDER	VL-Z7S		
Sharp	CAMCORDER	VL-Z8H		
Si Pix	DIGITALCAMERA	Fashion Cam		AA Mignon 2700mAh
Si Pix	DIGITALCAMERA	Fashion Style		AA Mignon 2700mAh
Si Pix	DIGITALCAMERA	SC-1300		AA Mignon 2700mAh
Si Pix	DIGITALCAMERA	SC-2300		AA Mignon 2700mAh
Si Pix	DIGITALCAMERA	SCP-1000		AA Mignon 2700mAh
Si Pix	DIGITALCAMERA	SP-1300		AA Mignon 2700mAh
Sigma	DIGITALCAMERA	SD-10		AA Mignon 2700mAh
Sigma	DIGITALCAMERA	SD-14	NP-400	HL-KM400
Sigma	DIGITALCAMERA	SD-9		AA Mignon 2700mAh
Sony	CAMCORDER	CCD-SC5		
Sony	CAMCORDER	CCD-SC55		
Sony	CAMCORDER	CCD-SC65		
Sony	CAMCORDER	CCD-TR1		
Sony	CAMCORDER	CCD-TR1100		
Sony	CAMCORDER	CCD-TR1E		
Sony	CAMCORDER	CCD-TR200		
Sony	CAMCORDER	CCD-TR205		
Sony	CAMCORDER	CCD-TR2200		
Sony	CAMCORDER	CCD-TR3100		
Sony	CAMCORDER	CCD-TR3200		
Sony	CAMCORDER	CCD-TR411		
Sony	CAMCORDER	CCD-TR416		
Sony	CAMCORDER	CCD-TR417		
Sony	CAMCORDER	CCD-TR425		
Sony	CAMCORDER	CCD-TR427		
Sony	CAMCORDER	CCD-TR500		
Sony	CAMCORDER	CCD-TR511		
Sony	CAMCORDER	CCD-TR515		
Sony	CAMCORDER	CCD-TR516		
Sony	CAMCORDER	CCD-TR517		
Sony	CAMCORDER	CCD-TR640		
Sony	CAMCORDER	CCD-TR7000		
Sony	CAMCORDER	CCD-TR713		
Sony	CAMCORDER	CCD-TR716		

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Sony	CAMCORDER	CCD-TR717		
Sony	CAMCORDER	CCD-TR728		
Sony	CAMCORDER	CCD-TR820		
Sony	CAMCORDER	CCD-TR825		
Sony	CAMCORDER	CCD-TR840		
Sony	CAMCORDER	CCD-TR845		
Sony	CAMCORDER	CCD-TR87		
Sony	CAMCORDER	CCD-TR910		
Sony	CAMCORDER	CCD-TR913		
Sony	CAMCORDER	CCD-TR917		
Sony	CAMCORDER	CCD-TR918		
Sony	CAMCORDER	CCD-TR930		
Sony	CAMCORDER	CCD-TR940		
Sony	CAMCORDER	CCD-TR950		
Sony	CAMCORDER	CCD-TRV101		
Sony	CAMCORDER	CCD-TRV108		
Sony	CAMCORDER	CCD-TRV118		
Sony	CAMCORDER	CCD-TRV120		
Sony	CAMCORDER	CCD-TRV138		
Sony	CAMCORDER	CCD-TRV140		
Sony	CAMCORDER	CCD-TRV15		
Sony	CAMCORDER	CCD-TRV16		
Sony	CAMCORDER	CCD-TRV18		
Sony	CAMCORDER	CCD-TRV19		
Sony	CAMCORDER	CCD-TRV20		
Sony	CAMCORDER	CCD-TRV208		
Sony	CAMCORDER	CCD-TRV215		
Sony	CAMCORDER	CCD-TRV218		
Sony	CAMCORDER	CCD-TRV238		
Sony	CAMCORDER	CCD-TRV240		
Sony	CAMCORDER	CCD-TRV245		
Sony	CAMCORDER	CCD-TRV25		
Sony	CAMCORDER	CCD-TRV27		
Sony	CAMCORDER	CCD-TRV3		
Sony	CAMCORDER	CCD-TRV3000		
Sony	CAMCORDER	CCD-TRV308		
Sony	CAMCORDER	CCD-TRV318		
Sony	CAMCORDER	CCD-TRV32		
Sony	CAMCORDER	CCD-TRV330		
Sony	CAMCORDER	CCD-TRV338		
Sony	CAMCORDER	CCD-TRV340		
Sony	CAMCORDER	CCD-TRV345		
Sony	CAMCORDER	CCD-TRV35		
Sony	CAMCORDER	CCD-TRV36		
Sony	CAMCORDER	CCD-TRV37		
Sony	CAMCORDER	CCD-TRV408		
Sony	CAMCORDER	CCD-TRV41		
Sony	CAMCORDER	CCD-TRV416		
Sony	CAMCORDER	CCD-TRV418		
Sony	CAMCORDER	CCD-TRV425		
Sony	CAMCORDER	CCD-TRV427		
Sony	CAMCORDER	CCD-TRV43		
Sony	CAMCORDER	CCD-TRV46		
Sony	CAMCORDER	CCD-TRV48		
Sony	CAMCORDER	CCD-TRV50		
Sony	CAMCORDER	CCD-TRV57		
Sony	CAMCORDER	CCD-TRV58		
Sony	CAMCORDER	CCD-TRV59		
Sony	CAMCORDER	CCD-TRV608		
Sony	CAMCORDER	CCD-TRV615		
Sony	CAMCORDER	CCD-TRV62		
Sony	CAMCORDER	CCD-TRV620		
Sony	CAMCORDER	CCD-TRV64		
Sony	CAMCORDER	CCD-TRV65		
Sony	CAMCORDER	CCD-TRV66		
Sony	CAMCORDER	CCD-TRV67		
Sony	CAMCORDER	CCD-TRV68		
Sony	CAMCORDER	CCD-TRV69		
Sony	CAMCORDER	CCD-TRV716		
Sony	CAMCORDER	CCD-TRV717		
Sony	CAMCORDER	CCD-TRV72		
Sony	CAMCORDER	CCD-TRV728		
Sony	CAMCORDER	CCD-TRV740		
Sony	CAMCORDER	CCD-TRV75		
Sony	CAMCORDER	CCD-TRV77		
Sony	CAMCORDER	CCD-TRV78		
Sony	CAMCORDER	CCD-TRV81		
Sony	CAMCORDER	CCD-TRV815		
Sony	CAMCORDER	CCD-TRV82		
Sony	CAMCORDER	CCD-TRV840		

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Sony	CAMCORDER	CCD-TRV85		
Sony	CAMCORDER	CCD-TRV87		
Sony	CAMCORDER	CCD-TRV88		
Sony	CAMCORDER	CCD-TRV9		
Sony	CAMCORDER	CCD-TRV90		
Sony	CAMCORDER	CCD-TRV900		
Sony	CAMCORDER	CCD-TRV93		
Sony	CAMCORDER	CCD-TRV930		
Sony	CAMCORDER	CCD-TRV94		
Sony	CAMCORDER	CCD-TRV940		
Sony	CAMCORDER	CCD-TRV95		
Sony	CAMCORDER	CCD-TRV950		
Sony	CAMCORDER	CCD-TRV98		
Sony	CAMCORDER	CCD-TRV99		
Sony	CAMCORDER	DCR-DVD100		
Sony	CAMCORDER	DCR-DVD101		
Sony	CAMCORDER	DCR-DVD103	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD105	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD106	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD106	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD106	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD108	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD108	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD108	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD109	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD109	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD109	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD200		
Sony	CAMCORDER	DCR-DVD201		
Sony	CAMCORDER	DCR-DVD202	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD203	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD205	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD300		
Sony	CAMCORDER	DCR-DVD301		
Sony	CAMCORDER	DCR-DVD305	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD306	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD306	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD306	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD308	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD308	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD308	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD403	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD404	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD405	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD406	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD406	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD406	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD408	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD408	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD408	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD505	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD506	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD506	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD506	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD508	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD508	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD508	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD603	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD610	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD610	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD610	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD653	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD7	NP-FA70	HL-XA70
Sony	CAMCORDER	DCR-DVD703	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD710	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD710	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD710	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD755	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD803	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD805	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD810	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD810	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD810	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD905	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-DVD91		
Sony	CAMCORDER	DCR-DVD910	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-DVD910	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-DVD910	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-DVD92	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC1 PRO		

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Sony	CAMCORDER	DCR-HC1000E	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-HC1000JE	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-HC14		
Sony	CAMCORDER	DCR-HC17	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC18	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC19	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC20	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC21	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC22	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC23	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC24	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC26	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC27	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-HC27	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-HC27	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-HC28	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC3 PRO	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC30	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC32	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC35	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC36	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC37	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-HC37	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-HC37	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-HC38	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-HC38	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-HC38	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-HC39	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC40	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC42	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC43	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC45	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-HC45	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-HC45	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-HC46	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC47	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-HC47	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-HC47	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-HC48	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-HC48	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-HC48	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-HC5	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-HC5	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-HC5	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-HC52	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-HC52	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-HC52	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-HC62	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-HC62	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-HC62	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-HC65	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC85	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC90	NP-FA50	HL-XA50
Sony	CAMCORDER	DCR-HC94	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-HC96	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-IP220	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-IP5	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-IP55	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-IP7	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-IPC10	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-PC1	NP-F10/FS11	HL-XS11
Sony	CAMCORDER	DCR-PC100		
Sony	CAMCORDER	DCR-PC1000	NP-FA50	HL-XA50
Sony	CAMCORDER	DCR-PC101		
Sony	CAMCORDER	DCR-PC103		
Sony	CAMCORDER	DCR-PC104		
Sony	CAMCORDER	DCR-PC105		
Sony	CAMCORDER	DCR-PC106	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-PC107	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-PC109	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-PC110		
Sony	CAMCORDER	DCR-PC115		
Sony	CAMCORDER	DCR-PC120		
Sony	CAMCORDER	DCR-PC2	NP-F10/FS11	HL-XS11
Sony	CAMCORDER	DCR-PC3	NP-F10/FS11	HL-XS11
Sony	CAMCORDER	DCR-PC330		
Sony	CAMCORDER	DCR-PC350	NP-FF50/51	HL-XF51
Sony	CAMCORDER	DCR-PC4	NP-F10/FS11	HL-XS11
Sony	CAMCORDER	DCR-PC5	NP-F10/FS11	HL-XS11
Sony	CAMCORDER	DCR-PC53	NP-FA50	HL-XA50

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Sony	CAMCORDER	DCR-PC55/B	NP-FA50	HL-XA50
Sony	CAMCORDER	DCR-PC55/R	NP-FA50	HL-XA50
Sony	CAMCORDER	DCR-PC55/S	NP-FA50	HL-XA50
Sony	CAMCORDER	DCR-PC55/W	NP-FA50	HL-XA50
Sony	CAMCORDER	DCR-PC6		
Sony	CAMCORDER	DCR-PC8		
Sony	CAMCORDER	DCR-PC9		
Sony	CAMCORDER	DCR-PD150		
Sony	CAMCORDER	DCR-PD170		
Sony	CAMCORDER	DCR-SC100	NP-F530/F550/F570	HL-XL581
Sony	CAMCORDER	DCR-SR100	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-SR190	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR190	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR190	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR200	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR200	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR200	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR220	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR220	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR220	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR290		
Sony	CAMCORDER	DCR-SR300	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR300	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR300	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR30E	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-SR32	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR32	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR32	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR40	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-SR42	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR42	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR42	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR45	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR45	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR45	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR50E	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-SR52	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR52	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR52	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR60E	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-SR62	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR62	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR62	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR65	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR65	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR65	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR70E	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-SR72	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR72	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR72	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR82	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR82	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR82	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR85	NP-FH100	HL-XH100
Sony	CAMCORDER	DCR-SR85	NP-FH50	HL-XH50
Sony	CAMCORDER	DCR-SR85	NP-FH70	HL-XH70
Sony	CAMCORDER	DCR-SR90E	NP-FP50	HL-XP50A
Sony	CAMCORDER	DCR-TR238		
Sony	CAMCORDER	DCR-TR7000		
Sony	CAMCORDER	DCR-TR700D		
Sony	CAMCORDER	DCR-TR7100		
Sony	CAMCORDER	DCR-TR8000		
Sony	CAMCORDER	DCR-TRV10		
Sony	CAMCORDER	DCR-TRV103		
Sony	CAMCORDER	DCR-TRV11		
Sony	CAMCORDER	DCR-TRV110		
Sony	CAMCORDER	DCR-TRV12		
Sony	CAMCORDER	DCR-TRV120		
Sony	CAMCORDER	DCR-TRV130		
Sony	CAMCORDER	DCR-TRV14		
Sony	CAMCORDER	DCR-TRV140		
Sony	CAMCORDER	DCR-TRV145		
Sony	CAMCORDER	DCR-TRV15		
Sony	CAMCORDER	DCR-TRV16		
Sony	CAMCORDER	DCR-TRV17		
Sony	CAMCORDER	DCR-TRV18		
Sony	CAMCORDER	DCR-TRV19		
Sony	CAMCORDER	DCR-TRV20		
Sony	CAMCORDER	DCR-TRV208		
Sony	CAMCORDER	DCR-TRV210		

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Sony	CAMCORDER	DCR-TRV215		
Sony	CAMCORDER	DCR-TRV218		
Sony	CAMCORDER	DCR-TRV22		
Sony	CAMCORDER	DCR-TRV228		
Sony	CAMCORDER	DCR-TRV230		
Sony	CAMCORDER	DCR-TRV235		
Sony	CAMCORDER	DCR-TRV238		
Sony	CAMCORDER	DCR-TRV239		
Sony	CAMCORDER	DCR-TRV24		
Sony	CAMCORDER	DCR-TRV240		
Sony	CAMCORDER	DCR-TRV245		
Sony	CAMCORDER	DCR-TRV25		
Sony	CAMCORDER	DCR-TRV250		
Sony	CAMCORDER	DCR-TRV255		
Sony	CAMCORDER	DCR-TRV260		
Sony	CAMCORDER	DCR-TRV265		
Sony	CAMCORDER	DCR-TRV27		
Sony	CAMCORDER	DCR-TRV270		
Sony	CAMCORDER	DCR-TRV280		
Sony	CAMCORDER	DCR-TRV285		
Sony	CAMCORDER	DCR-TRV30		
Sony	CAMCORDER	DCR-TRV310		
Sony	CAMCORDER	DCR-TRV315		
Sony	CAMCORDER	DCR-TRV320		
Sony	CAMCORDER	DCR-TRV325		
Sony	CAMCORDER	DCR-TRV33		
Sony	CAMCORDER	DCR-TRV330		
Sony	CAMCORDER	DCR-TRV33E		
Sony	CAMCORDER	DCR-TRV340		
Sony	CAMCORDER	DCR-TRV345		
Sony	CAMCORDER	DCR-TRV350		
Sony	CAMCORDER	DCR-TRV355		
Sony	CAMCORDER	DCR-TRV38		
Sony	CAMCORDER	DCR-TRV39		
Sony	CAMCORDER	DCR-TRV40		
Sony	CAMCORDER	DCR-TRV408		
Sony	CAMCORDER	DCR-TRV410		
Sony	CAMCORDER	DCR-TRV418		
Sony	CAMCORDER	DCR-TRV430		
Sony	CAMCORDER	DCR-TRV460		
Sony	CAMCORDER	DCR-TRV480		
Sony	CAMCORDER	DCR-TRV5		
Sony	CAMCORDER	DCR-TRV50		
Sony	CAMCORDER	DCR-TRV510		
Sony	CAMCORDER	DCR-TRV520		
Sony	CAMCORDER	DCR-TRV530		
Sony	CAMCORDER	DCR-TRV6		
Sony	CAMCORDER	DCR-TRV60		
Sony	CAMCORDER	DCR-TRV620		
Sony	CAMCORDER	DCR-TRV7		
Sony	CAMCORDER	DCR-TRV70		
Sony	CAMCORDER	DCR-TRV720		
Sony	CAMCORDER	DCR-TRV725		
Sony	CAMCORDER	DCR-TRV730		
Sony	CAMCORDER	DCR-TRV738		
Sony	CAMCORDER	DCR-TRV740		
Sony	CAMCORDER	DCR-TRV748		
Sony	CAMCORDER	DCR-TRV8		
Sony	CAMCORDER	DCR-TRV80		
Sony	CAMCORDER	DCR-TRV820		
Sony	CAMCORDER	DCR-TRV828		
Sony	CAMCORDER	DCR-TRV830		
Sony	CAMCORDER	DCR-TRV840		
Sony	CAMCORDER	DCR-TRV890		
Sony	CAMCORDER	DCR-TRV9		
Sony	CAMCORDER	DCR-TRV900		
Sony	CAMCORDER	DCR-TRV950		
Sony	CAMCORDER	DCR-TVX1000	NP-F750VX	HL-750VX
Sony	CAMCORDER	DCR-TVX2000		
Sony	CAMCORDER	DCR-TVX700	NP-F750VX	HL-750VX
Sony	CAMCORDER	DCR-TVX9000		
Sony	CAMCORDER	DCR-VX2000		
Sony	CAMCORDER	DCR-VX2100		
Sony	CAMCORDER	DCR-VX700		
Sony	CAMCORDER	DSR-250P PRO		
Sony	CAMCORDER	DSR-390P PRO		
Sony	CAMCORDER	DSR-400P PRO		
Sony	CAMCORDER	DSR-PD150		
Sony	CAMCORDER	DSR-PD170		
Sony	CAMCORDER	DSR-PDX10		

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Sony	CAMCORDER	GV-A500		
Sony	CAMCORDER	GV-D1000	NP-FM50	HL-IQM51
Sony	CAMCORDER	GV-D200	NP-F530/F550/F570	HL-XL581
Sony	CAMCORDER	GV-D300		
Sony	CAMCORDER	GV-D300	NP-F530/F550/F570	HL-XL581
Sony	CAMCORDER	GV-D900		
Sony	CAMCORDER	GZ-HD40	BN-VF808U	HL-808U
Sony	CAMCORDER	GZ-HD40	BN-VF815U	HL-815U
Sony	CAMCORDER	GZ-HD40	BN-VF823U	HL-823U
Sony	CAMCORDER	HDR -TG1	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-CX100	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-CX11		
Sony	CAMCORDER	HDR-CX12	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-CX12	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-CX12	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-CX7	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-CX7	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-CX7	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-FX1		
Sony	CAMCORDER	HDR-FX100 PRO		
Sony	CAMCORDER	HDR-FX7		
Sony	CAMCORDER	HDR-HC1		
Sony	CAMCORDER	HDR-HC3	NP-FP50	HL-XP50A
Sony	CAMCORDER	HDR-HC5	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-HC5	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-HC5	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-HC7	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-HC7	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-HC7	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-HC9	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-HC9	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-HC9	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-SR1		
Sony	CAMCORDER	HDR-SR10	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-SR10	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-SR10	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-SR11	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-SR11	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-SR11	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-SR12	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-SR12	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-SR12	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-SR12	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-SR12	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-SR12	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-SR5	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-SR5	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-SR5	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-SR5C	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-SR5C	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-SR5C	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-TG1	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-TG1	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-TG1	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-TG3E	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-UX1		
Sony	CAMCORDER	HDR-UX10	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-UX10	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-UX10	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-UX3	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-UX3	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-UX3	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-UX5	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-UX5	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-UX5	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-UX7	NP-FH100	HL-XH100
Sony	CAMCORDER	HDR-UX7	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-UX7	NP-FH70	HL-XH70
Sony	CAMCORDER	HDR-XR520V	NP-FH50	HL-XH50
Sony	CAMCORDER	HDR-Z1E		
Sony	CAMCORDER	HVR-A1U PRO		
Sony	CAMCORDER	HVR-AV1		
Sony	CAMCORDER	HVR-M10 PRO		
Sony	CAMCORDER	HVR-X7U PRO	NP-F530/F550/F570	HL-XL581
Sony	CAMCORDER	HVR-X7U PRO	NP-F730/F750/F770	HL-XL782
Sony	CAMCORDER	HVR-X7U PRO	NP-F930/F950/F970	HL-XL982
Sony	CAMCORDER	HVR-Z5J PRO		
Sony	CAMCORDER	MHS-CM1	N/A	N/A
Sony	CAMCORDER	MHS-PM1	N/A	N/A
Sony	CAMCORDER	WEBBIE HD	N/A	N/A

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Sony	DIGITALCAMERA	ALPHA DSLR-350	NP-FM500	HL-XM500
Sony	DIGITALCAMERA	Alpha DSLR-A100	NP-FM55H	HL-XM55H
Sony	DIGITALCAMERA	Alpha DSLR-A100K	NP-FM55H	HL-XM55H
Sony	DIGITALCAMERA	ALPHA DSLR-A200	NP-FM500	HL-XM500
Sony	DIGITALCAMERA	ALPHA DSLR-A300	NP-FM500	HL-XM500
Sony	DIGITALCAMERA	ALPHA DSLR-A700	NP-FM500	HL-XM500
Sony	DIGITALCAMERA	ALPHA DSLR-A900	NP-FM500	HL-XM500
Sony	DIGITALCAMERA	DSC-10		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-43		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-D700	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	DSC-D770	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	DSC-F505		
Sony	DIGITALCAMERA	DSC-F55		
Sony	DIGITALCAMERA	DSC-F707	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	DSC-F717	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	DSC-F77	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-F828	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	DSC-F88	NP-FR1	HL-XR1P
Sony	DIGITALCAMERA	DSC-FX77	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-G1	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-G3	NP-BD1	HL-D1
Sony	DIGITALCAMERA	DSC-H1		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-H10	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-H2		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-H3	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-H50	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-H7	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-H9	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-L1	NP-FT1	HL-XT1C
Sony	DIGITALCAMERA	DSC-M1	NP-FT1	HL-XT1C
Sony	DIGITALCAMERA	DSC-M2	NP-FT1	HL-XT1C
Sony	DIGITALCAMERA	DSC-N1	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-N2	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-P1		
Sony	DIGITALCAMERA	DSC-P10	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-P100	NP-FR1	HL-XR1P
Sony	DIGITALCAMERA	DSC-P11		
Sony	DIGITALCAMERA	DSC-P12	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-P120	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	DSC-P2	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-P20		AA Ni-MH Synergy Ready to Go
Sony	DIGITALCAMERA	DSC-P200	NP-FR1	HL-XR1P
Sony	DIGITALCAMERA	DSC-P3	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-P30		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P31		AA Ni-MH Synergy Ready to Go
Sony	DIGITALCAMERA	DSC-P32		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P41		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P43		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P5	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-P50		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P51		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P52		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P7	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-P70		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P71		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P72		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P73		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P8	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-P9	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-P92		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-P93		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-R1	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	DSC-S30	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	DSC-S40		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-S50	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	DSC-S60		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-S600		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-S650		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-S70	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	DSC-S700		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-S75	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	DSC-S80		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-S800		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-S85	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	DSC-S90		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-T1	NP-FT1	HL-XT1C
Sony	DIGITALCAMERA	DSC-T10	NP-FT1	HL-XT1C
Sony	DIGITALCAMERA	DSC-T100	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-T11	NP-FT1	HL-XT1C
Sony	DIGITALCAMERA	DSC-T2	NP-BD1	HL-D1

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Sony	DIGITALCAMERA	DSC-T20	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-T200	NP-BD1	HL-D1
Sony	DIGITALCAMERA	DSC-T3	NP-FT1	HL-XT1C
Sony	DIGITALCAMERA	DSC-T30	NP-FR1	HL-XR1P
Sony	DIGITALCAMERA	DSC-T300	NP-BD1	HL-D1
Sony	DIGITALCAMERA	DSC-T33	NP-FT1	HL-XT1C
Sony	DIGITALCAMERA	DSC-T5	NP-FT1	HL-XT1C
Sony	DIGITALCAMERA	DSC-T50	NP-FR1	HL-XR1P
Sony	DIGITALCAMERA	DSC-T500	NP-BD1	HL-D1
Sony	DIGITALCAMERA	DSC-T7		
Sony	DIGITALCAMERA	DSC-T70	NP-BD1	HL-D1
Sony	DIGITALCAMERA	DSC-T700	NP-BD1	HL-D1
Sony	DIGITALCAMERA	DSC-T77	NP-BD1	HL-D1
Sony	DIGITALCAMERA	DSC-T77B / G / P / T	NP-BD1	HL-D1
Sony	DIGITALCAMERA	DSC-T9	NP-FT1	HL-XT1C
Sony	DIGITALCAMERA	DSC-U10		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-U20		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-U30		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-U40		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-U50		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-U60		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-V1	NP-FC10/FC11	HL-IC10
Sony	DIGITALCAMERA	DSC-V3	NP-FR1	HL-XR1P
Sony	DIGITALCAMERA	DSC-W1		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-W200	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-W210	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-W220	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-W30	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-W35	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-W5		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-W50	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-W55	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-W7		AA Mignon 2700mAh
Sony	DIGITALCAMERA	DSC-W80	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	DSC-W90	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	GV-D200 WALKMAN		
Sony	DIGITALCAMERA	GVH-D700 WALKMAN	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-CD1000	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-CD200	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-CD250	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	MVC-CD300	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	MVC-CD350	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	MVC-CD400	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	MVC-CD500	NP-FM50	HL-IQM51
Sony	DIGITALCAMERA	MVC-FD200	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD5	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD51	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD7	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD71	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD73	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD75	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD81	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD83	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD85	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD87	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD88	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD90	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD91	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD92	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD95	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FD97	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FDR1	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	MVC-FDR3	NP-F530/F550/F570	HL-XL581
Sony	DIGITALCAMERA	S950	N/A	N/A
Sony	DIGITALCAMERA	W120	NP-FG1 & NP-BG1	HL-G1
Sony	DIGITALCAMERA	W300	NP-FG1 & NP-BG1	HL-G1
Thomson	CAMCORDER	DV3DVM5		
Thomson	CAMCORDER	DVL9500		
Thomson	CAMCORDER	DVL9600		
Thomson	CAMCORDER	VMD 160 MS	BN-V507	HL-507
Thomson	CAMCORDER	VM-D2		
Thomson	CAMCORDER	VM-D3		
Thomson	CAMCORDER	VM-D4		
Thomson	CAMCORDER	VM-D5		
Thomson	CAMCORDER	VM-D6		
Thomson	CAMCORDER	VM-D8	BN-V507	HL-507
Thomson	CAMCORDER	VM-D9	BN-V507	HL-507
Toshiba	DIGITALCAMERA	PDR-2300		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-3300		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-3310	BP-1000	HL-900

Vendor	Camera Type	Camera Model	Original Battery	Hahnel Battery
Toshiba	DIGITALCAMERA	PDR-3320		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-5		
Toshiba	DIGITALCAMERA	PDR-5300	NP-60	HL-F60
Toshiba	DIGITALCAMERA	PDR-M1	NP-80	HL-F80
Toshiba	DIGITALCAMERA	PDR-M11		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-M21		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-M25		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-M3	NP-100	HL-F100
Toshiba	DIGITALCAMERA	PDR-M3310	BP-1000	HL-900
Toshiba	DIGITALCAMERA	PDR-M4	NP-80	HL-F80
Toshiba	DIGITALCAMERA	PDR-M5	NP-80	HL-F80
Toshiba	DIGITALCAMERA	PDR-M60		AA Ni-MH Synergy Ready to Go
Toshiba	DIGITALCAMERA	PDR-M61		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-M65		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-M70	NP-80	HL-F80
Toshiba	DIGITALCAMERA	PDR-M71		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-M81		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-T10		AA Mignon 2700mAh
Toshiba	DIGITALCAMERA	PDR-T20	NP-60	HL-F60
Toshiba	DIGITALCAMERA	PDR-T30	NP-60	HL-F60
Traveller	DIGITALCAMERA	DC-5300	NP-60	HL-F60
Traveller	DIGITALCAMERA	Slimline X4		
Traveller	DIGITALCAMERA	Slimline X5		
Vivitar	DIGITALCAMERA	DVR310		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	DVR390H	NP-120	HL-F120
Vivitar	DIGITALCAMERA	V3625		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3650		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3695		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3705		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3710		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3715		AA Mignon 2350mAh
Vivitar	DIGITALCAMERA	V3715		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3750		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3755		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3760		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3785		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3805		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3815		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3826		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3835		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V3930	NP-60	HL-F60
Vivitar	DIGITALCAMERA	V3945s		AA Mignon 2700mAh
Vivitar	DIGITALCAMERA	V4000	NP-60	HL-F60
Vivitar	DIGITALCAMERA	V5385		AA Mignon 2700mAh
Voigtlander	DIGITALCAMERA	Virtus D4		
Yakumo	DIGITALCAMERA	Mega-Image 47SL		AA Mignon 2700mAh
Yakumo	DIGITALCAMERA	Mega-Image 57		AA Mignon 2700mAh
Yakumo	DIGITALCAMERA	Mega-Image 610X		AA Mignon 2700mAh