# BLDCKS



**ZERO** USER GUIDE MANUAL DE UTILIZADOR

# English

### Português

03-24

27-48

#### Limitation of liability

Please read the user manual and all the documentation that accompanies your Blocks product. If you don't do it, you're assuming the risk of ireversibly damage the equipment that can lead to accidents and injuries. The user must also make sure that anyone who operates the equipment is able to do so, and understands all the contents described in the user manual.

The "Blocks zero" product consists of a 3D printer assembly kit. For assembling the kit, the user must follow the assembly manual strictly. This electro-mechanical equipment is intended for the creation of digitally shaped parts or models through the deposition of molten thermoplastics. Despite the quality we believe we have achieved with this machine, the qualification of the work performed on this machine for a specific purpose is the user responsibility.

The indications in both this user manual and the assembly manual are derived from our experience and from sources we consider reliable, but if you have any questions please contact Blocks or one of our dealers.

This equipment has been tested and found to comply with the standards regarding the CE marking, the collection of electrical and electronic equipment waste and the collection of recyclable packaging.



01	Security		06
02	Introduction		07
03	Instalation		11
		Unpacking	11
		Installation and Configuration	11
04	Operation		14
		Loading the filament	14
		Plate Leveling	16
		Doing a print	18
		Change filament	19
		Setting up the printer directly on the screen	20
05	Maintenance		21
		Removing objects and cleaning the building plate	21
		Cleaning the nozzle	21
		Firmware updates	21
		Rod Lubrication	21
		Belt tensioning	21
		Cleaning and maintenance of the extruder	22
		Nozzle clearing	23

### 06 Troubleshooting

# 01 Security

#### Security

- 1. Blocks zero should always be used with the power supply supplied with the printer.
- 2. Never use damaged power cords.
- 3. This machine have moving components that can cause injury if handled while the printer is operating.
- 4. The nozzle in Blocks zero operates at high temperatures, so it should never be touched in the heating and cooling processes or while the machine is printing.
- 5. Never access the electronics area while the machine is connected to the power supply.
- 6. Do not use the printer in explosive environments or near chemicals that may react to high temperatures or electrical surges.
- 7. Do not leave liquids near the printer.
- 8. The printing process should always be supervised.
- 9. The printer should be installed in a well-ventilated area, as vapors that are harmful to health may be released during the printing process. The recommendations of the material manufacturer must always be followed.
- 10. Do not install the printer in direct contact with solar radiation or in an environment that may exceed the recommended operation temperature, It may occur deformation of some printed parts that can cause damage to the equipment.
- 11. Note the following symbols:



This symbol indicates the presence of moving parts inside the machine.



This symbol indicates the presence of parts with high temperatures.

### Blocks zero illustration



0	Bowden	Where the wiring and the PTFE tube that feeds the hot end with filament passes.
2	SD card slot	To insert the SD card with the gcode file to be printed.
3	LCD Screen	Where you can see information about machine status and printing process.
4	Selection button	For navigation and selection in the menus visible on the LCD screen.
5	Extruder	Assembly of components that applies the force required for the filament to move in the system.
6	Hot End (printing head)	Set of components that allow melting, deposition and solidification of the filament.
7	Print Blower	Fan responsible for the cooldown and solidification of the plastic at the nozzle exit.
8	Build platform	Set of components that includes the plate that serves as the platform for the prints.

# 02 Introduction

#### Extruder illustration



# 02 Introduction

### Hot End illustration



Properties	Technology	Fused filament fabrication	
	Build Volume	120 x 140 x 120 mm	
	Material diameter	1,75 mm	
	Layer resolution	Nozzle 0,4 mm: 50-300 mícrons	
	Traveling speed	150-200 mm/s	
	Build plate	Acrylic plate	
	Material types	PLA, Wood and Metal Filaments, Flex, PETG	
	Nozzle diameter	0,4 mm	
	Hot end temperature	180–275°C	
	Hotend heating time	< 2 min	
	Material storage	Filament spool holder	
	Connectivity	SD card, USB	
	Build plate leveling	Manual - firmware assisted	
Dimensions	External dimensions of the printer (including Bowden tube and coil holder	24x30x40cm )	
	Weight	4,8 Kg	
	Packaging dimensions	23x32x18cm	
	Power requirements	In AC 100-240V, 1,2A, 50/60Hz Out DC 12V, 8A	
Environmental Conditions	Environmental conditions of operation	15 - 30 °C, 10 - 90%	
Software	Printer storage conditions	5 - 35 °C	
	Firmware	Marlin based firmware	
	Recommended slicer	Cura	
	Supported Operating System	Windows, Mac, Linux	
	File types for slicer	STL, OBJ	

#### 03.1 Installation

When receiving the Blocks zero printer you must make sure that you open the carton box by the correct side identified with the sticker. Doing so in this way ensures that all components of the kit are accessible in the correct order, thus avoiding mixing the various components.

### 03.2 Unpacking

- 1. Remove the coating film and printed sleeve.
- 2. Open the carton box by the correct side marked with a sticker.
- 3. Carefully remove the top components, the toolbox, polished vertical axis rods, and acrylic panels. Take special care to remove the acrylic panels as these are fragile.
- 4. Follow all assembly steps of the machine in the correct order as described in the assembly manual.
- 5. During the assembly process, if any components are missing or damaged, contact the dealer where you purchased the equipment immediately.

#### 03.3 Installation and configuration

Blocks zero already has the firmware installed, but it may be undergoing updates so we advise you to visit the equipment page on our website and check if the installed version (can be seen on the screen when the printer is switched on) is the latest version available.

After you have assembled the Blocks zero kit following the assembly manual you will need to go to our website to the Blocks Zero page and download the software for preparing the 3D printing files and also download the pre-configured printing profiles for the different materials and resolutions.

To configure the recommended preparation software follow these steps:

#### 1. Add a machine:

- 1.1. First of all, make sure you have the right version of Cura installed (v3.3.1)
- 1.2. Open the software and click *Settings* » *Printer* » *Add Printer*
- 1.3. Select Custom » Custom FDM printer
- 1.4. Write the name for it (ex: Blocks zero) and press next
- 1.5. Fill in the data for Printer and Extruder settings as shown in the next page images. You can find the texts to Start and End G-Code in page 13.

### Printer Settings Tab

C Machine Settings					×
Machine Setti	ngs				
Printer Extruder 1					
Printer Settings			Printhead Settings		
X (Width)	120	mm	X min	30	mm
Y (Depth)	140	mm	Ymin	30	mm
Z (Height)	120	mm	X max	30	mm
Build plate shape	Rectangular	•	Y max	30	mm
Origin at center			Gantry height	8	mm
G-code flavor	Marlin	•	Number of Extruders	1	•
Start G-code			End G-code		
<pre>;Sliced at: {day} {date} {time} ;Basic settings: Layer height: {layer_h ;Print time: {print_time} ;Filament used: {filament_amount}m {fil ;Filament cost: {filament_cost} ;M190 S{print_bed_temperature} ;Uncomment t &lt;</pre> ;End GCode M104 S0 ;extruder h M104 S0 ;heated bed G91 G1 E-1 F300 G1 Z+0.5 E-5 X-20 Y-20 F{travel_speed} G28 X0 Y0 <					
					Close

### Extruder Settings Tab

C Machine Settings	G Machine Settings					
Machine Setting	Machine Settings					
Printer Extruder 1						
Nozzle Settings						
Nozzle size Compatible material diam	0.4 mm					
Nozzle offset X	0 mm					
Nozzle offset Y	0 mm					
Extruder Start G-code		Extruder End G-code				
			Close			

Attention: Copy and Paste the following text in the respective boxes for Start G-code and End G-code (but only for the Printer tab, not for the Extruder tab):

#### Start G-code:

;Sliced at: {day} {date} {time} ;Basic settings: Layer height: {layer\_height} Walls: {wall\_thickness} Fill: {fill\_density} ;Print time: {print\_time} ;Filament used: {filament\_amount}m {filament\_weight}g ;Filament cost: {filament\_cost} ;M190 S{print\_bed\_temperature} ;Uncomment to add your own bed temperature line ;M109 S{print\_temperature} ;Uncomment to add your own temperature line G21 ;metric values G90 ;absolute positioning M82 ;set extruder to absolute mode M107 ;start with the fan off G28 X0 Y0 ;move X/Y to min endstops G28 Z0 ;move Z to min endstops G1 Z15.0 F{travel\_speed} ;move the platform down 15mm G92 E0 ;zero the extruded length G1 F200 E3 ;extrude 3mm of feed stock G92 E0 ;zero the extruded length again G1 F{travel\_speed} ;Put printing message on LCD screen M117 Printing...

#### End G-code:

;End GCode
M104 S0 ;extruder heater off
M140 S0 ;heated bed heater off (if you have it)
G91 ;relative positioning
G1 E-1 F300 ;retract the filament a bit before lifting the nozzle, to release some of the pressure
G1 Z+0.5 E-5 X-20 Y-20 F{travel\_speed} ;move Z up a bit and retract filament even more
G28 X0 Y0 ;move X/Y to min endstops, so the head is out of the way
M84 ;steppers off
G90 ;absolute positioning
;[profile\_string]

#### 2. Print profile configuration:

- 2.1. Download to your computer the Blocks zero print profiles provided by Blocks
- 2.2. In the top tabs in Cura software select: Settings » Profile » Manage Profiles
- 2.3. Click the tab Import and select the desired profiles to import to the software
- 2.4. After that you can choose the correct profile for the desired material and quality by clicking *Activate* in the same menu or by clicking *Settings* » *Profile* and choosing the desired profile immediately.

Begin by connecting the power supply supplied with the kit into the power plug and into the wall outlet. Then turn the printer on by clicking the white switch on the back of the machine.

#### 04.1 Loading the filament

- 1. Press the selection button once, rotate until you select *Filament* and press it again.
- 2. Then select the *Load* option and press the button again.
- 3. Wait while the Hot End heats up to 220°C.
- 4. Insert the filament into the extruder pulling the hinge at the same time, and make sure the filament is visible about 5mm along the PTFE tube just above the extruder. (*To learn more about inserting the filament, see page 64 of the TIPS section of the Blocks Zero assembly guide.*)
- 5. Wait while the filament is routed along the PTFE tube in the Bowden.
- 6. After the filament begins to exit through the nozzle, the operator may choose to terminate the pro--cess or wait for the machine to do it after thirty beeps.

Illustrated steps in the next page

*Note:* If there is a change in the filament color or material, we recommend that you allow this last step to be taken until the machine has finished. *Extra:* To see the process of loading the filament in video format go to the Blocks channel on YouTube or follow the direct link below.

Blocks Zero – Load Filament: https://youtu.be/Aa7Mt6X2byY

## 04 Operation

Main Screen	0 27/0° Z height: 0 mm %100% SD% o: Blocks zero ready.
	<pre>*Back</pre>
2	<pre>*Back</pre>
3	≠Back ≠ Nozzle: 220 Heating & 31/220°
4	Insert new filament and press button.
5	Please wait. Loadin9 filament
6	Wait until filament is pur9ed and and press button.
	Filament loaded!

#### 04.2 Plate leveling

Plate leveling is one of the most important processes in 3D printing. By making sure the printing platform is leveled, you are ensuring that the entire surface of the plate is at the ideal distance to the nozzle.

We advise the operator to level the plate regularly. This is crucial for the first layer of the printed object to have optimal adhesion to the printing plate and to ensure that the print is successful.

- 1. Press the selection button once, rotate until Level Plate is selected and press it again.
- 2. If you notice that the tip of the nozzle has solid filament residue, the user must select **Yes** when the machine suggests cleaning the nozzle before starting the plate leveling. (For Cleaning the Nozzle see page 21.)
- 3. If you choose to clean the nozzle, wait while the Hot End reaches the required temperature. After the cleaning is complete press the button to start the plate leveling, but wait until the hotend reaches a safe handling temperature (<50°C) before proceeding to the next step.
- 4. Place a contact card or a paper with similar thickness between the nozzle and the plate. Adjust the plate screw adjacent to the nozzle until you feel a slight friction when sliding the card or paper between the two components. Press the button to continue.
- 5. Repeat the previous step for the second point.
- 6. Repeat the previous step for the third point.
- 7. In the last step, the nozzle moves to the center of the plate and the user must place the contact card between these components again and ensure that the friction when sliding the carton is as close as possible to that of the previous steps. Press the button to end this process.

Illustrated steps in the next page

*Note:* If you find that the friction of the card sliding between the nozzle and the plate is different in some location, the user must re-level the plate. *Extra:* To see the plate leveling process in video format go to the Blocks channel on YouTube or follow the direct link below.

Blocks Zero – Level Plate: https://youtu.be/u2eWSihBE6w

# 04 Operation

Main Screen	8 27/0° Z hei9ht: 0 mm ½100% SD% o: Blocks zero ready.
1	<pre>*Back</pre>
2	*Clean nozzle? * No Yes Cancel →
3	Levelin9 plate Press to start
4	Adjust first point & Press the button
5	Adjust second point & Press the button
6	Adjust third point & Press the button
7	Is it ok? Press to end
	Plate leveled!

#### 04.3 Doing a print

Open the software for preparing the 3D printing files and load the modeled object file. Make sure that the print characteristics are correct for the material to be used and the print quality you want. Also check that the machine that is selected is the Blocks Zero.

1. Save the gcode file to an SD card and insert it into the side slot next to the screen.

- 2. Press the on-screen button once, rotate until you select *Print from SD* and press it again.
- 3. Select the file you want to print with the thumb wheel and click the button.



**Note:** Print quality is directly related to the height difference between layers. The smaller the height difference, the higher the final quality, but also the print time.

*Note 2:* Wait while the Hot End reaches the chosen temperature for the material to be printed and always observe the start of the printing to see if the adhesion of the first layer of material to the plate is acceptable. To ensure a good adhesion make sure the plate is properly leveled. The first layer must not show any visible spaces between the lines (it means a excessive distance between nozzle and plate) nor should there be excess material that causes irregularities on the surface of the layer (means a insufficient distance between nozzle and plate).

#### 04.4 Change filament

Changing the filament is one of the most commonly performed procedures for operating a 3D printer. It will be necessary whenever the filament loaded in the machine is about to end or when you want to change the material or color from one print to another.

This procedure is similar to filament loading. (For Loading the Filament see page 14.)

You must only select the *Change filament* option in the main menu to remove the filament that is loaded. Once the machine has completed this procedure, the user must follow all the steps that appears on the screen regarding loading the new filament.

With Blocks Zero you can still change filament color during printing, but we recommend that you always keep the same type of material. Different materials have different printing characteristics, which can cause poor adhesion between the layers in the change zone or in some cases a nozzle clogging if they are combined in the same print.



#### 04.5 Setting up the printer directly on the screen

The Blocks Zero printer gives the user the option of controlling various parameters directly on the machine, either in standby mode or during printing.

- 1. *Auto home* Serves to reposition the print head at the origin of the spatial coordinates.
- 2. *Move axis* Allows the user to activate the motors and thus move the print head on different axes or the filament extruder. It is only possible to move the motor of the filament extruder if the Hot End is at a temperature which allows extrusion (>180°C).
- 3. *Disable steppers* this option allows to unblock the stepper motors when they are in standby.
- 4. *Temperature* here the operator can directly change some print parameters. Whether in standby mode, during printing or in maintenance and cleaning operations, the Hot End temperature and the cooling blower speed can be set or changed. You can also accelerate the cooldown of the Hot End.



### 05.1 Removing objects and cleaning the build plate

The roughness of the build plate on the Blocks Zero provides optimum adhesion. It is not necessary to add glues, lacquers or other similar products, just ensure that the plate is leveled and at an ideal distance from the nozzle. To remove the printed objects you can bend the plate slightly or use a spatula or x-acto. It is advisable to clean the filament residues on the plate between prints. To clean it you can use water or alcohol and can also resort to a spatula or x-acto if necessary.

### 05.2 Cleaning the Nozzle

After several prints it is normal for the nozzle to show some dirt due to the accumulation of plastic debris. To clean it it is necessary to set the nozzle temperature to 220°C. After reaching this temperature, the operator can use a dry cloth or cleaning paper to remove the dirt.

#### 05.3 Firmware updates

Go to the product page on the internet where you can see the latest firmware version available. If the version on your machine is older, you must download the HEX file and if you do not have the Cura software installed, you must do so. To upgrade the firmware, you need to connect the printer to a computer with the USB cable provided with the Blocks zero. Then execute Cura and select the *Settings* » *Printer* » *Manage Printers* menu and then select the right machine and click *Upgrade firmware* » *Upload custom firmware*. Select the downloaded HEX file, wait for the upload and press *OK*.

#### 05.4 Rod lubrication

To lubricate polished rods, the operator must place two to three drops of machine oil on each rod. To lubricate the threaded rod that causes the print head to move vertically, a little grease must be applied.

#### 05.5 Belt tensioning

Over time the belts may lose some tension. To adjust the tension, just adjust the two movable pulleys, one for the printing platform and one for the print head. The operator must also ensure that these are aligned between the pinions and the pulleys. *(To learn more about belt tensioning, see page 65 of the TIPS section of the Blocks Zero assembly guide.)* 

#### 05.6 Cleaning and maintenance of the extruder

Throughout the use, the extruder will accumulate filament residues that must be cleaned to ensure optimum traction of the pinion. To clean the pinion the operator must ensure there is no filament loaded in the machine. Then unscrew and remove the two screws holding the springs.

Then, with a brush or sharp object, you should clean any plastic debris on the extruder pinion and the bearing. To facilitate this process you can completely remove the pinion from the motor shaft by unscrewing the respective screw. When re-assembling, ensure that the pinion teeth are aligned with the holes where the filament passes through. (*To learn more about how to align the pinion teeth, see page 65 of the TIPS section of the Blocks Zero assembly guide.*)

Pay attention to the compression distance of the springs, it will be important when they are replaced since the tension must be approximately the same. This is important to ensure the necessary force between the pinion and the filament is ideal and no slippage occurs.

#### 05.7 Nozzle clearing

Nozzle clogging can occur due to several factors. From contamination with solid particles, the use of inadequate printing parameters, or even excessive proximity between the plate and the nozzle may be responsible for the nozzle clogging.

To perform this operation follow the following steps in the order described:

- 1. With the machine turned on but not printing, select *Control* and then *Temperature*. Put the nozzle at 220°C and wait until the temperature stabilizes.
- 2. In the menu select *Control* and click *Disable steppers* to disable the motors.
- 3. Then press down the plastic part of the fitting and at the same time pull the PTFE tube in the op posite direction. (*To learn more about disconnecting the PTFE tube, see page 66 of the TIPS section of the Blocks Zero assembly guide.*)
- 4. Then, by gradually increasing the force, push the filament manually near the hot end in the direc tion of the nozzle. When you have already pushed at least 3 to 5 cm of filament, pull it back. Cut the tip of the filament you just pulled from the hot end.
- 5. Completely remove the filament from the machine by pulling it at the extruder entrance and at the same time relieving the tension of the extruder hinge.
- 6. Unscrew and remove the fitting from the hot end.
- 7. Take a piece of PLA with at least 30 cm and repeat step 4 until the plastic exit through the nozzle is normalized. The plastic outlet should be linear and should not curl.
- 8. Put back the hot end fitting by tightening it with your hand only and insert the PTFE tube. Make sure that it reaches the heatbreaker (about 5 cm below the top of the fitting).
- 9. Load the filament in the machine as described before and make a test print to check that the nozzle has become unobstructed.

If you did not succeed repeat all the steps above. If you still do not get good results contact our customer support.

Problem	Possible causes	Solutions
Filament does not flow	Nozzle Clogging	Unclog the nozzle
	Inappropriate print parameters	Configuring the Template Preparation Software with the Print Profiles Precon- figured by Blocks
	Filament slips in the extruder	Adjusting the spring tension of the extruder
		Cleaning the extruder
	Filament not loaded	Load filament
Print lifts from the build plate	Build plate far way from the nozzle	Level the plate
	Poor adherence of the object to the plate	Clean the plate and apply an adhesive (lacquer, glue or kapton/bluetape)
Difficulty in removing the object from the build plate	Build plate very near to the nozzle	Level the plate
Non uniform horizontal lines on the printed object	Vertical axis coupling	Place a piece of sponge inside the tube between the motor and the threaded rod
	Threaded rod	Lubricate with grease paste
	Vertical axis bearings	Lubricate with machine oil
	Inconsistent extrusion	Test with a proved quality filament
		Perform a maintenance procedure on the extruder
	Temperature variation	Check that are no temperature variations during the print
Plastic gaps on the object	Nozzle Clogging	Unclog the nozzle
	Extruder is not feeding well	Adjust the springs tension
		Clean the pinion
		Align the pinion with the filament
Plastic strings on the object	Print blower	Ensure that this part is working during printing
	Extrusion problems	Perform a maintenance procedure on the extruder
	Nozzle Clogging	Unclog the nozzle
	Bad quality filament	Try using a quality filament recom- mended by Blocks

# English

### Português

03-24

27-48

#### Limitação de Responsabilidade

Por favor leia o manual de utilizador e restante documentação que acompanha o produto Blocks. Se não o fizer, o utilizador está a correr o risco de danificar irreversivelmente o equipamento podendo mesmo conduzir a acidentes e ferimentos. O utilizador deve certificar-se ainda que qualquer pessoa que opere o equipamento está apta para o fazer, e compreende todos os conteúdos descritos no manual de utilizador.

O produto "Blocks zero" consiste num kit de montagem de uma impressora 3D. Para a assemblagem do kit, o utilizador deve seguir o manual de montagem rigorosamente. Este equipamento electro-mecânico destina-se à criação de peças ou modelos modelados digitalmente, através da deposição de termoplásticos fundidos. Apesar da qualidade que acreditamos ter atingido com esta máquina, a qualificação dos trabalhos realizados neste equipamento para um objectivo específico são da responsabilidade do utilizador.

As indicações presentes tanto neste manual do utilizador como no manual de montagem decorrem da nossa experiência e também da pesquisa de fontes que consideramos fiáveis, mas se alguma dúvida surgir aconselhamos que contacte directamente a Blocks ou um seu revendedor.

Este equipamento foi testado e respeita as normas em vigor relativamente à marcação CE, à recolha de resíduos de equipamentos eléctricos e electrónicos, e à recolha de embalagens recicláveis.



01	Segurança		30
02	Introdução		31
03	Instalação		35
		Desempacotamento	35
		Instalação e Configuração	35
04	Funcionamento		38
		Carregar o Filamento	38
		Nivelamento do Prato	40
		Fazer uma impressão	42
		Mudar o filamento	43
		Configuração da impressora directamente no ecrã	44
05	Manutenção		45
		Remoção de objectos e limpeza do prato de impressão	45
		Limpeza do nozzle	45
		Actualização de firmware	45
		Lubrificação de varões	45
		Tensão das correias	45
		Limpeza e manutenção do extrusor	46
		Desentupimento do nozzle	47

06 Resolução de Problemas

48

# 01 Segurança

#### Segurança

- 1. A Blocks zero deve ser sempre utilizada com a fonte de alimentação fornecida com a impressora.
- 2. Nunca utilizar cabos de alimentação danificados.
- 3. A Blocks zero tem componentes móveis que podem causar ferimentos se forem manuseados enquanto a impressora estiver em funcionamento.
- 4. O nozzle na Blocks zero funciona a temperaturas elevadas, por isso nunca deve ser tocado no processo de aquecimento, arrefecimento ou enquanto a máquina estiver a imprimir.
- 5. Nunca aceder à zona da eletrónica enquanto a máquina estiver com a fonte de alimentação conectada.
- 6. Não utilizar a impressora em ambientes explosivos ou perto de químicos que possam reagir a temperaturas elevadas ou descagas elétricas.
- 7. Não deixar líquidos perto da impressora.
- 8. O processo de impressão deve sempre ser supervisionado.
- 9. A impressora deve ser instalada numa zona com boa ventilação, pois durante o processo de impressão podem ser libertados vapores nocivos para a saúde. As recomendações do fabricante do material devem ser sempre respeitadas.
- 10. Não instalar a impressora em contacto directo com a radiação solar nem a deixe em ambientes que possam exceder a temperatura recomendada de operação pois pode ocorrer a deformação de alguma peça impressa e provocar danos no equipamento.
- 11. Preste atenção aos seguintes símbolos:



Este símbolo indica a presença de peças móveis no interior da máquina.

Este símbolo indica a presença de partes com temperaturas elevadas.

### Ilustração Blocks zero



1	Bowden	Onde passa a cablagem e o tubo PTFE que alimenta o hot end com filamento.
2	Slot para cartão SD	Sítio para inserir o cartão SD com o ficheiro a imprimir em formato gcode.
3	Ecrã LCD	Onde se pode ver a informação relativa ao estado da máquina e impressão.
4	Botão de Selecção	Permite a navegação e selecção nos menus visíveis no ecrã LCD.
5	Extrusor	Conjunto de componentes que impõe a força necessária para o filamento se deslocar no sistema.
6	Hot End (Cabeça de impressão)	Conjunto de componentes que permitem a fusão, deposição e a solidificação do filamento.
7	Blower da Impressão	Ventoinha responsável pelo arrefecimento e solidificação do plástico à saída do nozzle.
8	Plataforma de Impressão	Conjunto de componentes onde se inclui o prato que serve de base ás impressões.

#### Ilustração do extrusor



### Ilustração do Hotend



Propriedades	Tecnologia	Fabricação por filamento fundido	
	Volume de Impressão	120 x 140 x 120 mm	
	Diâmetro do Material	1,75 mm	
	Resolução da camada	Nozzle 0,4 mm: 50-300 mícrons	
	Velocidade de deslocação	150-200 mm/s	
	Plataforma de impressão	Prato de acrílico	
	Materiais de Impressão	PLA, Filamentos de madeira e metal, Flex, PETG	
	Diâmetro do nozzle	0,4 mm	
	Temperatura do Hot End	180–275°C	
	Tempo de aquecimento do Hot End	< 2 min	
	Armazenamento do material	Suporte de bobina de filamento	
	Conectividade	Cartão SD, USB	
	Nivelamento da plataforma de impressão	Manual - assistida pelo firmware	
Dimensões	Dimensões externas da impressora (incluindo tubo Bowden e suporte de bobinas)	24x30x40cm	
	Peso	4,8 Kg	
	Dimensões da embalagem	23x32x18cm	
	Requisitos de energia	Entrada AC 100-240V, 1,2A, 50/60Hz Saída DC 12V, 8A	
Condições Ambiente	Condições de ambiente para impressão	15 - 30 °C, 10 - 90%	
	Condições armazenamento impressora	5 - 35 °C	
Programas	Firmware	Firmware baseado em Marlin	
	Slicer recomendado	Cura	
	Sistemas Operativos	Windows, Mac, Linux	
	Tipo de ficheiros para slicer	STL, OBJ	

#### 03.1 Instalação

Ao receber a impressora Blocks zero deve certificar-se que abre a caixa de cartão pelo lado correcto, identificado com o respectivo autocolante. Ao faze-lo desta maneira garante que todos os componentes do kit estão acessíveis pela ordem correcta, evitando assim misturar ou confundir os diversos componentes.

#### 03.2 Desempacotamento

- 1. Retirar a película de revestimento e a manga impressa.
- 2. Abrir a caixa de cartão pelo lado correcto assinalado com um autocolante.
- 3. Retirar cuidadosamente os componentes que se encontram no topo, a toolbox, os varões polidos do eixo vertical e os paineis de acrílico. Ter especial atenção a retirar os paineis de acrílico pois estes são frágeis.
- 4. Seguir todos os passos de montagem da máquina pela ordem correcta como descrito no manual de montagem.
- 5. Durante o processo de montagem se verificar a ausência de algum componente ou que um destes se encontre danificado contacte imediatamente o revendedor onde adquiriu o equipamento.

#### 03.3 Instalação e configuração

A Blocks zero segue já com o firmware instalado, mas o mesmo vai sofrendo actualizações por isso aconselhamos o utilizador a visitar a página do equipamento no nosso website e comparar a versão instalada (pode ser vista no ecrã ao ligar a impressora) com a versão mais recente disponível. Após ter assemblado o kit Blocks zero seguindo o manual de montagem será necessário ir ao nosso website à página da Blocks zero e fazer o download do software de preparação dos ficheiros de impressão 3D e também o download dos perfis de impressão pré configurados para os diferentes materiais e resoluções.

Para configurar o software de preparação recomendado siga os seguintes passos:

#### 1. Adicionar um equipamento:

- 1.1. Antes de mais, certifique-se que tem a versão correta do software Cura intalada (v3.3.1)
- 1.2. Abra o software e seleccione *Settings* » *Printer* » *Add Printer*
- 1.3. Seleccione *Custom* » *Custom FDM printer*
- 1.4. Escreva o nome do equipamento (ex: Blocks zero) e pressione Next
- 1.5. Preencha os dados necessários para a configuração da impressora e extrusor como representado nas imagens seguintes.
   Pode encontrar os textos para os campos Start e End G-Code na página 37.

### Separador Configuração Impressora

Machine Settings	G Machine Settings				
Machine Settings					
Printer Extruder 1					
Printer Settings		Printhead Settings			
X (Width)	120 mm	X min	30 mm		
Y (Depth)	140 mm	Ymin	30 mm		
Z (Height)	120 mm	X max	30 mm		
Build plate shape	Rectangular 👻	Y max	30 mm		
Origin at center		Gantry height	8 mm		
G-code flavor	Marlin 🔻	Number of Extruders	1 •		
Start G-code		End G-code			
<pre>;Sliced at: {day} {date} {time} ;Basic settings: Layer height: {layer_r} ;Print time: {print_time} ;Filament used: {filament_amount}m {fil ;Filament cost: {filament_cost} ;M190 S{print_bed_temperature} ;Uncomme :M109 S{print temperature} ;Uncomment t &lt;</pre> ;End GCode M104 S0 ;extruder h M140 S0 ;heated bed G91 G1 Z+0.5 E-5 X-20 Y-20 F{travel_speed} G28 X0 Y0 >					
			Close		

### Separador Configuração Extrusor

G Machine Settings			×
Machine Setting	S		
Printer Extruder 1			
Nozzle Settings			
Nozzle size	0.4 mm		
Compatible material diam	1.75 mm		
Nozzle offset X	0 mm		
Nozzle offset Y	0  mm		
Extruder Start G-code		Extruder End G-code	
			Close

# 03 Instalação

Atenção: Copie e cole o seguinte texto nos respectivos campos referentes ao Start G-code e End G-code (mas apenas para o separador da impressora, e não para o separador do extrusor):

#### Start G-code:

;Sliced at: {day} {date} {time} ;Basic settings: Layer height: {layer\_height} Walls: {wall\_thickness} Fill: {fill\_density} ;Print time: {print\_time} ;Filament used: {filament\_amount}m {filament\_weight}g ;Filament cost: {filament\_cost} ;M190 S{print\_bed\_temperature} ;Uncomment to add your own bed temperature line ;M109 S{print\_temperature} ;Uncomment to add your own temperature line G21 ;metric values G90 ;absolute positioning M82 ;set extruder to absolute mode M107 ;start with the fan off G28 X0 Y0 ;move X/Y to min endstops G28 Z0 ;move Z to min endstops G1 Z15.0 F{travel\_speed} ;move the platform down 15mm G92 E0 ;zero the extruded length G1 F200 E3 ;extrude 3mm of feed stock G92 E0 ;zero the extruded length again G1 F{travel\_speed} ;Put printing message on LCD screen M117 Printing...

#### End G-code:

;End GCode
M104 S0 ;extruder heater off
M140 S0 ;heated bed heater off (if you have it)
G91 ;relative positioning
G1 E-1 F300 ;retract the filament a bit before lifting the nozzle, to release some of the pressure
G1 Z+0.5 E-5 X-20 Y-20 F{travel\_speed} ;move Z up a bit and retract filament even more
G28 X0 Y0 ;move X/Y to min endstops, so the head is out of the way
M84 ;steppers off
G90 ;absolute positioning
;{profile\_string}

#### 2. Configuração do perfl de impressão:

2.1. Descarregue para o seu computador os perfis de impressão da Blocks zero fornecidos pela Blocks.

- 2.2. Nos separadores superiores do software Cura seleccione: Settings » Profile » Manage Profiles
- 2.3. Clique no separador Import e seleccione os perfis desejados para importar para o software
- 2.4. Após isto poderá escolher o perfil correto para o material e qualidade escolhidos seleccionando *Activate* no mesmo menu ou indo a *Settings* » *Profile* e escolher o perfil desejado no momento.

### 04 Funcionamento

Começe por inserir a fonte de alimentação fornecida com o kit na respectiva ficha e na tomada. De seguida ligue a impressora no interruptor branco na parte de trás da máquina.

#### 04.1 Carregar o filamento

- 1. Pressione o botão do ecrã uma vez, rode até seleccionar *Filament* e volte a pressionar mais uma vez.
- 2. De seguida seleccione a opção Load e volte a primir o botão.
- 3. Aguarde enquanto o Hot End aquece até aos 220°C.
- Insira o filamento no extrusor, puxando a patilha, e garanta que o filamento está visível cerca de 5mm ao longo do tubo PTFE logo acima do extrusor. (Para saber mais sobre como inserir o filamento consulte a página 64 da secção TIPS do manual de montagem Blocks Zero.)
- 5. Aguarde enquanto o filamento é encaminhado ao logo do tubo de PTFE no Bowden.
- 6. Após o filamento começar a sair pelo nozzle, o operador pode escolher finalizar o processo carregando no botão ou aguardar que o processo termine automaticamente após trinta avisos sonoros.

Passos ilustrados na próxima página

*Nota:* Caso tenha ocorrido uma mudança de cor ou material do filamento, recomendamos que se deixe fazer este último passo até a máquina o terminar.

*Extra:* Para ver o processo de carregar o filamento em formato video dirija-se ao canal Blocks no YouTube ou siga o link directo abaixo.

Blocks Zero – Load Filament: https://youtu.be/Aa7Mt6X2byY

### 04 Funcionamento

Ecrã Inicial	8 27/0° Z hei9ht: 0 mm %100% SD% o: Blocks zero ready.	
1	<pre>*Back</pre>	
2	<pre>*Back *</pre>	
3	<pre>*Back</pre>	
4	Insert new filament and press button.	
5	Please wait. Loadin9 filament	
6	Wait until filament is pur9ed and and press button.	
	Filament loaded!	

#### 04.2 Nivelamento do prato

O nivelamento do prato é um dos processos mais importantes na impressão 3D. Ao certificar-se que o prato se encontra nivelado, o utilizador está a garantir que toda a superfície do mesmo está à distância ideal do nozzle.

Aconselhamos o operador a fazer o nivelamento do prato com regularidade. Isto é crucial para que a primeira camada do objecto impresso tenha uma optima adesão ao prato de impressão e garantir que a impressão se realize com sucesso.

- 1. Pressione o botão do ecrã uma vez, rode até seleccionar *Level Plate* e volte a pressionar mais uma vez.
- Caso repare que a ponta do nozzle se encontre com resíduos sólidos de filamento o utilizador deve seleccionar Yes quando a máquina sugerir fazer a limpeza do nozzle antes de iniciar o nivelamento do prato. (Para Limpeza do Nozzle consulte pág. 45.)
- 3. Caso escolha a opção de limpar o nozzle, aguarde enquanto o Hot End atinge a temperatura necessária para efectuar a limpeza. Após a limpeza estar concluída pressione o botão para iniciar o nivelamento do prato, mas espere até que o hotend atinja uma temperatura de manuseamento segura (<50°C) antes de passar para o próximo passo.</p>
- 4. Coloque um cartão de contacto ou papel de espessura semelhante entre o nozzle e o prato Ajuste o parafuso do prato adjacente ao nozzle até sentir um leve atrito ao fazer deslizar o cartão ou cartão entre os dois componentes. Pressione o botão para continuar.
- 5. Repita o passo anterior para o segundo ponto.
- 6. Repita o passo anterior para o terceiro ponto.
- 7. No último passo, o nozzle desloca-se para o centro do prato. O utilizador deve voltar a fazer o teste do cartão e ao deslizá-lo deve verificar um atrito semelhante ao dos três pontos ajustados anteriormente. Pressione o botão para finalizar este processo.

Passos ilustrados na próxima página

Nota: caso verique que o atrito do cartão a deslizar entre o nozzle e o prato é diferente nalguma localização, o utilizador deve fazer um novo nivelamento do prato de impressão. Extra: Para ver o processo de nivelamento do prato em formato video dirija-se ao canal Blocks no YouTube ou siga o link directo abaixo.

Blocks Zero – Level Plate: https://youtu.be/u2eWSihBE6w

### 04 Funcionamento

Ecrã Inicial	8 27/0° Z hei9ht: 0 mm %100% SD% o: Blocks zero ready.	
1	<pre>*Back</pre>	
2	<pre> PClean nozzle? No Yes Cancel </pre>	
3	Levelin9 plate Press to start	
4	Adjust first point & Press the button	
5	Adjust second point & Press the button	
6	Adjust third point & Press the button	
7	Is it ok? Press to end	
	Plate leveled!	

#### 04.3 Fazer uma impressão

Abra o software de preparação dos ficheiros de impressão 3D e carregue o ficheiro previamente modelado. Verifique se as características de impressão são as correctas para o material a ser utilizado e a qualidade de impressão pretendida. Verifique ainda se a máquina que está seleccionada é a Blocks Zero.

- 1. Guarde o ficheiro em formato gcode num cartão SD e insira-o na ranhura lateral junto ao ecrã.
- 2. Pressione o botão do ecrã uma vez, rode até seleccionar *Print from SD* e volte a pressionar mais uma vez.
- 3. Selecione com o botão rotativo o ficheiro que pretende imprimir e clique no botão.



**Nota:** A qualidade de impressão está directamente relacionada com a diferença de altura entre camadas (layer height). Quanto mais pequena for esta diferença de altura, maior será a qualidade final, mas também será superior o tempo de impressão.

**Nota 1**: aguarde enquanto o Hot End atinge a temperatura escolhida para o material a imprimir e observe sempre o ínicio da impressão de modo a verificar se a adesão da primeira camada de material ao prato está aceitável. Para garantir uma boa adesão certifique-se que o prato se encontra correctamente nivelado. A primeira camada não deve apresentar espaços visíveis entre as linhas (significa uma distância entre nozzle e prato excessiva) nem deve apresentar excesso de material que provoca irregularidades na superfície da camada (significa uma distância entre nozzle e prato insuficiente).

#### 04.4 Mudar o filamento

Mudar o filamento é um dos procedimentos mais efectuados na operação de uma impressora 3D. Irá ser necessário sempre que o filamento carregado na máquina estiver prestes a acabar ou quando pretender mudar de material ou cor de uma impressão para outra.

Este procedimento é efectuado de forma semelhante ao carregamento do filamento. (*Para Carregar o Filamento consulte pág. 38.*)

Deve selecionar apenas a opção *Change filament* no menu principal para retirar o filamento que se encontra carregado. Assim que a máquina tenha concluído este procedimento, o utilizador deve seguir todos os passos que aparecem no ecrã relativos ao carregamento do novo filamento.

Com a Blocks Zero pode ainda mudar de cor do filamento durante a impressão, mas recomendamos que mantenha sempre o mesmo o tipo de material. Materiais diferentes possuem diferentes características de impressão, o que pode causar uma má adesão entre as camadas na zona de mudança ou em certos casos um entupimento do nozzle se forem combinados na mesma impressão.



04 Funcionamento

#### 04.5 Configuração da impressora directamente no ecrã

A impressora Blocks Zero oferece ao utilizador a opção de controlar diversos parâmetros directamente no equipamento, seja em modo stand by, seja durante a impressão.

- 1. *Auto home* serve para efectuar o reposicionamento da cabeça de impressão na origem das coordenas espaciais.
- Move axis permite ao utilizador activar os motores e mover assim a cabeça de impressão nos diferentes eixos ou o filamento. Apenas é possível mover o motor do extrusor de filamento se o Hot End estiver a uma temperatura que permita a extrusão (>180°C).
- 3. *Disable steppers* esta opção permite desactivar o bloqueio dos motores passo a passo quando estes se encontram em stand by.
- 4. Temperature aqui o operador pode alterar directamente alguns parâmetros de impressão. Seja em stand by, durante uma impressão ou em operações de manutenção e limpeza, a temperatura do Hot End e a velocidade do Blower de arrefecimento podem ser estabelecidas ou alteradas. Pode ainda acelerar o arrefecimento (*Cooldown*) do Hot End.



#### 05.1 Remoção de objectos e limpeza do prato de impressão

O rugosidade do prato de impressão na Blocks zero proporciona uma óptima adesão. Não é necessário a adição de colas, lacas ou outros produtos semelhantes, basta garantir que o prato se encontra nivelado e a uma distância ideal do nozzle. Para remover os objectos impressos pode dobrar ligeiramente o prato ou usar uma espátula ou x-acto. Aconselhamos a limpar os resíduos de filamento no prato entre impressões. Para limpar pode usar água ou álcool e pode recorrer também a uma espátula ou x-acto caso seja necessário.

#### 05.2 Limpeza do Nozzle

Após várias impressões é normal o nozzle apresentar alguma sujidade devido à acumulação de restos de plástico. Para efectuar a limpeza é necessário colocar a temperatura do nozzle a 220°C. Após ter atingido esta temperatura, o operador pode utilizar um pano seco ou papel de limpeza para remover a sujidade.

#### 05.3 Actualização de firmware

Aceda à pagina do produto na internet onde pode ver qual a última versão disponível do firmware. Caso a versão que esteja na sua máquina seja anterior, deve fazer o dowload do ficheiro HEX e caso não tenha o software Cura instalado deve faze-lo também. Para actualizar o firmware é necessário conectar a impressora a um computador com o cabo USB fornecido com a Blocks Zero. De seguida execute o Cura e seleccione o menu *Settings » Printer » Manage Printers* e depois selecione a máquina correcta e clique *Upgrade firmware » Upload custom firmware*. Seleccione o ficheiro HEX transferido, espere pelo upload e pressione *OK*.

#### 05.4 Lubrificação dos varões

Para lubrificar os varões polidos, o operador deve colocar duas a três gotas de óleo de máquina em cada varão. Para lubrificar o varão roscado que faz mover a cabeça de impressão deve ser aplicada um pouco de massa consistente.

#### 05.5 Tensão das correias

Com o tempo as correias podem perder alguma tensão. Para ajustar a tensão basta apenas regular as duas polias móveis, uma para a plataforma de impressão e outra para a cabeça de impressão. O operador deve também garantir que estas estão alinhadas entre os pinhões e as polias. (*Para saber mais sobre como tensionar as correias consulte a página 65 da secção TIPS do manual de montagem Blocks Zero.*)

#### 05.6 Limpeza e manutenção do extrusor

Ao longo da utilização o extrusor irá acumular resíduos de filamento que devem ser limpos para garantir uma óptima tracção do pinhão. Para limpar o pinhão o operador deve garantir não há filamento carregado na máquina. Depois deve desapertar e retirar os dois parafusos que seguram as molas.

De seguida, com uma escova ou um objecto afiado, deve limpar todos os resíduos de plástico que se encontrem no pinhão do extrusor e no rolamento. Para facilitar esta limpeza pode remover completamente o pinhão do veio do motor desapertando o respectivo parafuso. Caso o decida fazer, quando efectuar a montagem, deve garantir o alinhamento dos dentes do pinhão com os furos de passagem do filamento. (*Para saber mais sobre como alinhar os dentes do pinhão consulte a página 65 da secção TIPS do manual de montagem Blocks Zero.*)

Tenha ainda atenção à distância de compressão das molas, vai ser importante para quando estas forem recolocadas, pois a tensão deve ser aproximadamente a mesma. Isto é importante para garantir a força necessária entre o rolamento e o filamento para a tracção do pinhão ser ideal e não ocorrer derrapagem.

#### 05.7 Desentupimento do nozzle

O entupimento do nozzle pode ocorrer devido a diversos factores. Desde a contaminação com partículas sólidas, à utilização de parâmetros de impressão inadequados, ou até a demasiada proximidade do prato de impressão ao nozzle podem ser responsáveis pelo entupimento do nozzle.

Para realizar esta operação siga os seguintes passos pela ordem descrita:

- 1. Com a máquina ligada mas sem estar a imprimir, seleccione no menu a opção *Control* e depois *Temperature*. Ponha o nozzle a 220°C e aguarde até a temperatura estabilizar.
- 2. No menu seleccione *Control* e faça *Disable steppers* para desactivar os motores.
- 3. De seguida deve pressionar para baixo a parte plástica do fitting e ao mesmo tempo puxar o tubo PTFE na direcção oposta. (*Para saber mais sobre como desconectar o tubo de PTFE consulte a página 66 da secção TIPS do manual de montagem Blocks Zero.*)
- 4. Agora aumentando gradualmente a força, empurre o filamento manualmente junto ao hot end na direcção do nozzle. Quando já tiver empurrado pelo menos 3 a 5 cm de filamento puxe-o para trás. Corte a ponta do filamento que acabou de puxar do hot end.
- 5. Retire completamente o filamento da máquina puxando-o junto ao rolo e ao mesmo tempo aliviando a tensão da patilha do extrusor.
- 6. Desenrosque e retire o fitting do hot end.
- 7. Pegue num pedaço de PLA com pelo menos 30 cm e repita o passo 4 até que a saída do plástico pelo nozzle esteja normalizada. A saída do plástico deve ser linear e não deve enrolar.
- 8. Recoloque o fitting do hot end apertando-o apenas com a mão e insira o tubo PTFE garantindo que este chega até ao heatbreaker (cerca de 5 cm abaixo do topo do fitting).
- 9. Carregue o filamento na máquina como descrito anteriormente e faça uma impressão de teste para verificar se o nozzle ficou desobstruído.

Caso não tenha tido sucesso volte a repetir todos os passos. Se ainda assim não obtiver bons resultados contacte o apoio ao cliente.

# 06 Resolução de Problemas

Problema	Possíveis causas	Soluções
Não sai filamento	Entupimento do nozzle	Desentupir o nozzle
	Parâmetros de impressão inadequados	Garantir que está a usar os perfis de impressão disponibilizados pela Blocks
	Filamento escorrega no extrusor	Ajustar tensão das molas do extrusor
		Efectuar limpeza do extrusor
	Filamento não carregado	Carregar filamento
Impressão descola do prato	Prato muito distante do nozzle	Efectuar o nivelamento do prato
	Pouca aderência do objecto no prato	Limpar o prato e aplicar um aderente (laca, cola ou kapton/bluetape)
Dificuldade em retirar o objecto do prato	Prato muito aproximado do nozzle	Efectuar o nivelamento do prato
Linhas horizontais descrepantes no objecto impresso	Coupling do eixo vertical	Colocar um pedaço de esponja dentro do tubo, entre o motor e o varão roscado
	Varão roscado	Lubrificar com massa consistente
	Rolamentos do eixo vertical	Lubrificar com óleo de máquina
	Extrusão inconsistente	Testar um filamento de qualidade comprovada
		Efectuar a manutenção do extrusor
	Variação de temperatura	Verificar que não ocorrem oscilações de temperatura durante a impressão
Falhas de plástico no objecto	Entupimento do nozzle	Desentupir o nozzle
	Extrusor não está a extrudir bem	Ajustar a tensão das molas
		Limpar o pinhão
		Alinhar o pinhão com o filamento
Fios de plástico colados ao objecto	Blower da impressão	Garantir que este está a funcionar durante a impressão
	Problemas de extrusão	Efectuar a manutenção do extrusor
	Entupimento do nozzle	Desentupir o nozzle
	Má qualidade de filamento	Experimente utilizar um filamento de qualidade recomendado pela Blocks

www.blockstec.com