


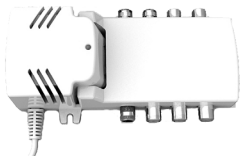




REFERENCIA	RÉFÉRENCE	ARTICOLO	REFERÊNCIA	REFERENCE		MD A
Código	Code	Codice	Codigo	Code		121001
Entradas	Entrées	Ingressi	Entradas	Inputs	N°	2 x AUDIO + VIDEO
Regulación audio	Réglage audio	Regolazione audio	Regulação audio	Audio regulation	dB	0-14
Salidas RF	Sorties RF	Uscite RF	Sáidas RF	RF Outputs	N°	1
Frecuencias	Bande passante	Frequenze	Frequências	Frequency Range	MHz	47-862
Standards	Standards	Standards	Standards	Standards		B/G/D/K/H/I/L/M/N
Regulación de ganancia	Réglage de gain	Regolazione di guadagno	Regulação de ganho	Gain regulation	dB	15
Nivel de salida	Niveau de sortie	Livello d'uscita	Nível de saída	Output level	dBµV	90
Pérdidas banda de paso	Pertes d'insertion	Attenuazione de passaggio	Perdas de passagem	Insertion loss	MHz/ dB	47-862 / 2 862-2150 / 4
Alimentación	Secteur	Alimentazione	Alimentação	Mains voltage	Vac	230 +/-10%
Consumo	Consommation	Consumo di corrente	Consumo de corrente	Current consumption	W	2,5

1.	2.	3.	4.	5.
				
<p>-Fijar el modulador a la pared utilizando los tacos y tornillos suministrados y realizar las conexiones</p> <p>-Fixer le modulateur au mur. Se servir de la cheville et la vis fournies. Faire les connexions</p> <p>-Fissare il modulatore al muro con i tasselli e le viti fornite in dotazione. Effettuare i collegamenti</p> <p>-Fixar o modulador para a parede usando as buchas e parafusos fornecidos. Fazer as conexões</p> <p>-Fix the modulator to the wall using the plugs and screws supplied. Make connections</p>	<p>-Conectar el modulador a la corriente. El led deberá encenderse</p> <p>-Raccordez le modulateur au courant électrique. La led doit s'allumer</p> <p>-Collegare il modulatore alla corrente. Il led si dovrà illuminare</p> <p>-Ligue o modulador para o fornecimento de energia. O LED deve acender</p> <p>-Connect the modulator to the mains. The LED should light on</p>	<p>-Programar el canal deseado, utilizando los botones + / -. Canal de salida programado 21 / PAL G.</p> <p>-Programmer le canal désiré en utilisant les touches + / -. Canal de sortie programmée 21 / PAL G</p> <p>-Programmare il canale desiderato con i tasti + / -. Canale d'uscita programmato 21 / PAL G</p> <p>-Programar o canal selecionado usando os botões + / -. Canal de saída programado 21 / PAL G</p> <p>-Select the desired channel using the buttons + / -. Programmed output channel 21 / PAL G.</p>	<p>-Para cambiar el standard y otros parámetros *, mantenga presionados los botones + / -. Seleccionar las opciones según indican las tablas.</p> <p>-Pour modifier la norme et d'autres paramètres *, appuyez sur les touches + / -. Sélectionnez les options, comme indiqué dans les tableaux.</p> <p>-Per modificare lo standard ed altri parametri *, premere insieme i tasti + / -. Selezionare le opzioni secondo le tabelle.</p> <p>-Para alterar o standard e outros parâmetros *, mantenha pressionados os botões + / -. Selecione as opções, como mostrado nas Tabelas</p> <p>-To change the standard and other parameters *, press the buttons + / -. Select the options as shown in tables.</p>	<p>-Regular la ganancia necesaria</p> <p>-Régler le gain nécessaire</p> <p>-Regolare il guadagno</p> <p>-Ajuste o ganho necessário</p> <p>-Adjust the necessary gain</p>

*

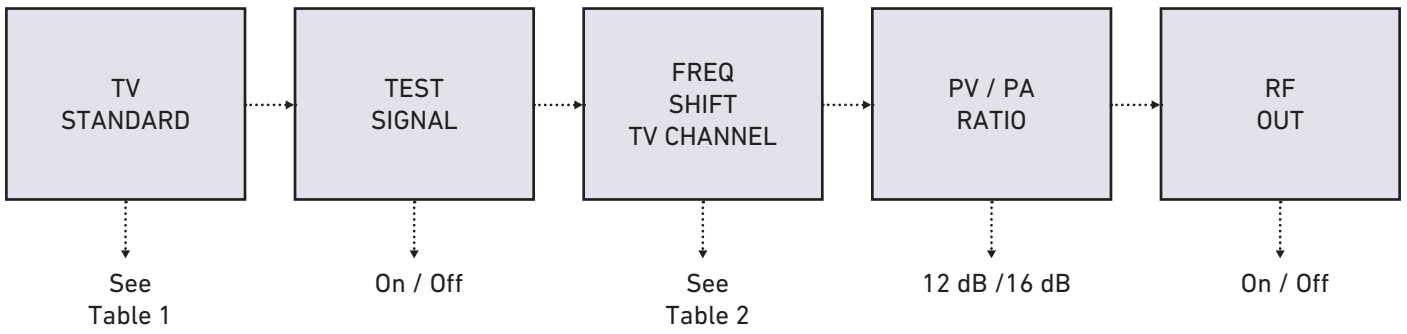


(1)

System	Display
PAL B	b5
PAL D	d6
PAL I	'6
B / Australia	A5
L / France	L6
M / Japan	04

(2)

Displayed	Shift (MHz)
0	0
1	+0.25
2	+0.5
3	+0.75
4	+1.0
5	+1.25
6	+1.5
7	+1.75
8	+2.00
9	+2.25
-9	-2.25
-8	-2.00
-7	-1.75
-6	-1.5
-5	-1.25
-4	-1.0
-3	-0.75
-2	-0.5
-1	-0.25

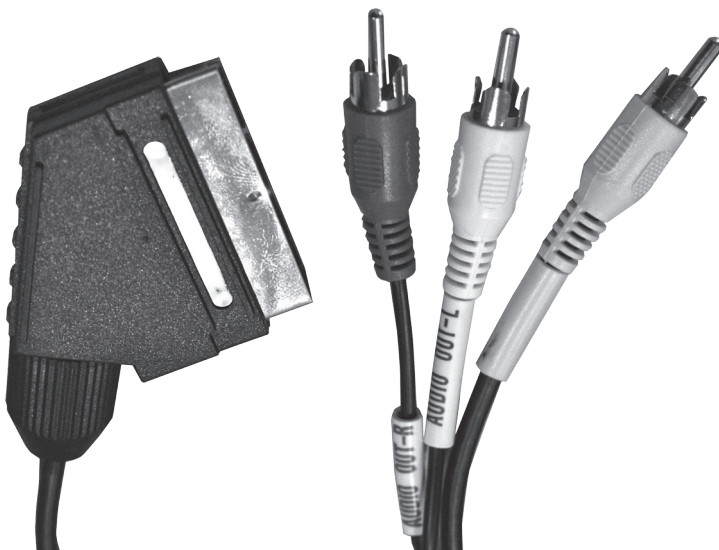

Accesorio opcional Ref: CSR
 Accessoire en option Ref: CSR
 Accessorio opzionale Art: CSR
 Acessório opcional Ref: CSR
 Optional accessory Ref: CSR