

AKASO

Brave 8

A C T I O N C A M E R A




USER MANUAL

V77-V1.0


Content

1. Product Overview	01	>>
2. Packing List	02	>>
3. Getting Started	03	>>
(1) Powering on and off	03	
(2) Preview Screen	03	
(3) Using Micro SD Card	03	
(4) Quick Operation Guide	04	
(5) Quickly Switching Capture Modes	05	
(6) Using the Shutter Button	06	
(7) Using the Device's Wifi	06	
(8) Switching Screens	07	
4. Recording Video	08	>>
(1) Video Modes	08	
(2) Video Settings	09	
5. Taking Photos	10	>>
(1) Photo Modes	10	
(2) Photo Settings	10	
6. Using the AKASO App	11	>>
(1) Downloading the AKASO App	11	
(2) Connecting to the AKASO App	11	
(3) Features of the AKASO App	12	
7. Remote Control	13	>>
8. Using Voice Control	15	>>
9. Mounting Your Brave 8 Action Camera	16	>>
10. Specifications	18	>>
11. Contact Us	19	>>


1. Product Overview

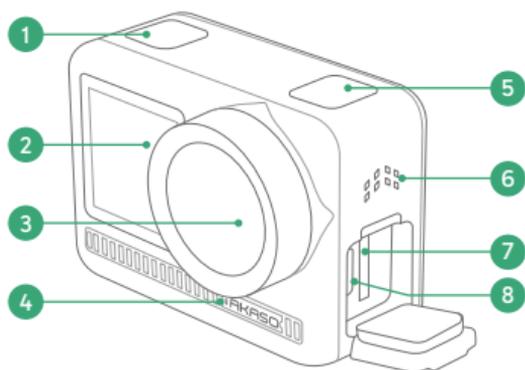

- 1 Shutter / OK Button
- 2 Front Screen
- 3 Lens
- 4 Working Indicator
- 5 Power Button
- 6 Speaker
- 7 Micro SD Card Slot
- 8 USB / External Mic Port

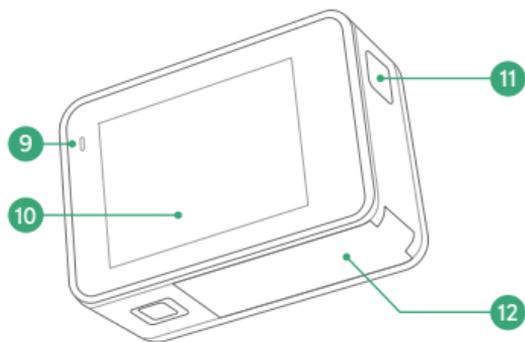

- 9 Charging/Wifi Indicator
- 10 Touch Screen
- 11 Mode Button
- 12 Battery Cover

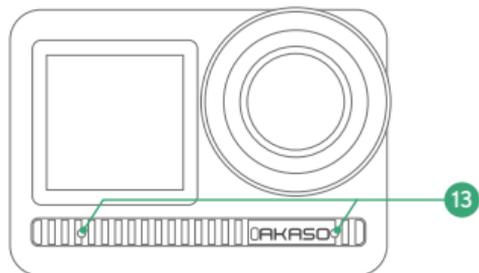

- 13 Microphone



2. Packing List



Brave 8
x 1



Camera Frame
x 1



Battery Charger
x 1



Battery
x 2



USB Cable
x 1



Remote Control
x 1



Remote Control
Strap x 1



Spanner
x 1



Helmet Mount
x 1



Helmet Mount 2
x 1



Buckle Mount
x 1



J-Hook Mount
x 1



E Mount
x 1



C Mount
x 1



D Mount
x 1



F Mount
x 1



A Mount
x 1



H Mount
x 1



Bandage
x 4



Tether
x 5



Lens Cloth
x 1



Double-Sided
Adhesive Tape x 2



Quick Start Guide
x 1




3. Getting Started

(1) Powering on and off

Powering on: While the camera is off, press and hold the Power button to turn it on.

Powering off: While the camera is on, press and hold the Power button to turn it off.

(2) Preview Screen

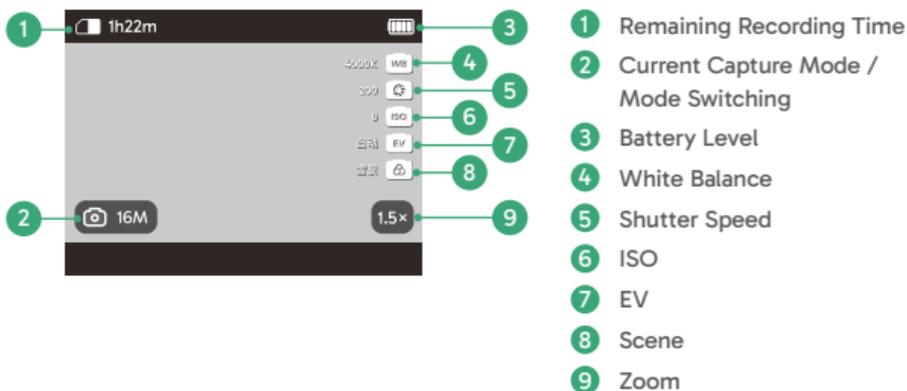

(3) Using Micro SD Card

To capture photos and videos, you'll need a memory card (sold separately). We recommend branded memory cards that meet the following criteria:

- 1 Rated Class V30, UHS-3, or higher
- 2 Capacity up to 512 GB (FAT32)

Tips:

- 1 Format the memory card in the camera before using it to ensure compatibility.
- 2 Memory cards larger than the specified maximum capacity can cause issues like non-recognition or even camera malfunctions like unresponsiveness or firmware failure.




- ③ Regularly reformat your memory card for optimal performance. Remember, reformatting erases all data, so transfer your photos and videos before reformatting. With FAT32, the card will stop recording and create a new file if the file size of a recording reaches 4GB.

(4) Quick Operation Guide

Swipe right to access the album.




Swipe left to access specification settings.

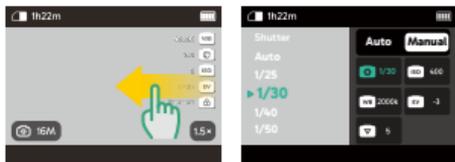

Swipe up to access capture settings.





Swipe down to access the shortcut menu.

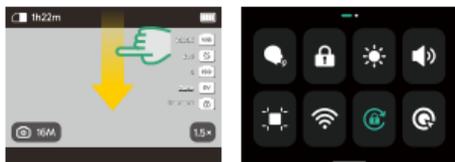



(5) Quickly Switching Capture Modes

There are three ways to quickly switch modes.



Method 1: When on the preview screen, swipe from the center to access the mode menu, then swipe left or right to select a desired mode. Once selected, swipe up to return to the preview screen.

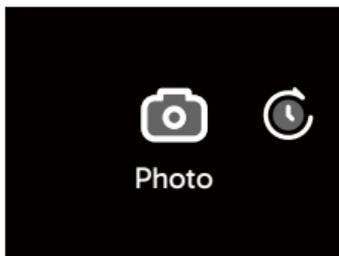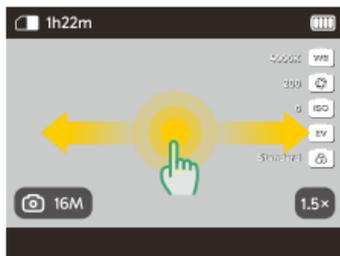

Method 2: When on the preview screen, tap the current mode icon in the bottom left corner to access the mode menu, then swipe left or right to select a desired mode. Once selected, swipe up to return to the preview screen.

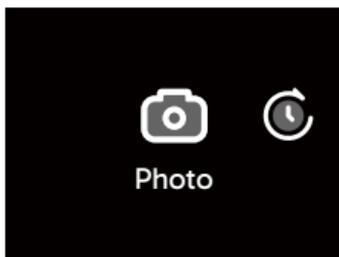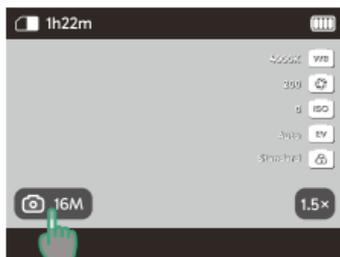

Method 3: When on the preview screen, press the Mode button to access the mode menu, then swipe left or right to select a desired mode. Once selected, swipe up to return to the preview screen.

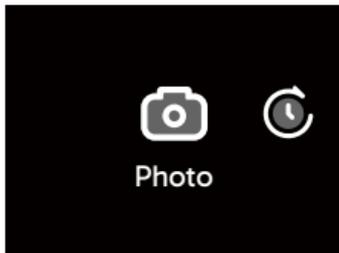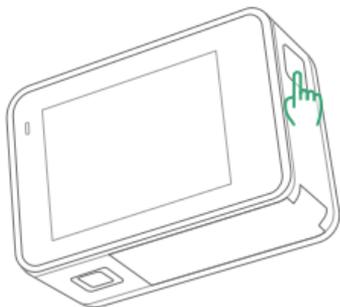


(6) Using the Shutter Button

When in Photo or Video mode, press the Shutter button to capture photos or start video recording. To stop recording in Video Mode, press the Shutter button again.

(7) Using the Device's Wifi

The built-in Wifi connects the Brave 8 camera to the AKASO app for camera control and file download.

To use the camera's Wifi, tap the Wifi icon in the quick menu to enable Wifi. The icon turns green when Wifi is enabled, and turns gray when disabled.

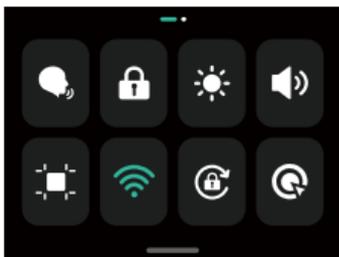

To view the Wifi name and password, simply tap Wireless Connection.

Tip: You can't operate the camera when in Wifi mode. If the camera's Wifi is activated but not linked to the app within 5 minutes, it will auto-disable. Re-activate the camera's Wifi to reconnect to the app. For more information about app connection, please consult this section: [Using the AKASO App](#).

(8) Switching Screens

When on the preview screen, press and hold the *Mode* button to switch between front and touch screens.

Note: Touch operation is not supported on the front screen.

4. Recording Video

(1) Video Modes

The Brave 8 action camera boasts four video modes: Video, Time Lapse Video, Hyperlapse, and Slow Motion.

To switch video modes, enter the mode menu, then swipe left or right to select a desired mode. Once selected, swipe up to return to the preview screen.

Video Mode

When in this mode, press the Shutter button to record normal video at the preset resolution and frame rate. The camera is turned on in Video mode by default.

Time Lapse Video Mode

Time Lapse Video condenses longer events into brief clips by capturing frames at designated intervals. For instance, recording a 20-minute span at a 2-second interval produces a 20-second fast-motion video, whereas a 10-second interval results in a 4-second fast-motion clip.

Hyperlapse Mode

The Hyperlapse mode enables the camera to produce steady and fluid fast-motion videos, seemingly faster than real-time. This mode is perfect for capturing dynamic scenes.

Slow Motion Mode

The Slow Motion mode allows the camera to capture footage at your chosen resolution and speed ratio, but it saves the video at a playback rate of 30 fps. This ensures that on playback, the video displays in a captivating slow-motion effect.



(2) Video Settings

Customize your settings for an engaging video experience.

Modes	Settings	Options	Note
Video Mode	Video Resolution	INTSC: 4K60 16:9 (default)/4K30 16:9/4K30 4:3/ 2.7K120 16:9/2.7K60 16:9/2.7K60 4:3/2.7K30 16:9/ 2.7K30 4:3/ 1080P240/1080P120/1080P60/1080P30 PAL: 4K50 16:9(default)/4K25 16:9/4K25 4:3/ 2.7K100 16:9/2.7K100 4:3/2.7K50 16:9/2.7K50 4:3/ 2.7K25 16:9/2.7K25 4:3/ 1080P200/1080P100/1080P75/1080P25	The video resolution varies based on the video format.
	Fragment	Off (default)/3m/5m/10m/30m/1h/2h/ 5h/10h	
	Audio Recording	Stereo (default)/HM	
	Microphone	On (default)/Off	
Time Lapse Video Mode	Video Resolution	8K 16: 9/4: 3, 4K 16: 9 (default)/4:3, 2.7K 16: 9/4: 3, 1080P 16: 9/4: 3	
	Interval	2s/5s (default)/10s/30s/1m/2m/5m/ 10m/30m/60m	
Hyperlapse Mode	Video Resolution	4K 16: 9 (default) /4:3, 2.7K 16: 9/4: 3, 1080P 16: 9/4: 3	
	Hyperlapse Speed	2x/5x (default)/10x/15x/30x	
Slow Motion Mode	Video Resolution	4K = > 2x 2.7K = > 4x/2x 1080P (default) = > 8x/4x/2x	
	Slow Motion Speed	2x/4x (default)/8x	

5. Taking Photos

(1) Photo Modes

This camera boasts two photo modes: Photo and Time Lapse Photo.

Photo Mode

When in this mode, press the Shutter button to take a photo at the preset resolution and frame rate.

Time Lapse Photo Mode

In this mode, the camera automatically starts the preset countdown to take a photo when the shutter button is pressed. The process repeats continuously until the preset duration ends or you press the shutter button again.

(2) Photo Settings

Fine-tune your settings to capture the perfect shot.

Photo Mode	Resolution: 48M (default)/12M
	Shutter: Auto (default), 30, 25, 20, 15, 13, 10, 9, 8, 7, 6, 5, 4, 3, 2.5, 1.6, 1.3, 1, 1/1.25, 1/1.67, 1/2, 1/2.5, 1/3, 1/5, 1/6.25, 1/8, 1/10, 1/12.5, 1/15, 1/24, 1/25, 1/30, 1/40, 1/50, 1/60, 1/80, 1/100, 1/120, 1/160, 1/200, 1/240, 1/320, 1/400, 1/500, 1/640, 1/800, 1/1000, 1/1250, 1/1600, 1/2000, 1/2500, 1/3200, 1/4000, 1/5000, 1/6400, 1/8000
	Photo Timer: Off (default)/3 Sec/5 Sec/10 Sec
	Burst: Off (default)/3/5/10
Time Lapse Photo Mode	Resolution: 48M (default)/12M
	Interval: 3s/5s (default)/10s/15s/30s/1m/2m



6. Using the AKASO App

(1) Downloading the AKASO App

- ① To sync your camera with the app, download the AKASO app from the App Store (iOS) or Google Play (Android) by searching for “AKASO”.
- ② Access all app features by registering and logging into your AKASO account.



AKASO

(2) Connecting to the AKASO App

Please follow the steps below to connect your camera to the AKASO app.


Note: For a successful connection, first allow the app to access your Location and Local Network.

①




Swipe down to enter the quick menu and tap the Wifi icon to turn on Wifi. The camera will enter Wifi mode.

②

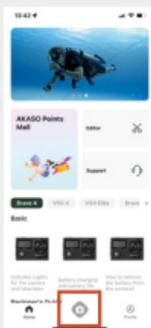



Open the AKASO app on your smartphone, tap the Device icon at the bottom to add your camera model.

③

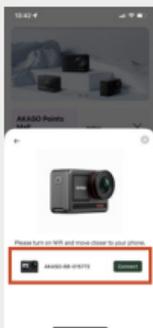

Tap the Brave 8's Wifi SSID to begin connecting the camera's Wifi.



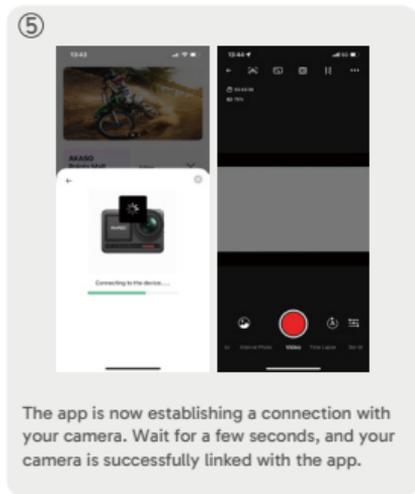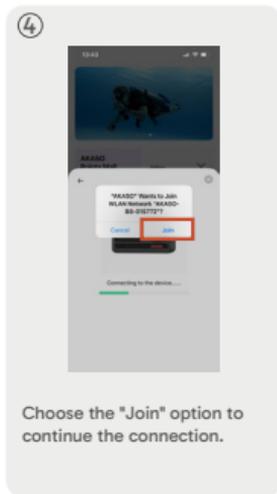

Note:

If you failed to connect to the app, go to your phone's Wifi settings, find the camera's Wifi SSID and tap on it, then enter the displayed password to connect. Once connected, go back to the app; The screenshots and steps above are for your reference only.

(3) Features of the AKASO App

- ① View the camera's status on your phone.
- ② Remotely control the camera with your phone.
- ③ Preview videos and photos stored on the SD card.
- ④ Edit or share videos or photos captured by your camera.
- ⑤ Update the camera's firmware.

Tips:

- ① Ensure the camera's Wifi is active before connecting to the AKASO app.
- ② The camera cannot be operated in Wifi mode. Exiting the Wifi screen disconnects the camera Wifi automatically.

7. Remote Control

With the camera connected to the included remote, you can remotely control the camera to take photos or record videos.

To use this feature, simply enable the remote control setting under Settings by tapping the slider switch.



Photo Button:

Press to start taking a photo.

Indicators

Video Button:

Press to start or stop video recording.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- CR2032



e) DC 3V

f) Non-rechargeable batteries are not to be recharged.

g) Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating 60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

h) Ensure the batteries are installed correctly according to polarity (+ and -).

Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

8. Using Voice Control

Voice Control offers hands-free operation using supported voice commands. With Voice Control enabled, you can issue any supported voice command to the camera. The camera will respond to the given voice commands and execute various functions.

To use this feature, simply tap the Voice Control icon on the quick menu. Check all the supported voice commands below:

No.	Voice Commands	Descriptions
1	AKASO Video Start	Brave 8 action camera starts recording video.
2	AKASO Stop Video	Brave 8 action camera stops recording video.
3	AKASO Take Photo	Brave 8 action camera takes a photo.
4	AKASO Power Off	Brave 8 action camera shuts down.

Tips:

- ① Speak clearly and naturally at a normal speed. There is no need to slow down.
- ② Emphasize the end of the command.
- ③ Performance might vary with distance, environmental noise, and wind. Ensure the device is kept clean and clear of debris.
- ④ Voice commands are most effective within 3 meters.



9. Mounting Your Brave 8 Action Camera

Enhance your user experience by mounting the camera to various gear like helmets and more. Here's a quick guide.

1. Place the Brave 8 action camera inside the camera frame before mounting onto any gear.



2. Slide the camera into any compatible mounts, such as the Buckle Mount.



3. Mount the camera onto a helmet using these accessories:



4. Or:



5. Mount the camera onto a handlebar using these accessories:



Note: If you plan a deep dive, securely install the camera onto a waterproof housing (sold separately) to prevent it from getting soaked.

10. Specifications

Product Name	4K Versatile Brave 8 Action Camera
Product Model	Brave 8
Product Size	64×35.7×45.5mm
Net Weight	112 g
Material	Plastic, silicone, glass
Battery Capacity	1550mAh
Runtime	90 minutes Note: The actual battery life may vary based on the environment and usage.
Standby Time	220 minutes
Wireless Network	RF2.4G+Wifi 2.4GHz



11. Contact Us

 (888) 466-9222 (US)

 cs@akasotech.com

 www.akasotech.com

For any inquiries about AKASO products, please feel free to contact us.
We will respond within 24 hours.

