

OPERATION MANUAL

FBF12

Bull floater



FOREWARD

- ◇ For your own safety and protection from bodily injuries, carefully read, understand and follow the safety instructions in this manual.
- ◇ Please operate and maintain your machine in accordance with the instructions in this manual.
- ◇ Defective machine parts are to be replaced as soon as possible.
- ◇ Keep this owner's manual handy, so you can refer to it at any time.
- ◇ No part of this publication may be reproduced without written permission.
- ◇ We expressly reserve the right to technical modifications- even without express due notice - which aim at improving our machines or their safety standards.

APPLICATION

Bull floater are widely used in concrete floor, cement floor, dam construction, with high quality, good effect, fast speed, high efficiency, reduce labor intensity, mainly applicable to cement concrete surface leveling; hand-held pavement level, slurry scraping flat finishing manual grinding leveling.

SPECIFICATION

Engine: manual

Blade thickness:20mm

Blade length:1.2m(can do customize)

Connector: Turbine

Handle length: 1.8m

Handle quantity: 3pcs

SAFETY PRECAUTIONS

1. Before starting operation, the operator has to check that all control and safety devices function properly.
2. **NEVER** allow anyone to operate this equipment without proper training. People operating this equipment must be familiar with the risks and hazards associated with it.
3. **NEVER** touch the engine or muffler while the engine is on or immediately after it has been turned off. These areas get hot and may cause burns.
4. **NEVER** operate this machine in applications for which it is not intended.
5. **ALWAYS** wear protective clothing appropriate to the job site when operating equipment.
6. **ALWAYS** remain aware of moving parts and keep hands, feet, and loose clothing away from the moving parts of the machine.
7. **ALWAYS** operate the machine with all safety devices and guards in place and in working order.

SERVICE SAFETY

Warning! Poorly maintained machines can become a safety hazard! In order for the machine to operate safely and properly over a long period of time, periodic maintenance and occasional repairs are necessary.

1. **DO NOT** attempt to clean or service the machine while it is running. Rotating parts can cause severe injury.
2. **ALWAYS** keep the machine clean and labels legible. Replace all missing and hard-to-read labels. Labels provide important operating instructions and warn of dangers and hazards.

3. **ALWAYS** check all external fasteners at regular intervals.
4. **ALWAYS** handle blades carefully. The blades can develop sharp edges which can cause serious cuts.

OPERATION**BEFORE STARTING & OPERATING**

- ◇ REMEMBER! It is the owner's responsibility to communicate information on the safe use and proper operation of this unit to the operators.
- ◇ Review ALL of the Safety Precautions listed on page 2 of this manual.
- ◇ Familiarize yourself with the operation of the machine and confirm that all controls function properly.
- ◇ Know how to STOP the machine in case of an emergency.
- ◇ Make sure hands, feet, and clothing are at a safe distance from any moving parts.

Operation:

According to the construction situation, the bull floater machines can be constructed more than 10 meters wide road surface, also it is easy to carry.

- 1, the use of magnesium alloy material is one-third lighter than aluminum alloy, lighter during construction.
- 2, the bottom of the swab using an arc design, more balanced construction and can prevent digging mortar.
- 3, you can rotate the large smear handle left and right, so that the front or rear section of the large smear blade to adjust a certain angle.
- 4, with 4 mounting holes, suitable for turbine support and threaded bracket.
- 5, ingenious handle design, can be quickly take apart and assembled.
- 6, easy to operate, convenient and practical

Produced By ChangGe Fasta Machinery Manufacturing Co.,Ltd

Dear Customer,

Thanks for choosing FASTA machine.

To ensure the safety and proper use of the machine, please read the instruction book carefully before use.

Also, please fill this card and save it for warranty use.

Buyer Name		Purchase Time	
Tel		Contact Person	
Address			
Product Name	Bull floater		
MODEL	FBF12		
Motor Model			
Note			