















































































 



Attention: This flyer is an updated version of the LED Feedback. Please use this instead of feedback listed in the instructions

OVERALL LED FEEDBACK

LED Light	Radio Programming Section	Vehicle Programming Section
Solid Green	Pass	Pass
Slow Red Flash	Fail	Pass
Slow Green Flash	Pass	Fail
Solid Red	Fail	Fail

RADIO LED FEEDBACK

RADIO		LED PATTERN	KEYNOTES (REFERENCE BELOW)
Pioneer/Jensen	G		
JVC	R		
KENWOOD	GG	 	
SONY/DUAL	GR	 	
Reserved for future use	RG	 	
ALPINE	RR	 	
ALPINE (type 2)	GGG	  	
AXXERA	GGR	  	
AXXERA (type 2)	GRG	  	
MAGNADYNE	GRR	  	
BOSS	RGG	  	
Reserved for future use	RGR	  	
CLARION (type 1)	RRG	  	
CLARION (type 2)	RRR	  	
Reserved for future use	GGGG	   	
Reserved for future use	GGGR	   	
Reserved for future use	GGRG	   	
Reserved for future use	GRRR	   	
Reserved for future use	GRGG	   	
Reserved for future use	GRGR	   	
Resistive Radio #1	GRRG	   	
Resistive Radio #2	GRRR	   	
Resistive Radio #3	RGGG	   	
Resistive Radio #4	RGGR	   	
Resistive Radio #5	RGRG	   	
Resistive Radio #6	RGRR	   	

- 1) If the LED pattern shows **JVC**, change the radio type to Kenwood. Refer to the Changing Radio Type document.
- 2) If the LED pattern shows **Alpine**, but an **Alpine** radio isn't installed, make sure the 3.5mm jack is plugged into the radio.
- 3) If no SWC, change the radio type to the opposite radio type. Refer to the **Changing Radio Type** document
- 4) **AX-SWC-PARROT** required (sold separately). The software in the radio must be rev. 2.1.4 or higher.