



Changing the Radio output type
for your Interface.

Radio Brand	Radio Number
Pioneer / Jensen	1
Boss (type 1) / Dual / Sony	2
Kenwood	3
JVC	4
Alpine	5
Boss (type 2)	6
Clarion (type 1)	7
Clarion (type 2)	8
Boss (type 3)	9
Insane Audio	10
Magnadyne	11

Radio Brand	Radio Number
Visteon / Boss (type 4)	12
JBL	13
Eclipse (type 1)	14
Eclipse (type 2)	15
Philips	16
XITE	17
Parrot	18
Valor	19
LG	20
Kicker	21
Axxera	22

Attention! If more than 20 seconds elapses between steps, the procedure will abort, and the light in the interface will go out. The interface may not function properly and may need to be reset and reprogrammed.

1. Turn the radio off.
2. Cycle the key off, then back on.
3. Wait until the interface's light flashes **Green** one time then goes out.
4. Press and **hold** the Volume Down button on the steering wheel until the interface's light turns solid **Red**, then release. The light will then go out indicating that the interface is in Changing Radio Type mode.
5. Reference the Radio Legend for the radio number preferred.
6. Press and **hold** the Volume Up button on the steering wheel until the interface's light turns solid **Red**, then release. Radio number 1 has now been programmed. Repeat this step for the desired radio.
7. Once the desired radio has been selected, press and **hold** the Volume Down button on the steering wheel until the interface's light turns solid **Red**. The light will remain solid **Red** for 3 seconds while it stores the new radio information. After the light goes out, turn the radio on and test the steering control wheel controls.