Import

The following check and precautions r

- Determine cause of original cluto corrected. If oil is present on cluto unit.
- Check splines on transmission inp by hand gently to check fit. Disc sh
 - 3) Remove ALL oil or grease from fri
 and dry. Also clean input shaft spli
 - and dry. Also clean input shaft spli
 To insure proper operation, friction
 be smooth and straight.
 - 5) If throw-out bearing is worn, replace6) Closely inspect pilot bearing or but
- Replace it if any doubts.
- Use clutch alignment tool to insure