



B.J. Smith (Owner) (435) 752-3838

office@canyonlandscaping.com

Trevor Davis (Design Manager) (435) 232-3585

trevor@canyonlandscaping.com

This packet is provided to give information to properly care for your Landscape Lighting in your landscape that has been installed.

Timers

- Landscape lighting can be adjusted throughout the year due to changing daylight hours by adjusting the timer.
- Set current time in the center window, and on/off times as shown below.



(Simply pull up tabs for the ON time - leave tabs down for OFF) (Set green tab to turn on lights and red tab to turn off light)

Landscape Lighting Fixtures and Bulbs

- With time the light fixtures might be knocked loose from their ground anchor. If this happens place the fixture upright and repack the dirt around the anchor.
- Normal life expectancy of a light bulb is one to two years.
- To change the bulb, unscrew the screw to access the light bulb area.



(Unscrew at the base underneath the light)
(Bulb replacement – 35 Watt bulb)



(Unscrew the top light saucer)
(Bulb replacement – 16.25 Watt bulb)

- Never touch the new light bulb with your bare hands, using gloves is recommended, the oil from your skin will cause the glass to become more brittle and burn out sooner.
- Replacement bulbs and fixtures can be purchased at Sprinkler Supply @ 2000 N 92 E.