

Norand Mono MK2 Update procedure

Getting started

To update Mono, you need :

- Mono MK2
- A MicroSD card reader
- A computer (any OS will do) connected to the internet
- The “mono_mk2_update.bin” file

DISCONNECT MONO AUDIO OUTPUT : The bootloader might send junk data to the analog engine, resulting in a very loud signal, you could destroy your equipment !

There is absolutely no risk of bricking your unit while updating, and it is highly recommended to keep your unit up to date.

Updating Mono

- Power off your Mono and remove the SD Card
- Insert the SD Card in your reader, it will appear as a storing device on your computer. Simply drag and drop the “mono_mk2_update.bin” file in the SD Card, replacing the existing one if there is one.
- Insert the SD Card back into Mono.
- Boot Mono while holding [PATTERN] + [RUN]
- It will take about 10 seconds to update, and then boot normally