



REMOVING, MEASURING, INSTALLING & ADJUSTING CASTERS MADE EASY!

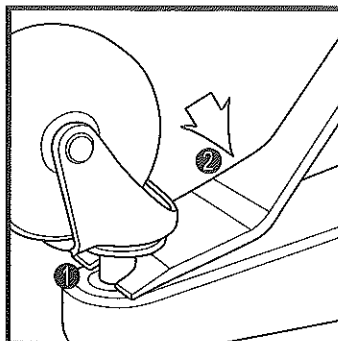

REMOVE "PUSH-IN" STEM CASTERS . . .

Turn the chair upside down and:


- ① Insert the pry-bar end between the leg of the chair and the collar or raceway as illustrated.
- ② Using the leg of the chair as a brace for the tool, push down on the handle to snap out the old caster.

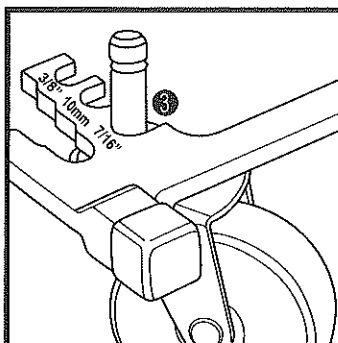

MEASURING STEM DIAMETERS . . .

Determine the stem diameter simply:


- ③ Insert the old caster stem into the "U" shaped opening of the corresponding size. Stem should fit snugly into opening. Stem gauge measures sizes 3/8", 7/16" and 10mm, quickly and accurately.

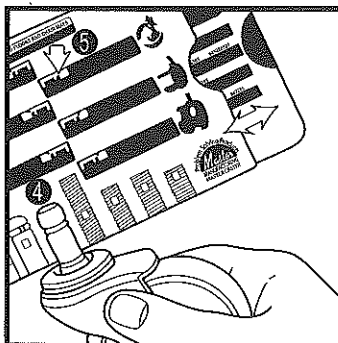

IDENTIFYING STEM & CASTER STYLES . . .

The Selector-Slide helps you determine the proper stem length and style. After identifying the diameter:

- ④ Match up the old caster stem to the proper illustration for length as shown.
- ⑤ Select the desired style of Master Replacement Casters by following the instructions on the slide.

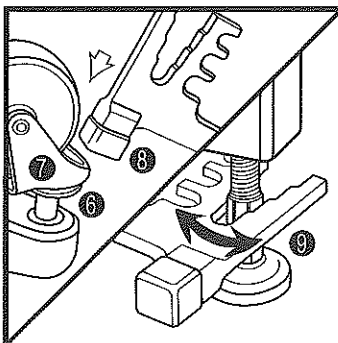

INSTALLING "PUSH-IN" CASTERS . . .

- ⑥ Insert the stem into the the chair base opening.
- ⑦ Push straight down on the caster and wedge into place.
- ⑧ Hit caster body with the "hammer" end of the tool to firmly seat the caster in place.

ADJUSTING "SCREW-IN" CASTERS & LEVELING GLIDES . . .

Use the "wrench" opening to: Remove, loosen and tighten screw-in replacement casters.

- ⑨ Level hex nut glides on partitions, copier stands, computer stations, desks, and other office equipment.

This 4-in-one tool makes it fast, easy and convenient!



Master Mfg.Co., Inc. • Master Caster Company
9200 Inman Avenue • Cleveland, Ohio 44105
1-800-323-5513 • www.mastermfgco.com