
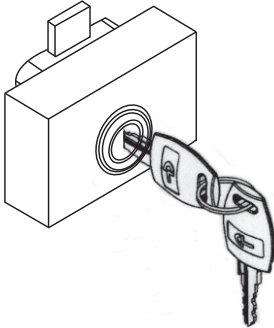


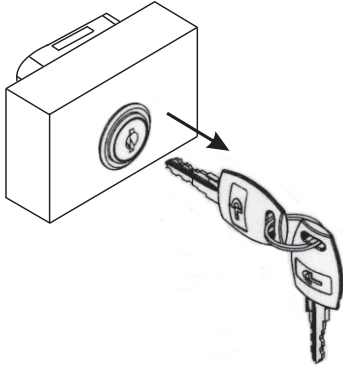
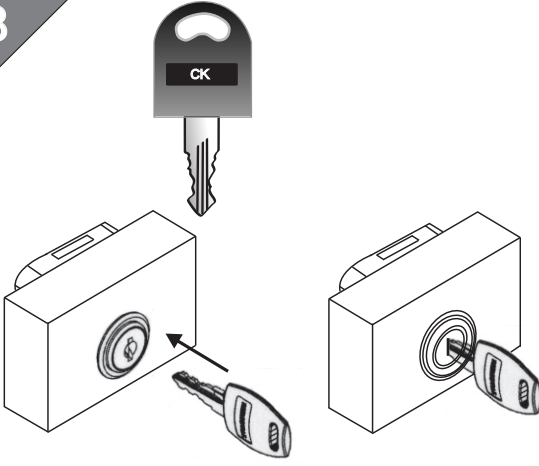
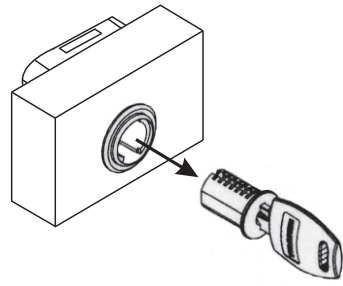
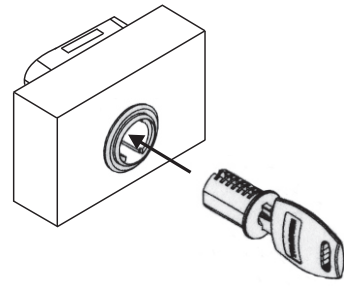


REPLACEMENT OF CYLINDER CORE
Cambio de cerradura

<p>A</p>	<p>1</p>	 Core removal key	<p>1</p>  <ul style="list-style-type: none"> • LOCK IN LOCKED POSITION. • Cerradura en posición de cerrado.
<p>B</p>	<p>1</p>	 Lock core	
<p>C</p>	<p>4</p>	 Lock key	
<p>2</p>  <ul style="list-style-type: none"> • PULL THE KEY OUT FROM THE LOCK. • Retire la llave de la cerradura. 			<p>3</p>  <ul style="list-style-type: none"> • INSERT THE REMOVAL KEY INTO THE LOCK. • Inserte la llave maestra.
<p>4</p>  <ul style="list-style-type: none"> • PULL THE CYLINDER CORE OUT. • Tire la cerradura hacia afuera. 			<p>5</p>  <ul style="list-style-type: none"> • INSERT NEW CYLINDER CORE USING REMOVAL KEY. • Inserte la nueva cerradura.